










连供墨盒芯片对照表(一)

(CISS Cartridge Chip List)

产品名称/类别 Product	墨盒型号 Cartridge	适用 Epson 打印机简述 For Epson Printers
4色连体芯片 ① (4-C CISS Chip) 	T0681	CX5000/CX6000/CX7000F/CX8400/CX9400Fax
	T0691	CX5000/CX6000/CX7400/CX8400/CX9400Fax
	T0711	D78/D92/DX4000/DX4400/DX7000F/DX8450/DX9400F
	T0731	C79/C90/CX3900/CX5500/CX6900F/CX7300/CX9300F
	T0901	C92/CX5600
	T0921	C91/CX4300
4色连体芯片 ② (4-C CISS Chip) 	T0681	CX5000/CX6000/CX7000F/CX8400/CX9400Fax NX215/NX300/NX400/NX415/NX510/NX515 WorkForce 40/500/600/610/615
	T0691	CX5000/CX6000/CX7400/CX8400/CX9400Fax NX100/NX110/NX115/NX400/NX415/NX510/NX515 WorkForce 40/500/600/610/615
	T0711	D78/D92/DX4000/DX7000F/DX8450/DX9400F S20/S21/SX100/SX215/SX400/SX415/SX510W/SX515W B40W/BX300F/BX600FW/BX610FW/SX610FW
	T1001	B40W/SX600FW/BX600FW/BX610FW/SX510W/SX610FW
	T1091	ME30/ME300/Office 600F/700FW/510
	ICBK46	PX-101/401A/501A/A720/A740/V780
4色连体芯片 ③ (4-C CISS Chip) 	T0731N	C79/C90/CX3900/CX5500/CX6900F/CX7300/CX9300F T10/T20/T21/TX100/TX111/TX210/TX213/TX400/TX409 T40W/TX300F/TX600FW/TX610FW/TX550W
	T0901N	C92/CX5600/T20/T21/TX100/TX110 南美地区 (South America)
	T0921N	C91/CX4300/T26/T27/TX106/TX109/TX117/TX119
	T1031	T40W/TX550W/TX600FW/TX610FW
	T1171	T23/T24/TX105/TX115
5色连体芯片 ① (5-C CISS Chip) 	T0681	C120
	T0711	D120
	T0731	C110
5色连体芯片 ② (5-C CISS Chip) 	T0681	C120/WorkForce30/310/315/1100
	T0711	D120/BX310FN
	T0711H	D120/BX310FN/B1100
	T1191	ME Office70/650FN/1100
5色连体芯片 ③ (5-C CISS Chip) 	T0731N	C110/T30/TX510FN
	T0731HN	C110/T30/TX510FN/T1100
	T1151	T33

连供墨盒芯片对照表(二)

(CISS Cartridge Chip List)

产品名称/类别 Product	墨盒型号 Cartridge	适用 Epson 打印机简述 For Epson Printers
6色连体芯片 ① (6-C CISS Chip) 	T0771	R260/R280/R380/RX580/RX595/RX680
	T0791	Photo 1400
	T0801	R265/R285/360/RX560/RX585/RX685
	T0811	1410/R270/R290/R295/R390/RX590/RX610/RX615/RX690
	T0821	R270/R290/R295/R390/RX590/RX610/RX615/RX690
	T0851	Photo 1390
6色连体芯片 ② (6-C CISS Chip) 	T0771	Artisan 50 R260/R280/R380/RX580/RX595/RX680
	T0791	P50/PX650/PX700W/PX800FW/PX710W/PX810FW Photo 1400
	T0801	P50/PX650/PX700W/PX800FW/PX710W/PX810FW R265/R285/360/RX560/RX585/RX685
	ICBK50	EPSON EP-301/801A/901A/901F/A820/A840/G860/T960
6色连体芯片 ③ (6-C CISS Chip) 	T0811N	T50/T59/TX700W/TX800FW/TX650//TX710W/TX810FW R270/R290/R295/R390/RX590/RX610/RX615/RX690/1410
	T0821N	T50/T59/TX700W/TX800FW/TX650//TX710W/TX810FW R270/R290/R295/R390/RX590/RX610/RX615/RX690
	T0851N	Photo 1390/T60
	T0981	Artisan 700/800/710/810
九触点永久性 独立复位芯片 (CISS Chip & Independent Reset Chip)	T0681~T0684	CX5000/CX8400/NX215/NX515/WorkForce40/615
	T0691~T0694	CX5000/CX8400/NX115/NX515/WorkForce40/615
	T0711~T0714	D92/D120/DX8400/S21/SX515W/B40/BX610FW
	T0731~T0734	C90/C110/CX3900/CX5500/CX6900F/CX7300/CX9300F
	T0901~T0904	C92/CX5600
	T0921~T0924	C91/CX4300
	T1091~T1094	ME30/ME300/600F/700FW/510/650FN
	T0771~T0776	R260/R280/R380/RX580/RX595/RX680/ Artisan 50
	T0791~T0796	1400/P50/PX650/PX700W/PX800FW/PX710W/PX810FW
	T0801~T0806	P50/PX650/PX700W/PX800FW/PX710W/PX810FW R265/R285/360/RX560/RX585/RX685
	T0811~T0816	1410/R270/R290/R295/R390/RX590/RX610/RX615/RX690
	T0821~T0826	R270/R290/R295/R390/RX590/RX610/RX615/RX690
	T0851~T0856	1390
T0870~T0874 T0877~T0879	R1900	
七触点永久性 独立复位芯片 (CISS Chip & Independent Reset Chip)	T007~T009	Photo 780/790/1290
	T026~T0541	830/950/R2100/R2400 C58/C59/C63/C65/C82/C84/C88/D88 R210/R220/R230/R250/R800/R1800 ME1+/ME200/CX2900

连供墨盒芯片对照表(三)
(CISS Cartridge Chip List)

产品名称/类别 Product	墨盒型号 Cartridge	适用 Hp 打印机简述 For Hp Printers
HP 永久性芯片 (独立复位) HP (CISS Chip & Independent Reset Chip)	HP02#	Photosmart 8250/C6280/C7288/C8180/D7360/D7460
	HP10#	Inkjet 1000/1100/2300/Officejet Pro K850/9130
	HP11#	Inkjet 1100/2200/Officejet Pro K850
	HP12#	Inkjet 3000/3000n/3000dtn
	HP13#	Inkjet 1000/Officejet Pro K850
	HP14#	Officejet D125xi/D145/7110/7130/7140
	HP18#	Officejet Pro K5300/K5400/K8600/L7380/7590
	HP80#	Designjet 1050c/1055cm Printer
	HP81#	Designjet 5000/5500/5500PS
	HP82#	Designjet 10ps/500 Plus/50ps/800ps
	HP83#	Designjet 5000 series printers
	HP84#	Designjet 10ps/120nr/20ps/50ps/90r
	HP85#	Designjet 130/130nr/90r
	HP88#	Officejet Pro K5400/K5400dtn/K8600/L7680/K550
	HP177#	Photosmart 8253/C6280/C7180/C8180/D7160/D7360
	HP363#	Photosmart 8230/C7280/C8180/D7260/D7360/D7460
HP801#	Photosmart 8253/C6188/C6288/C8188/D7268/D7368	