




Simple Type Car Alarm System

Operating Instruction(JJ-CA-05)




Arming

Short press on , lock the door and enter into Acousto-optics guard state




Disarming

Short press on , release the guard state and unlock the door.




Silence


Short press on , lock the door and enter into soundless guard state




Searching

Short press on , light flashing for 15 seconds and siren sounding loudly at the same time

1.Acousto-optics Alarm

Short press on , the door closed, enter into Acousto-optics alarm state after 1s.

2.Soundless Alarm


Short press on , the door closed, enter into soundless alarm state after 1s

3.Trigger Guard






Guard State	Trigger Type	
	Vibration trigger	Switch trigger (door、ACC、footbrake)
Acousto-optics Alarm	Siren sounds and lights flashing for 6 seconds at the same time.	Siren sounds and lights flashing for 15 seconds at the same time.
Soundless Alarm	Light flashing for 15 seconds	Siren sounds and lights flashing for 15 seconds at the same time



4. Release or back to the guard state automatically

Short press on  to release the guard state, the door unlocks. After released the guard state .the door hasn't been opened in 30s, the system take this as wrong released. It will be back to the former guard state.

5. Emergency call(emergency alarm)

Being robbed in driving,short press  or ,after the light on,engine is cut. the lights will flash immediately, The siren sounds periodically, to react as a deterrent and Call, press onto  stop alarm

6.Helping

In driving, short press , siren sounding loudly for 15 seconds(it is soundless on silence state), the lights flash at the same time. Press  to stop.

7. Warning of closing the door

After set up the Alarm system, the siren sounds continuously after 2 seconds,to show the door wasn't closed well, the driver should relieve the system, close well the door, and set up the system again.

8. Door lock or unlock automatically

Step on the foot brake after open the ACC, the system will lock the door automatically; when stop and flameout, the door will unlock automatically.

9. Searching

Short press on  once, siren sounding for 15 seconds(it is soundless on



silence state), the lights flashing at the same time to show where the car is.

10. Triggering memory

After relieved the guard state, open the door. The lights flashing continuously, it will be off after 1 minute, to show the car has been triggered.

11. Power-cut memory

After the alarm system suffers power cut, no matter how long it is, it will back to the former guard state after power on for 5s.

12. Parking lot warning

Open the door after parking, the lights flash at once to show the coming car paying attention to avoid the accident.

13. LED warning light

In guarding, LED flashes once, stop for 1s.

After vibrated trigger: LED flashes twice, stop for 1s, then flashes 3 times, stop 1s, and so on

After switch trigger: LED flashing continuously...



14. Learning code

open the door, turn ACC to ON, step on the footbrake and long press Emergency relieving at the same time, the system will be disarmed in 7 seconds with one sound of the siren. then it will enter into alarm state when turn off the ACC.

15. Emergency relieving

Open the door, turn on ACC, step on the footbrake, and long press Emergency relieving at the same time, siren sound once means relieve after 7s enter into alarm state.

16. adjust sensitivity

Long press on  +  at the same time, siren sound once means one sensitivity level, siren sound twice means two sensitivity level, siren sound three times means three sensitivity level, thereinto, one sensitivity level is least sensitivity, third sensitivity level is the most sensitivity. (note: External vibration sensor is void)



Picture



Install Instruction

