

THE FLOWCHART OF REMOTE CONTROL DUPLICATOR

 


1. Function Description:




2. Remove the existing code:

Press Arming and Disarming at the same time, LED starts flashing steadily after 5 seconds, release both buttons and the code will be removed successfully.

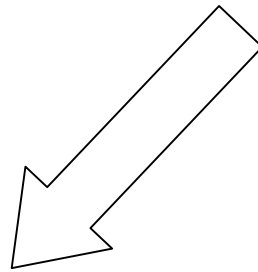

 
4. Resume: When remove the code carelessly, press Starting and Searching at the same time, LED starts flashing steadily after 5 seconds, release both buttons and the code will be resumed successfully.



3. Duplicate code: Put the Original Transmitter (the blue one) and Duplicator as close as possible, Press Arming of both Duplicator and Original Transmitter at the same time, LED starts flashing steadily after 3 seconds, release both buttons and the code will be duplicated successfully. Repeat the above operation to duplicate code of other buttons.



 Inside Parts of the Duplicator

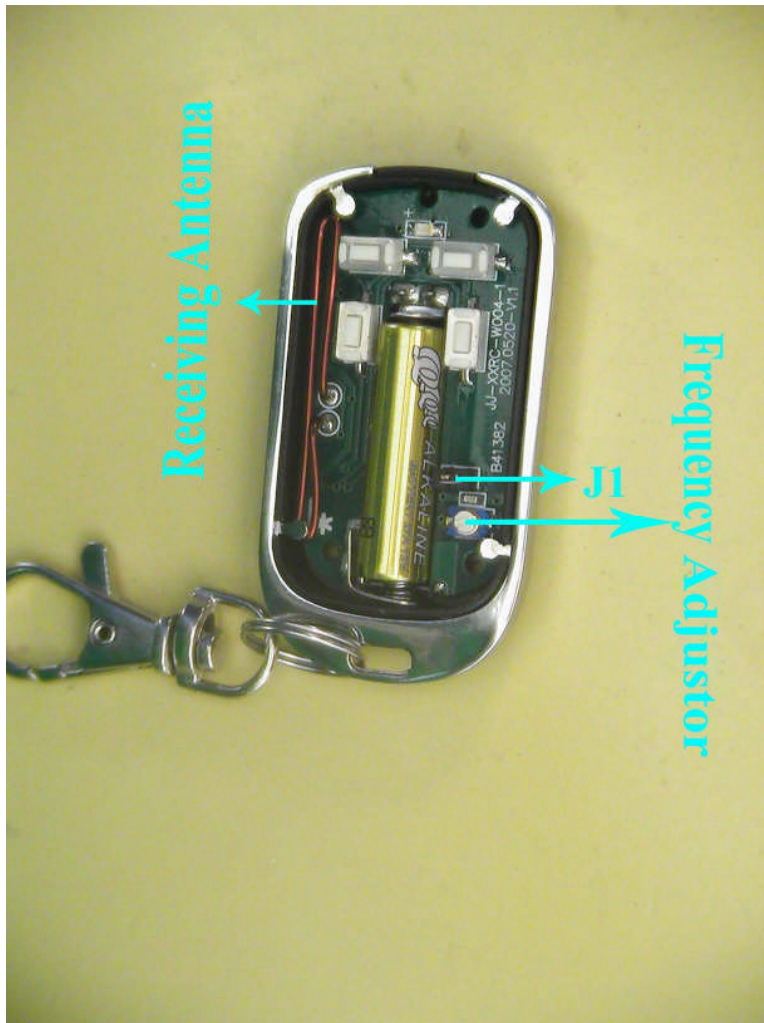

1. J1—Partial Frequency Selection

In the state of short circuit, Frequency range is:

270M—350MHz

In the state of circuit passband, Frequency range is:

340M—440MHz

2. Frequency Adjustor

Using a special-purpose pen to adjust the frequency spot which you need.