



聯合創盈

Createwin Technology CO., Limited

Add: #104,32 Building,Xianglongsanqu, Sanbu Area,  
Kaiping City,Guangdong Province, China 529300  
Tel: 0086-750-2988 616 Fax:0086-750-2393 959  
[Email/MSN:winwinannayu@hotmail.com](mailto:winwinannayu@hotmail.com)  
[Yahoo:winwinannayu@yahoo.cn](mailto:winwinannayu@yahoo.cn)  
[Skype:creawintec](https://www.skype.com/creawintec)  
[www.createwt.com](http://www.createwt.com)

## Continuous Ink Supply System & Refillable Ink Cartridge Model List

Color	For Epson Series Printer	Cartridge Number	Note
Four Connected	Stylus Color 900	T003-T005	
	Stylus Photo C20/C40/ Stylus Color 480/580	T013-T014	
	Stylus C41SX/C41UX/C43UX/C43SX/C45	T038-T039	
	C42/C44/C46	T036-T037	
	C48	T066-T067	
	Stylus C60/C61/CX3100	T028-T029	
	C62/CX3200	T040-T041	
	Stylus Color 680/680T/685/777/777i	T017-T018	
	Stylus ME/ME1+/ME 100	T057-T058	
	740/760/860/1160	S020189/S020191	
800/850/1520	S020108/S020089		
Four Individual	C58/CX2800/ME200/ME 2	T0761-T0764	
	C59/CX2900/CX2905	T0751-T0754	
	Stylus C63/C65/CX3500	T0461 T0472-T0474	
	C64/C66/C84/C86/CX6400/CX6600	T0441-T0444	
	Stylus C67/CX3700/CX4700	T0631-T0634	
	Stylus C70/C80/ CX5100	T0321-T0324	
	Stylus C79/C90/C92/CX3900/CX5500/CX5600/CX5505	T0731-T0734 CMYK	
	CX7300/CX4900/CX5900/CX4905/CX6900F	T0911-T0914	
	C82/CX5200/CX5400	T0321 T0422-T0424	
	C88/CX3800/CX4800	T0601-T0604	
	C91/CX4300	T0921-T0924	
	Stylus CX5000/CX6000/CX7000F/NX100/NX200/NX300/NX400	T0691-T0694	
	D68/D88	T0611-T0614	
	D92/D78/DX4000/DX4400/DX4050/DX5000/DX5050	T0711-T0714	
	DX6000/DX6050/DX7000F		
	Stylus R250/ RX430/ RX530	T0561-T0564	
RX420/RX425/RX520	T0551-T0554		
ME 30/ ME OFFICE 70/ME 300	T1091-T1094		
T10/T11/T20/T23/TX110/TX210/TX200/TX400	T0731N-T0734N		
Five	T30/T33	T0731N-T0734N 2 Black	
	Stylus C110	T0731-T0734 2 Black	
Six Connected	Stylus Photo 810/830/830U/925	T026-T027	
	Stylus Photo 790/870/875DC/890/895/915/1270/1290	T007-T008	
	Stylus Photo 700/710/720/750/EX/EX2/EX3/MJ- 500/IP-100	T050/T053	

Six Individual	Stylus R200/R220/R300/R320/RX500/RX600	T0481-T0486	
	Stylus R210/R230/R310/R350/RX630	T0491-T0496	
	R260/R380/RX580/R280/RX595	T0781-T0786 T0771-T0776	
	R265/R360/RX560	T0801-T0806	
	Stylus R270/R290/R390/RX590/RX690	T0821-T0826 T0811-T0816	
	<a href="#">TX700W/TX800FW</a>	<a href="#">T1121-T1126 82N</a>	
	RX700	T5591-T5596	
	Stylus Photo I390	T0851-T0856	
	Stylus Photo I400	T0791-T0796	
	Stylus Photo I410	T0811-T0816	
Seven	Stylus Photo 950/960	T0331-T0336	
	Stylus Photo 2100/2200	T0341-T0347	
Eight	Stylus Photo R800/R1800/	T0540-T0544 T0547-T0549	
	Stylus Photo R2400	T0591-T0599	
	Stylus Photo R1900	T0870-T0874 T0877-T0879	
	R2880	T0961-T0968	
<b>Color</b>	<b>For Canon Series Printer</b>	<b>Cartridge Number</b>	<b>Note</b>
Four	iP2000/iP1500/iP1000/i905d/i990/i475d/S200/S300/MP110	BCI 24 BK/24C	
	MP130/MP360/MP390/MPC 190S		
	S400/S450/S4500/MP780/iP3000/i865/MP700	PGI 5 BK / CLI 8 C/M/Y	
	PIXMA iX4000/iX5000/iP3300/iP3500/MP 510/MP520/MX700	PGI 5 BK / CLI 8 C/M/Y	
Five	PIXMA iP4200/iP4300/iP4500/ip5200/iP5200r/MP500	PGI 5 BK / CLI 8 BK/C/M/Y	
	MP530/MP600/MP610/MP800/MP800R/MP810/MP830/MX850		
	<a href="#">PIXMA iP3680/iP4680</a>	<a href="#">PGI-820/CLI-821</a>	
	<a href="#">PIXMA iP3600/iP4600</a>	<a href="#">PGI-220/CLI-221</a>	
	<a href="#">PIXMA iP3600/iP4600</a>	<a href="#">PGI-520/CLI-521</a>	
Six	PIXMA iP 6600/iP6600D/ iP6700D	CLI 8 BK/C/M/Y/PC/PM	
Seven	PIXMA MP 950/MP960/MP970	PGI 5 BK CLI 8 BK/C/M/Y/PC/PM	
Eight	PIXMA Pro 9000	CLI 8 BK/C/M/Y/PC/PM/G/R	
<b>Color</b>	<b>For Brother Series Printer</b>	<b>Cartridge Number</b>	<b>Note</b>
Four	<a href="#">MFC-6490CW/MFC-6890CDW/DCP-585CW/DCP-6690CW/DCP-3850</a>	<a href="#">LC67/LC990 BK C/M/Y</a>	
	<a href="#">MFC-490CW/DCP-185C/MFC-5490CN/MFC-5890CN</a>		
	<a href="#">DCP-145C/DCP-165C/MFC-290C/MFC-250C</a>	<a href="#">LC38/LC980 BK C/M.Y</a>	
	DCP-130C/DCP-330C/DCP-540CN/MFC-240C/MFC-440CN	LC37/LC57/LC960 BK C/M/Y	
	MFC-665CW/MFC-5860CN/MFC-230C/DCP-155C/Fax-2480C/MFC-8		
MFC-3360C/MFC-5460CN/MFC-685CW/DCP-135C/DCP-150C/DCP-3			
MFC-235C/MFC-260C/DCP-560CN/MFC-265C/MFC-465CN/	LC41/LC950 BK C/M/Y		
DCP-110C/DCP-115C/DCP-120C/MFC-215C/MFC-425CN/FAX-1840C			
MFC-3240C/MFC-5440CN			
<b>Color</b>	<b>For HP Series Printer</b>	<b>Cartridge Number</b>	<b>Note</b>
Four	HP Officejet Pro K5300/K5400/L7300/L7500	C4936A/C4937A/C4938A/C4939A	
	HP Designjet 500/ Designjet 800	C4844A/C4911A/I2A/I3A	
Five	<a href="#">HP D5400/D5460/D5648/C5380/C6380/C309A/B8550/D7560</a>	<a href="#">HP 862/564/364/178</a>	

Six	HP Photosmart 3210/3310/8230/8238/8250	HP D2/363/177
	/D5180/D7160/D7360	C8721/C8771/72/73/74/75
	HP Designjet 120/ Designjet 130	C5016A/C4925A/26A/27A/28A/29A