 


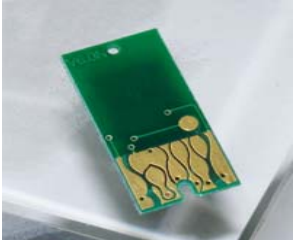

# Apex Inkjet Chip List

 
Date: 2010-5-24

Apex Product code	OEM Product Number	Description	Chip Photo
<b>Epson® 9-pin chips</b>			
AJE-0731N/0732N/0733N/0734N	T0731N/0732N/0733N/0734N	Epson® Stylus T10/T11/T20/T21/T40W Epson® Stylus TX101/TX200/TX110/TX210/TX300F Epson® Stylus C79/CX8300/CX5500	
AJE-0731HN/0732N/0733N/0734N	T0731HN/0732N/0733N/0734N	Epson® Stylus T40W/TX550W/TX410/TX200/TX400	
AJE-0901N/0732N/0733N/0734N	T0901N/0732N/0733N/0734N	Epson® Stylus T20/TX100	
AJE-0911N/0912N/0913N/0914N	T0911N/0912N/0913N/0914N	Epson® Stylus TX101/T21/TX110/TX210 Epson® Stylus C91	
AJE-0921N/0922N/0923N/0924N	T0921N/0922N/0923N/0924N	Epson® Stylus T26/TX106/TX109 Epson® Stylus CX4300/C91	
AJE- 0981/0982/0983/0984/0985/0986	T0981/T0982/0983/0984/0985/0986	Epson® Artisan 600/700/800	
AJE- 0981/0992/0993/0994/0995/0996	T0981/T0992/0993/0994/0995/0996		
AJE-0811N/0812N/0813N/ 0814N/0815N/0816N	T0811N/0812N/0813N/0814N/0815N/0816N	Epson® Stylus Photo TX700/TX800/T50 Epson® Stylus RX615/R270/R290	
AJE-0821N/0822N/0823N/0824N /0825N/0826N	T0821N/0822N/0823N/0824N/0825N/0826N	Epson® Stylus Photo TX700/TX800 Epson® Stylus Photo RX615/R270/R290 Epson® Stylus Photo T50	
AJE-1171/0732N/0733N/0734N	T1171/0732N/0733N/0734N	Epson® Stylus T23/TX105/T24	
AJE-1031/1032/1033/1034	T1031/1032/1033/1034	Epson® Stylus T40W/TX600FW	
AJE-0961/0962/0963/0964/ 0965/0967/0968/0969	T0961/0962/0963/0964/0965/0967/0968/0969	Epson® Stylus 2880	
AJE-0731HN/0731HN/0732N/0733N/0734N	T0731HN/0731HN/0732N/0733N/0734N	Epson® Stylus <b>T30</b>	
AJE-1151/1151/0732N/0733N/0734N	T1151/1151/0732N/0733N/0734N	Epson® Stylus <b>T33</b>	
AJE-0971/0682/0683/0684	T0971/0682/0683/0684	Epson® WorkForce 40/500/600	
AJE-1001/1002/1003/1004	T1001/1002/1003/1004	Epson® Stylus SX600FW/SX510W	
AJE-2131/2132/2133/2134	T2131/2132/2133/2134	Epson® Stylus ME OFFICE 80W/700FW	
AJE-1191/1191/1092/1093/1094	T1191/1191/1092/1093/1094	Epson® <b>ME OFFICE 70</b>	

AJE-1091/1092/1093/1094	T1091/1092/1093/1094	Epson® ME30/ME360 Epson® ME OFFICE 70/ Epson® ME OFFICE 360/80W/700FW
AJE-0691/0692/0693/0694	T0691/0692/0693/0694	Epson® STYLUS CX7400/CX7000F/ <b>C120</b> Epson® STYLUS NX100/NX115/NX200/NX215/NX400 Epson® STYLUS WorkForce 30 Epson® STYLUS WorkForce 500
AJE-0681/0682/0683/0684	T0681/0682/0683/0684	Epson® <b>WorkForce 30/40/500/600</b>
AJE-0711/0712/0713/0714	T0711/0712/0713/0714	Epson® STYLUS D78/D92/ <b>D120</b> /DX7000F/DX5000 Epson® STYLUS S20 Epson® STYLUS SX110/SX200/SX209/SX210/SX400/SX510 Epson® STYLUS BX310F
AJE-0711H/0712/0713/0714	T0711H/0712/0713/0714	Epson® STYLUS <b>D120</b> /SX410/SX510W
AJE-0731/0732/0733/0734	T0731/0732/0733/0734	Epson® STYLUS C79/C90/C92/ <b>C110</b> Epson® STYLUS CX3900/CX4900/CX4905/CX5600/CX5900F/CX6900F
AJE-0731H/0732/0733/0734	T0731H/0732/0733/0734	Epson® STYLUS C110 Epson® STYLUS CX9300F
AJE-0881/882/883/884	T0881/0882/0883/0884	Epson® STYLUS CX4400/CX4450/CX7400 Epson® STYLUS NX200/NX400
AJE-0891/0892/0893/0894	T0891/0892/0893/0894	Epson® Stylus S20 Epson® Stylus SX100/SX105/SX115 Epson® Stylus SX200/SX205/SX400/SX405/SX410 Epson® Stylus SX510W
AJE-0911/912/913/914	T0911/0912/0913/0914	Epson® Stylus C90 Epson® Stylus CX5500/CX5501/CX5510/CX5505
AJE-0901/0732/0733/0734	T0901/0732/0733/0734	Epson® Stylus C90/CX5600
AJE-0921/922/923/924	T0921/0922/0923/0924	Epson® Stylus C91/CX4300
AJE-0771/0772/0773/0774/0775/0776	T0771/0772/0773/0774/0775/ 0776	Epson® Stylus Photo R260/R380/R280 Epson® Stylus Photo RX580/RX680
AJE-0781/0782/0783/0784/0785/0786	T0781/0782/0783/0784/0785/ 0786	Epson® Stylus Photo R260/R380/R280 Epson® Stylus Photo RX580/RX680 Epson® Stylus Photo Artisan50
AJE-0791/0792/0793/0794/0795/0796	T0791/0792/0793/0794/0795/ 0796	Epson® Stylus Photo 1400
AJE-0801/0802/0803/0804/0805/0806	T0801/0802/0803/0804/0805/ 0806	Epson® Stylus Photo R265/R360/R285 Epson® Stylus Photo RX585/RX685 Epson® Stylus Photo P50
AJE-0811/0812/0813/0814/0815/0816	T0811/0812/0813/0814/0815/ 0816	Epson® Stylus Photo R390/RX590/R270 Epson® Stylus photo 1410
AJE-0821/0822/0823/0824 /0825/0826	T0821/0822/0823 /0824/0825/0826	Epson® Stylus R390/R270/R290 Epson® Stylus RX590/RX615



AJE-0851/0852/0853/0854/0855/0856	T0851/0852/0853/0854/0855/0856	Epson® Stylus Photo 1390
AJE-0870/0871/0872/0873/0874/0877/0878/0879	T0870/0871/0872/0873/0874/0877/0878/0879	Epson® Stylus Photo 1900
<b>Epson® Large Format Applications</b>		
AJE-6071/6072/6073/6074/6075/ 6076/6077/6079	T6071/6072/6073/6074/6075/6076/6077/6079	Epson® Stylus Pro 4880 ColorBurst Epson® Stylus Pro 4880 Portrait Edition
AJE-6041/6042/6043/6044/6045/6046/6047/6049/6128	T6041/6042/6043/6044/6045/6046/6047/6049/6128	Epson® Stylus PRO 9880C/7880C
AJE-6061/6062/6063/6064/6065/ 6066/6067/6069	T6061/6062/6063/6064/6065/6066/6067/6069	Epson® Stylus Pro 4880 ColorBurst Epson® Stylus Pro 4880 Portrait Edition(USA)
AJE-6051/6052/6053/6054/6055/ 6056/6057/6059	T6051/6052/6053/6054/6055/6056/6057/6059	Epson® Stylus Pro 4880 ColorBurst Epson® Stylus Pro 4880 Portrait Edition (USA)
AJE-6138/6132/6133/6134	T6138/6132/6133/6134	Epson® Stylus Pro 4450
AJE-6148/6142/6143/6144	T6148/6142/6143/6144	Epson® Stylus Pro 4450
AJE-6118/6112/6113/6114	T6118/6112/6113/6114	Epson® Stylus Pro 7450
AJE-6122/6123/6124	T6122/6123/6124	Epson® Stylus Pro 7450/9450
AJE-6031/6032/6033/6034/6035/ 6036/6037/6039	T6031/6032/6033/6034/6035/6036/6037/6039	Epson® Stylus Pro 7880/7880ColorBust Epson® Stylus Pro 9880/9880 ColorBust
AJE-5801/5802/5803/5804/5805/5806/5807/5808/5809	T5801/5802/5803/5804/5805/5806/5807/5808/5809	Epson® Stylus Pro 3800/3805
AJE-5811/5812/5813/5814/5815/5816/5817/5818/5819	T5811/5812/5813/5814/5815/5816/5817/5818/5819	Epson® Stylus PRO 3800C
AJE-5891/5892/5893/5894/5895/5896/5897/5898/5899	T5891/5892/5893/5894/5895/5896/5897/5898/5899	Epson® Stylus Pro 3850
AJE-499/500/501/502/503/504	T499/500/501/502/503/504	Epson® Stylus Pro 10000/10600(PHOTOGRA)
AJE-511/512/513/514/515/516	T511/512/513/514/515/516	Epson® Stylus Pro 10000CF/10600(ARCHIVAL)
AJE-5431/5432/5433/5434/5435/ 5436/5437	T5431/5432/5433/5434/5435/5436/5437	Epson® Stylus Pro 4000/7600/9600(ULTRACHROME)
AJE-5438	T5438	Epson® Stylus Pro 4000/4400/4800/7600/9600(ULTRACHROME)
AJE-5441/5442/5443/5444/5445/ 5446/5447	T5441/5442/5443/5444/5445/5446/5447	Epson® Stylus Pro 4000/9600(ULTRACHROME)
AJE-5448	T5448	Epson® Stylus Pro 4000/4400/4800/9600(ULTRACHROME)
AJE-5451/5452/5453/5454/ 5455/5456	T5451/5452/5453/5454/5455/5456	Epson® Stylus Pro 7600/9600(ULTRACHROME)
AJE-5491/5492/5493/5494/5495/ 5496/5497/5498	T5491/5492/5493/5494/5495/5496/5497/5498	Epson® Stylus Pro 10600
AJE-5621/5622/5623/5624/5625/ 5626/5627/5629	T5621/5622/5623/5624/5625/5626/5627/5629	Epson® Stylus Pro 7800/9800
AJE-5631/5632/5633/5634/5635/ 5636/5637/5639	T5631/5632/5633/5634/5635/5636/5637/5639	Epson® Stylus Pro 7800/9800
AJE-5641/5642/5643/5644/5645/ 5646/5647/5649	T5641/5642/5643/5644/5645/5646/5647/5649	Epson® Stylus Pro 4800

 
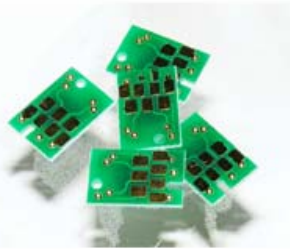 


AJE-5651/5652/5653/5654/5655/ 5656/5657/5659	T5651/5652/5653/5654/5655/5656/5657/5659	Epson® Stylus Pro 4800
AJE-5662/5663/5664/5668/5678	T5662/5663/5664/5668/5678	Epson® Stylus Pro 7400/7800/9400/9800
AJE-5672/5673/5674	T5672/5673/5674	Epson® Stylus Pro 7400/9400

**Epson® 7-pin chips (A/B)**

 
 
AJE-007	T007/T008/T009/T017/T018	Epson® Stylus Photo 780/785/785EPX/790/870/875/890/895/900/915 Epson® Stylus Photo 1270/1280/1290/1290S Epson® Stylus Photo 825/777/777i Epson® 1000 ICS
AJE-015/016	T015/016	Epson® Stylus Photo 2000SP
AJE-026/027	T026/027/028/029	Epson® Stylus Photo 810/820/830/830U Epson® Stylus Photo 925/935 Epson® Stylus Photo C60/C61/CX3100
AJE-0321/0322/0323/0324	T0321/0322/0323/0324	Epson® Stylus C70/C80/C80N/C80WN/C82/C82N/C82WN Epson® Stylus CX5100/CX5200/CX5300/CX5400
AJE-0331/0332/ 0333/0334/0335/0336	T0331/0332/0333/0334/0335/ 0336	Epson® Stylus Photo 950/960
AJE-0341/0342/0343/0344/0345/0346/0347/0348	T0341/0342/0343/0344/0345/ 0346/0347/0348	Epson® Stylus Photo 2100/2200
AJE-036/037	T036/037	Epson® Stylus C42/C44/C46
AJE-038/039	T038/039	Epson® Stylus C41/C43/C43U/C45 Epson® Stylus CX1500/CX1500v
AJE-040/041	T040/041	Epson® Stylus CX3200/C62
AJE-0321/0422/0423/0424	T0321/0422/0423/0424	Epson® Stylus CX5100/CX5200/CX5300/CX5400 Epson® Stylus C82/C82N/C82WN
AJE-0431/0442/0443/0444	T0431/0442/0443/0444	Epson® Stylus C84/C84N/C84WN Epson® Stylus CX6400/CX6600
AJE-0441/0442/0443/0444	T0441/0442/0443/0444	Epson® Stylus C64/C66/C84/C84N/C84WN/C86 Epson® Stylus CX3600/CX3650 Epson® Stylus CX4600/CX6400/CX6600
AJE-0441/0452/0453/0454	T0441/0452/0453/0454	Epson® Stylus C64/C66/C84/C86 Epson® Stylus CX6600/CX3600/CX3650
AJE-0461/0472/0473/0474	T0461/0472/0473/0474	Epson® Stylus C63/C65/C83/C85 Epson® Stylus CX3500/CX4500/CX6300/CX6500
AJE-0481/0482/0483/0484/0485/0486	T0481/0482/0483/0484/0485/ 0486	Epson® Stylus Photo R200/R220/R300/R300M/R320/R340 Epson® Stylus Photo RX500/RX600/RX620

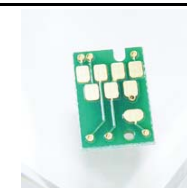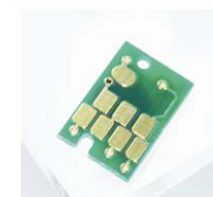

 
 

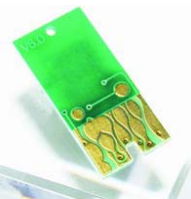 


AJE-0491/0492/0493/0494/0495/0496	T0491/0492/0493/04940495/0496	Epson® Stylus Photo R210/R230/R310/R350 Epson® Stylus Photo RX510/RX630
AJE-0540/0541/0542/0543/ 0544/0547/0548/0549	T0540/0541/0542/05430544/0547/0548/0549	Epson® Stylus Photo R800/R1800
AJE-0551/0552/0553/0554	T0551/0552/0553/0554	Epson® Stylus Photo R240/RX420/RX425/RX520
AJE-5591/5592/5593/5594/5595/5596	T5591/54592/5593/5594/5595/5596	Epson® Stylus Photo RX700
AJE-0561/0562/0563/0564	T0561/0562/0563/0564	Epson® Stylus Photo R250/RX430/RX530
AJE-057/058	T057/058	EPSON® ME 1          EPSON® ME 100          EPSON® ME1+
AJE-0557	T0557	EPSON® PictureMate /PictureMate 500
AJE-0573	T0573	Epson® PictureMate 100 Epson® PictureMate 100 Mobile Phone Edition
AJE-0591/0592/0593/0594/0595/ 0596/0597/0598/0599	T0591/0592/0593/0594/0595/0596/0597/0598/0599	Epson® Stylus Photo R2400
AJE-0601/0602/0603/0604	T0601/0602/0603/0604	Epson® Stylus C88 Epson® Stylus CX3800/CX3810/CX4200/CX4800/CX5800F/CX7800
AJE-0611H/0611/0612/0613/0614	T0611H/0611/0612/0613/ 0614	Epson® Stylus D88/D68 series Epson® Stylus DX3800/DX3850 Epson® Stylus DX4800/DX4850
AJE-0631/0632/0633/0634	T0631/0632/0633/0634	Epson® Stylus C67/C87 Epson® Stylus CX3700/CX4100/CX4700
AJE-066/067	T066/067	Epson® Stylus C48
AJE-0841/0842/8043/0844	T0841/0842/0843/0844	Epson® Stylus Photo 20
AJE-0741/0742/0743/0744	T0741/0742/0743/0744	Epson® CX4080
AJE-0751/0752/0753/0754	T0751/0752/0753/0754	Epson® Stylus C59/CX2900/CX2905
AJE-0761/0762/0763/0764	T0761/0762/0763/0764	Epson® ME200/ME2/C58
AJE-5846	T05846	Epson® PictureMate Flash-PM280 Epson® PictureMate pal-PM 200 Epson® PictureMate Snap-PM 240/290/225
AJE-5852	T5852	Epson® Picture Mate PM210/250/270/235/215

## Epson® 7-pin CISS chips

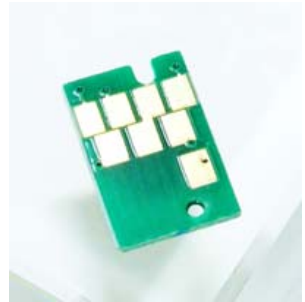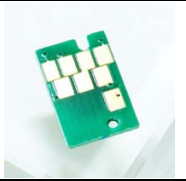

AJE-026R	T026/027/028/029	Epson® Stylus Photo 810/820/830/830U/925/935
AJE-0321R	T0321/0322/0323/0324	Epson® Stylus C70/C80/C80N/C80WN/C82/C82N/C82WN Epson® Stylus CX5200/CX5300/CX5400
AJE-0331R	T0331/0332/0333/0334/0335/ 0336	Epson® Stylus Photo 950/960
AJE-036R	T036/037	Epson® Stylus C42/C44/C46
AJE-038R	T038/039	Epson® Stylus C41/C43/C43U/C45 Epson® Stylus CX1500/CX1500v
AJE-040R	T040/041	Epson® Stylus CX3200/C62
AJE-0441R	T0441/0442/0443/0444	Epson® Stylus C64/C66/C84/C84N/C84WN/C86 Epson® Stylus CX3600/CX3650/CX4600/CX6400/CX6600
AJE-0461R	T0461/0472/0473/0474	Epson® Stylus C63/C65/C83/C85 Epson® Stylus CX6300/CX6500/CX3500/CX4500
AJE-0481R	T0481/0482/0483/0484/0485/ 0486	Epson® Stylus Photo R200/R220/R300/R300M/R320/R340 Epson® Stylus Photo RX500/RX600/RX620
AJE-0491R	T0491/0492/0493/0494/0495/ 0496	Epson® Stylus Photo R210/R230/R310/R350 Epson® Stylus Photo RX510/RX630
AJE-0551R	T0551/0552/0553/0554	Epson® Stylus Photo R240/RX420/RX425/RX520
AJE-5591R	T5591/5592/5593/5594/5595/ 5596	Epson® Stylus Photo RX700
AJE-0561R	T0561/0562/0563/0564	Epson® Stylus Photo R250/RX430/RX530
AJE-057R	T057/058	Epson® ME 1    Epson® ME 100    Epson® ME1+
AJE-0601R	T0601/0602/0603/0604	Epson® Stylus C88/CX3800/CX3810/CX4200/CX4800/CX5800F/CX7800
AJE-0611R	T0611H/0611/0612/0613/0614	Epson® Stylus D88/D68 series Epson® Stylus DX3800/DX3850 Epson® Stylus DX4200/DX4250 Epson® Stylus DX4800/DX4850
AJE-0631R	T0621/0631/0632/0633/0634	Epson® Stylus C67/C87 Epson® Stylus CX3700/CX4100/CX4700
AJE-066R	T066/067	Epson® Stylus C48
AJE-0841R	T0841/0842/0843/0844	Epson® Stylus Photo 20

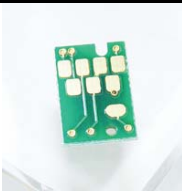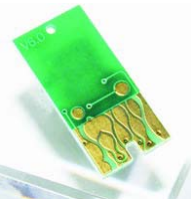AJE-0741R	T0741/0742/0743/0744	Epson® CX4080	
AJE-0751R	T0751/0752/0753/0754	Epson® Stylus C59/CX2900/CX2905	
AJE-0761R	T0761/0762/0763/0764	Epson® ME2/ME20 Epson® C58/CX2800	
<b>Epson® 9-pin CISS chips</b>			
AJE-0731NR	T0731N/0732N/0733N/0734N	Epson® Stylus T10/T11/T20/T21 Epson® Stylus T40W/TX101/TX200/TX110/TX210/TX300F Epson® Stylus C79/CX8300/CX5500	
AJE-0811NR	T0811N/0812N/0813N/0814N/ 0815N/0816N	Epson® Stylus Photo TX700/TX800/T50 Epson® Stylus Photo RX615/R270/R290	
AJE-0821NR	T0821N/0822N/0823N /0824N/0825N/0826N	Epson® Stylus Photo T50/TX700/TX800 Epson® Stylus Photo RX615/R270/R290	
AJE-0911NR	T0911N/0912N/0913N/0914N	Epson® Stylus TX101/T21/TX110/TX210/C91	
AJE-0921NR	T0921N/0922N/0923N/0924N	Epson® Stylus T26/TX106/TX109 Epson® Stylus CX4300/C91	
AJE-0981R	T0981/0982/0983/0984/0985/ 0986	Epson® Artisan 600/700/800	
AJE-1171R	T1171/0732N/0733N/0734N	Epson® Stylus T23/TX105/T24	
AJE-1151R	T1151/1151/0732N/0733N/0734N	Epson® Stylus T33	
AJE-1031R	T1031/1032/1033/1034	Epson® Stylus T40W/TX600FW	
AJE-1091R	T1091/1092/1093/1094	Epson® ME30/ME360 Epson® ME OFFICE 70 Epson® ME OFFICE 360/80W/700FW	
AJE-1191R	T1191/1191/1092/1093/1094	Epson® ME OFFICE 70	
AJE-0681R	T0681/0682/0683/0684	Epson® WorkForce 30/40/500/600	
AJE-0691R	T0691/0692/0693/0694	Epson® Stylus CX7400/CX7000F/C120 Epson® Stylus NX100/NX400/NX200 Epson® Stylus WorkForce 30 Epson® Stylus WorkForce 500	
AJE-0711R	T0711/0712/0713/0714	Epson® Stylus D78/D92/D120/DX7000F/DX5000 Epson® Stylus S20/SX200/SX400/SX209/SX110/SX210/SX510 Epson® Stylus BX310F	
AJE-0711HR	T0711H/0711H/0712/0713/ 0714	Epson® Stylus D120/SX410/SX510W	
AJE-0731R	T0731/0732/0733/0734	Epson® Stylus C79/C90/C92/C110 Epson® Stylus CX3900/CX4900/CX4905/CX5600/CX5900F/CX6900F	

 


AJE-0881R	T0881/0882/0883/0884	Epson® Stylus CX4400/CX7400/CX4450 Epson® Stylus NX200/NX400
AJE-0891R	T0891/0892/0893/0894	Epson® Stylus S20 Epson® Stylus SX100/SX105/SX200/SX205/SX405/SX400/SX115/SX510W/SX410
AJE-0911R	T0911/0912/0913/0914	Epson® Stylus CX5500/CX5501/CX5510/CX5505/C90
AJE-0921R	T0921/0922/0923/0924	Epson® Stylus CX4300/C91
AJE-0771R	T0771/0772/0773/0774/0775/0776	Epson® Stylus Photo R260/R380/R280 Epson® Stylus Photo RX580/RX680 Epson® Stylus Photo Artisan50
AJE-0781R	T0781/0782/0783/0784/0785/0786	Epson® Stylus Photo R260/R380/R280 Epson® Stylus Photo RX580/RX680 Epson® Stylus Photo Artisan50
AJE-0791R	T0791/0792/0793/0794/0795/0796	Epson® Stylus Photo 1400
AJE-0801R	T0801/0802/0803/0804/0805/0806	Epson® Stylus Photo R265/R360/R285 Epson® Stylus Photo RX585/RX685 Epson® Stylus Photo P50
AJE-0811R	T0811/0812/0813/0814/0815/0816	Epson® Stylus Photo R270/R390/RX590 Epson® Stylus photo 1410
AJE-0821R	T0821/0822/0823/0824/0825/0826	Epson® Stylus Photo R270/R390/RX590 Epson® Stylus Photo 1410
AJE-0851R	T0851/0852/0853/0854/0855/0856	Epson® Stylus Photo 1390
AJE-0871R	T0870/0871/0872/0873/0874/ 0877/0878/0879	Epson® Stylus Photo 1900
AJE-0878R		
AJE-0961R	T0961/0962/0963/0964/0965/0966/ 0967/0968/0969	Epson® Stylus Photo 2880
AJE-0967R		



**Epson® Japan Chips**

 
AJE-ICBK46R	ICBK/C/M/Y46	Epson® PX-A720/PX-101/PX-201/PX-501A Epson® PM-D870/A620
AJE-ICBK50R	ICBK/C/M/Y/LC/LM50	Epson® PM-G850          Epson® PM-G450          Epson® PM-T690 Epson® PM-A940          Epson® PM-A840S          Epson® PM-A840 Epson® PM-G860          Epson® EP-301              Epson® EP-801A Epson® EP-901F
AJE-ICBK53R	ICBK/C/M/Y/MB/R/OR/GI.53	Epson® PX-G5300

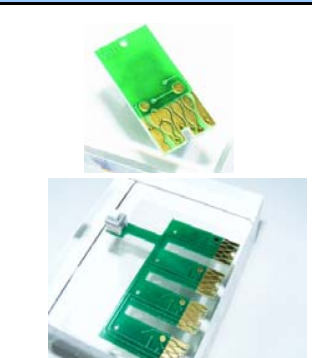





AJE-ICMK53R	ICBK/C/M/Y/LC/LM/DY	Epson® PM-3300C Epson® PM-720C Epson® PM-780CV Epson® PM-800DC Epson® PM-870C	Epson® PM-3500C Epson® PM-780C Epson® PM-790PT Epson® PM-820C Epson® PM-880C	Epson® PM-3700C Epson® PM-780CS Epson® PM-800C Epson® PM-820DC Epson® PM-890C
AJE-IC2CL05	IC1BK05/IC5CL05	Epson® PM-3300C Epson® PM-870C	Epson® PM-3500C Epson® PM-890C	Epson® PM-3700C
AJE-ICL06	IC5CL06	Epson® CC-500L	Epson® CC-550L	
AJE-IC2CL12	IC1BK12/IC3CL12	Epson® CC-500L	Epson® CC-550L	
AJE-IC2CL13	IC1BK13/IC5CL13	Epson® PM-730C Epson® PM-830C Epson® PM-860PT	Epson® PM-740C Epson® PM-840C	Epson® PM-740DU Epson® PM-850PT
AJE-IC2CL28	ICBK28/ICCL28	Epson® CL-760		
AJE-IC2CL29	ICBK29/ICCL29	Epson® CC-570L		
AJE-IC7CL21	ICBK/C/M/Y/LC/LM/DY	Epson® PM-930C Epson® PM-970C	Epson® PM-940C Epson® PM-980C	Epson® PM-950C
AJE-IC4CL22	ICBK/C/M/Y22	Epson® PX-V700	Epson® CC-660PX	
AJE-IC8CL23	ICBK/C/M/Y/LC/LM/GY/MB23	Epson® PM-4000PX		
AJE-IC4CL31	ICBK/C/M/Y31	Epson® PX-V500	Epson® PX-V600	
AJE-IC6CL32	ICBK/C/M/Y/LC/LM	Epson® PM-A850 Epson® PM-G800	Epson® PM-D750 Epson® PM-A870	Epson® PM-G700
AJE-IC8CL33	ICGL/BK/C/M/Y/R/MB/BL33	Epson® PX-G900		
AJE-ICCL34	ICCL34	Epson® E-100	Epson® E-100P	
AJE-IC6CL35	ICBK/C/M/Y/LC/LM35	Epson® PM-D1000	Epson® PM-A900	
AJE-IC3CL42	ICC/M/Y42	Epson® PX-A650	Epson® PX-V630	
AJE-IC6CL47	ICBK/C/M/Y/LC/LM47	Epson® PM-A970	Epson® PM-T990	
AJE-IC4CL70	ICBK/C/M/Y70	Epson® GP-710		
AJE-IC6CL50	ICBK/C/M/Y/LC/LM50	Epson® PM-G850 Epson® PM-A940/A840 Epson® EP-801A	Epson® PM-G4500 Epson® PM-G860 Epson® EP-901F	Epson® PM-T690 Epson® EP-301 Epson® PM-A840S
AJE-IC8CL53	ICBK/C/M/Y/MB/R/OR/GL53	Epson® PX-G5300		

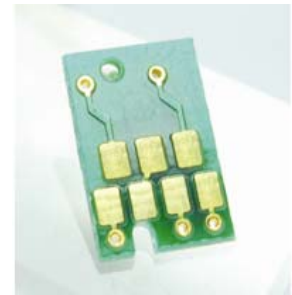

AJE-IC4CL46	ICBK/C/M/Y46	Epson® PX-A720 Epson® PX-101	Epson® PM-D870 Epson® PX-501A	Epson® A620 Epson® <b>PX-201</b>	
AJE-ICBK56	ICC/M/Y46/ICBK56/ICBK56	Epson® <b>PX-201</b>			
AJE-ICCL45	ICCL45	Epson® PictureMate E-300			
<b>Canon® II Series</b>					
AJC-CLI221BK	CLI-221BK	CANON® PIXMA Series (USA) iP3600/iP4600 CANON® PIXMA Series (USA) MP540/MP620/MP630/MP980 CANON® PIXMA Series (USA) MX860/MX870			
AJC-CLI221C	CLI-221C				
AJC-CLI221M	CLI-221M				
AJC-CLI221Y	CLI-221Y				
AJC-PGI220BK	PGI-220BK				
AJC-CLI221GY	CLI-221GY	CANON® PIXMA MP980(USA)			
AJC-BCI321BK	BCI-321BK	CANON® PIXUS (Japan) iP3600/iP4600 CANON® PIXUS (Japan) MP540/MP620/MP630/MP980 CANON® PIXUS (Japan) MX860/MX870			
AJC- BCI321C	BCI-321C				
AJC- BCI321M	BCI-321M				
AJC- BCI321Y	BCI-321Y				
AJC- BCI320PGBK	BCI-320PGBK				
AJC- BCI321GY	BCI-321GY	CANON® PIXUS MP980(Japan)			
AJC-CLI521BK	CLI-521BK	CANON® PIXMA Series(Europe) iP3600/iP4600 CANON® PIXMA Series(Europe) MP540/MP620/MP630/MP980 CANON® PIXMA Series(Europe) MX860/MX870			
AJC-CLI521C	CLI-521C				
AJC-CLI521M	CLI-521M				
AJC-CLI521Y	CLI-521Y				
AJC-PGI520BK	PGI-520BK				
AJC-CLI521GY	CLI-521GY	CANON® PIXMA MP980(Europe)			
AJC-CLI821BK	CLI-821BK	CANON® PIXMA Series (China) iP3680/iP4680			
AJC-CLI821C	CLI-821C				

AJC-CLI821M	CLI-821M	CANON® PIXMA Series (China) IP3000/IP4000 CANON® PIXMA Series (China) MP545/MP628/MP988 CANON® PIXMA Series (China) MX638/MX868/MX876
AJC-CLI821Y	CLI-821Y	
AJC-PGI820BK	PGI-820BK	
AJC-CLI821GY	CLI-821GY	CANON® PIXMA MP988(China)

**Canon® I Series**

AJC-PGI5BK	PGI-5BK	CANON® PIXMA IP3300/IP4200/IP4300/IP4500 CANON® PIXMA IX4000/IX5000 CANON® PIXMA MP970
AJC-CLI8BK	CLI-8BK	CANON® PIXMA IP4200/IP4200/IP4500/IP4300/IP5300 CANON® PIXMA Pro9000
AJC-CLI8C	CLI-8C	
AJC-CLI8M	CLI-8M	
AJC-CLI8Y	CLI-8Y	
AJC-CLI8PC	CLI-8PC	CANON® PIXMA Pro9000
AJC-CLI8PM	CLI-8PM	
AJC-CLI8R	CLI-8R	
AJC-CLI8G	CLI-8G	
AJC-BCI9BK	BCI-9PGBK	CANON® PIXUS IP3300/IP4200/IP4300 CANON® PIXUS MP950/MP960/MP970
AJC-BCI7BK	BCI-7eBK	CANON® PIXUS MP950/MP960/MP970/MP900 CANON® PIXUS PRO9000 CANON® PIXUS ip8600/ip9910
AJC-BCI7C	BCI-7eC	
AJC-BCI7M	BCI-7eM	
AJC-BCI7Y	BCI-7eY	
AJC-BCI7PC	BCI-7ePC	
AJC-BCI7PM	BCI-7ePM	
AJC-BCI7R	BCI-7eR	CANON® PIXUS ip8100/ip8600/ip9910 CANON® PIXUS Pro9000
AJC-BCI7G	BCI-7eG	CANON® PIXUS ip8600/ip9910 CANON® PIXUS Pro9000
AJC-PGI9	PGI-9R	
AJC-PGI9MBK	PGI-9MBK	
AJC-PGI9G	PGI-9G	



AJC-PGI9PM	PGI-9PM	CANON® PIXUS Pro9500
AJC-PGI9PC	PGI-9PC	
AJC-PGI9Y	PGI-9Y	
AJC-PGI9C	PGI-9C	
AJC-PGI9GY	PGI-9GY	
AJC-PGI9PBK	PGI-9PBK	
AJC-PGI9M	PGI-9M	
AJC-BCI19BK	BCI-19BK	CANON® pixus ip100
AJC-BCI19C	BCI-19COLOR	CANON® pixus Mini260      CANON® pixus ip100
AJC-PGI35	PGI-35	CANON® pixus ip100
AJC-CLI36C	CLI-36C	CANON® pixus Mini260      CANON® pixus ip100

**canon® Wide Format**

AJC-1201BK	BCI-1201BK	CANON® N1000/N2000
AJC-1201C	BCI-1201C	
AJC-1201M	BCI-1201M	
AJC-1201Y	BCI-1201Y	
AJC-1302BK	BCI-1302BK	CANON® W2200
AJC-1302C	BCI-1302C	
AJC-1302M	BCI-1302M	
AJC-1302Y	BCI-1302Y	
AJC-1302LC	BCI-1302LC	
AJC-1302LM	BCI-1302LM	
AJC-1411BK	BCI-1411BK	CANON® W7200/W8200/8400
AJC-1411C	BCI-1411C	
AJC-1411M	BCI-1411M	
AJC-1411Y	BCI-1411Y	
AJC-1411LC	BCI-1411LC	
AJC-1411LM	BCI-1411LM	
AJC-1401BK	BCI-1401BK	
AJC-1401C	BCI-1401C	





AJC-1401M	BCI-1401M	CANON® W7250/6400
AJC-1401Y	BCI-1401Y	
AJC-1401LC	BCI-1401LC	
AJC-1401LM	BCI-1401LM	
AJC-1431BK	BCI-1431BK	CANON® W6200/6400
AJC-1431C	BCI-1431C	
AJC-1431M	BCI-1431M	
AJC-1431Y	BCI-1431Y	
AJC-1431LC	BCI-1431LC	
AJC-1431LM	BCI-1431LM	
AJC-1421BK	BCI-1421BK	CANON® W8200/8400
AJC-1421C	BCI-1421C	
AJC-1421M	BCI-1421M	
AJC-1421Y	BCI-1421Y	
AJC-1421LC	BCI-1421LC	
AJC-1421LM	BCI-1421LM	

**Canon® II Series CISS Chip**

AJC-CLI221BKR	CLI-221BK	CANON® PIXMA Series(USA) iP3600/iP4600 CANON® PIXMA Series(USA) MP540/MP620/MP630/MP980
AJC-CLI221CR	CLI-221C	
AJC-CLI221MR	CLI-221M	
AJC-CLI221YR	CLI-221Y	
AJC-PGI220BKR	PGI-220BK	
AJC-CLI221GYR	CLI-221GY	CANON® PIXMA MP980(USA)
AJC-BCI321BKR	BCI-321BK	CANON® PIXUS (Japan) iP3600/iP4600 CANON® PIXUS (Japan) MP540/MP620/MP630/MP980
AJC- BCI321CR	BCI-321C	
AJC- BCI321MR	BCI-321M	
AJC- BCI321YR	BCI-321Y	
AJC- BCI320PGBKR	BCI-320PGBK	
AJC- BCI321GYR	BCI-321GY	CANON® PIXUS MP980(Japan)
AJC-CLI521BKR	CLI-521BK	
AJC-CLI521CR	CLI-521C	





AJC-CLI521MR	CLI-521M	CANON® PIXMA Series (Europe) iP3600/iP4600 CANON® PIXMA Series (Europe) MP540/MP620/MP630/MP980 CANON® PIXMA MP980 (Europe)
AJC-CLI521YR	CLI-521Y	
AJC-PGI520BKR	PGI-520BK	
AJC-CLI521GYR	CLI-521GY	
AJC-CLI821BKR	CLI-821BK	CANON® PIXMA Series (China) iP3680/iP4680 CANON® PIXMA Series (China) MP545/MP628/MP988 CANON® PIXMA Series (China) MX638/MX868
AJC-CLI821CR	CLI-821C	
AJC-CLI821MR	CLI-821M	
AJC-CLI821YR	CLI-821Y	
AJC-PGI820BKR	PGI-820BK	
AJC-CLI821GYR	CLI-821GY	

**CANON® I Series CISS Chips**

AJC-PGI5BKR	PGI-5BK	CANON® PIXMA IP4200 CANON® PIXMA IP4500 CANON® PIXMA IX5000 CANON® PIXMA MP970	CANON® PIXMA IP3300 CANON® PIXMA IX4000 CANON® PIXMA IP4300		
AJC-CLI8BKR	CLI-8BK	CANON® PIXMA IP4200 CANON® PIXMA IP4500 CANON® PIXMA IP5300	CANON® PIXMA IP4200 CANON® PIXMA IP4300 CANON® PIXMA Pro9000		
AJC-CLI8CR	CLI-8C				
AJC-CLI8MR	CLI-8M				
AJC-CLI8YR	CLI-8Y				
AJC-CLI8PCR	CLI-8PC	CANON® PIXMA Pro9000			
AJC-CLI8PMR	CLI-8PM				
AJC-CLI8RR	CLI-8R				
AJC-CLI8GR	CLI-8G				
AJC-BCI9BKR	BCI-9PGBK			CANON® PIXUS IP3300/IP4200/IP4300 CANON® PIXUS MP950/MP960/MP970	
AJC-BCI7BKR	BCI-7eBK	CANON® PIXUS MP950/MP960/MP970/MP900 CANON® PIXUS PRO9000 CANON® PIXUS ip8600/ip9910			
AJC-BCI7CR	BCI-7eC				
AJC-BCI7MR	BCI-7eM				
AJC-BCI7YR	BCI-7eY				
AJC-BCI7PCR	BCI-7ePC				
AJC-BCI7PMR	BCI-7ePM				
AJC-BCI7RR	BCI-7eR			CANON® PIXUS ip8100/ip8600/ip9910	CANON® PIXUS Pro9000

 


AJC-BCI7GR	BCI-7eG	CANON® PIXUS ip8600/ip9910	CANON® PIXUS Pro9000
AJC-PGI9RR	PGI-9R	CANON® PIXUS Pro9500	
AJC-PGI9MBKR	PGI-9MBK		
AJC-PGI9GR	PGI-9G		
AJC-PGI9PMR	PGI-9PM		
AJC-PGI9PCR	PGI-9PC		
AJC-PGI9YR	PGI-9Y		
AJC-PGI9CR	PGI-9C		
AJC-PGI9GYR	PGI-9GY		
AJC-PGI9PBKR	PGI-9PBK		
AJC-PGI9MR	PGI-9M		
AJC-BCI19BKR	BCI-19BK		
AJC-BCI19CR	BCI-19COLOR	CANON® pixus Mini 260	CANON® pixus ip100
AJC-PGI35R	PGI-35	CANON® pixus ip100	
AJC-CLI36CR	CLI-36C	CANON® pixus Mini 260	CANON® pixus ip100

 



**For Ricoh® Cartridge**

AJR-BKG7500	G7500 BK	RICOH® GX7500	
AJR-CG7500	G7500 C		
AJR-MG7500	G7500 M		
AJR-YG7500	G7500 Y		
AJR-BKG7000	G7000 BK	RICOH® GX7000	
AJR-CG7000	G7000 C		
AJR-MG7000	G7000 M		
AJR-YG7000	G7000 Y		
AJR-BKG2500	G2500 BK	RICOH® GX2500	
AJR-CG2500	G2500 C		
AJR-MG2500	G2500 M		
AJR-YG2500	G2500 Y		
<b>AJR-GC21BKH</b>	<b>GC21BKH</b>		

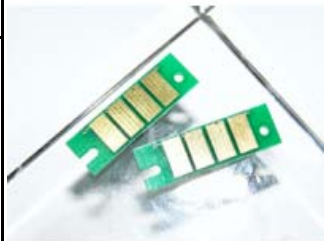

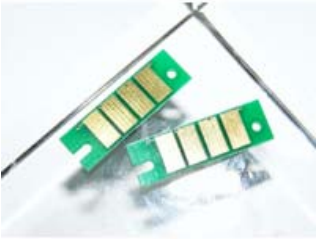


AJR-GC21CH	GC21CH	RICOH® GX700	RICOH® GX5050N			
AJR-GC21MH	GC21MH					
AJR-GC21YH	GC21YH					
AJR-GC21BK	GC21BK					
AJR-GC21C	GC21C	RICOH® GX700	RICOH® GX5050		RICOH® GX3000SF	
AJR-GC21M	GC21M	RICOH® GX3000S	RICOH® GX3000		RICOH® GX2500	
AJR-GC21Y	GC21Y					
AJR-1K12	RC-1K12					
AJR-1C12	RC-1C12					
AJR-1M12	RC-1M12	RICOH® IPSIO G7570				
AJR-1Y12	RC-1Y12					
<b>For Kodak® Cartridge</b>						
AJK-8965	3J8965	Kodak® 5100	Kodak® 5300	Kodak® 5500	Kodak® ESP3	
AJK-8966	3J8966	Kodak® ESP5	Kodak® ESP7	Kodak® ESP9		



# Apex Inkjet Chip List

Date: 2010-5-24

 
OEM Ink Cartridge Type	OEM Product Number	Apex Product code	Color	Description	Chip Photo
For HP® Cartridge(One-time Chip)					
<b>HP® 10</b>	C4840A	AJH-4840A	BK	HP® Designjet Colorpro ga HP® Designjet Colorpro cad HP® Business Inkjet 2000c professional series HP® Business Inkjet 2500c professional series	
	C4841A	AJH-4841A	C		
	C4842A	AJH-4842A	Y		
	C4843A	AJH-4843A	M		
	C4844A	AJH-4844A	BK	HP® Designjet 500/500PS HP® Designjet 800/800PS HP® Designjet 815mfp HP® Designjet 1100 HP® Designjet 2200 HP® Designjet 2300/2230/2250/2280/2600/1700 HP® Designjet100/110 HP® Business inkjet 3000/3000n/3000dtn HP® Business Inkjet 2000c professional series HP® Business Inkjet 2500c professional series	
<b>HP® 11</b>	C4836A	AJH-4836A	C	HP® Business Inkjet 1100 series HP® Business Inkjet 2200/2300/2230 HP® Business Inkjet 2250/2280/2600series HP® Color Inkjet Printer cp1700 HP® Designjet 100/110/120/10PS/20PS/50PS	
	C4837A	AJH-4837A	M		
	C4838A	AJH-4838A	Y		
<b>HP® 12</b>	C4804A	AJH-4804A	C	HP® Business Inkjet 3000/3000n/3000dtn	
	C4805A	AJH-4805A	M		
	C4806A	AJH-4806A	Y		

<b>HP® 13</b>	C4814A	AJH-4814A	BK	HP® Business Inkjet 1000
	C4815A	AJH-4815A	C	
	C4816A	AJH-4816A	M	
	C4817A	AJH-4817A	Y	
<b>HP® 18</b>	C4936A	AJH-4936A	BK	HP® Officejet Pro K5300/5400dn HP® Officejet Pro L7380 HP® Officejet Pro L7580 HP® Officejet K5400dn/K5400dtn
	C4937A	AJH-4937A	C	
	C4938A	AJH-4938A	M	
	C4939A	AJH-4939A	Y	
<b>HP® 38</b>	C9412A	AJH-9412A	MK	HP® Photosmart Pro B9180
	C9413A	AJH-9413A	PK	
	C9414A	AJH-9414A	LG	
	C9415A	AJH-9415A	C	
	C9416A	AJH-9416A	M	
	C9417A	AJH-9417A	Y	
	C9418A	AJH-9418A	LC	
	C9419A	AJH-9419A	LM	
<b>HP® 82</b>	C4911A	AJH-4911A	C	HP® Designjet 500/500PS HP® Designjet 800/800PS HP® Designjet 815mfp HP® Designjet 820mfp
	C4912A	AJH-4912A	M	
	C4913A	AJH-4913A	Y	
<b>HP® 84</b>	C5016A	AJH-5016A	BK	HP® Designjet 90r/10ps/20ps/50ps/30/120/130 series HP® Business Inkjet 2600
	C5017A	AJH-5017A	LC	
	C5018A	AJH-5018A	LM	
<b>HP® 85</b>	C9425A	AJH-9425A	C	HP® Designjet 30/90r/130 series
	C9426A	AJH-9426A	M	
	C9427A	AJH-9427A	Y	
	C9428A	AJH-9428A	LC	
	C9429A	AJH-9429A	LM	

 


<b>HP® 88</b>	C9385A	AJH-9385A	BK	HP® Officejet PRO K550
	C9386A	AJH-9386A	C	
	C9387A	AJH-9387A	M	
	C9388A	AJH-9388A	Y	
	C9396A	AJH-9396A	BK	
	C9391A	AJH-9391A	C	
	C9392A	AJH-9392A	M	
	C9393A	AJH-9393A	Y	
<b>HP® 02</b>	C8721W	AJH-8721W	BK	HP® Photosmart D7300/D7100/D6100/C7100/C6100/C5100/8200/3100 series
	C8719W	AJH-8719W	BK	
	C8771W	AJH-8771W	C	
	C8772W	AJH-8772W	M	
	C8773W	AJH-8773W	Y	
	C8774W	AJH-8774W	LC	
	C8775W	AJH-8775W	LM	
<b>HP® 801</b>	C8721Z	AJH-8721Z	BK	HP® Photosmart D7300/D7100/D6100/C7100/C6100/C5100/8200/3100 series
	C8719Z	AJH-8719Z	BK	
	C8771Z	AJH-8771Z	C	
	C8772Z	AJH-8772Z	M	
	C8773Z	AJH-8773Z	Y	
	C8774Z	AJH-8774Z	LC	
	C8775Z	AJH-8775Z	LM	
<b>HP® 363</b>	C8719E	AJH-8719E	BK	HP® Photosmart D7300/D7100/D6100/C7100/C6100/C5100/8200/3100 series
	C8721E	AJH-8721E	BK	
	C8771E	AJH-8771E	C	
	C8772E	AJH-8772E	M	
	C8773E	AJH-8773E	Y	
	C8774E	AJH-8774E	LC	
	C8775E	AJH-8775E	LM	
<b>HP® 177</b>	C8721H	AJH-8721H	BK	HP® Photosmart D7300/D7100/D6100/C7100/C6100/C5100/8200/3100 series
	C8719H	AJH-8719H	BK	
	C8771H	AJH-8771H	C	
	C8772H	AJH-8772H	M	
	C8773H	AJH-8773H	Y	
	C8774H	AJH-8774H	LC	
	C8775H	AJH-8775H	LM	

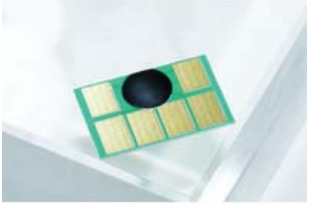

<b>HP® 14</b>	C5010A	AJH-5010A	COLOR	HP® Color Inkjet Printer CP1160series HP® Officejet D125xi/D135/D135xi/D145/D155xi HP® Officejet 7110 series/7130series HP® Officejet 7140series HP® Digital Copier 610series	
	C5011A	AJH-5011A	BK		
	C5010D	AJH-5010D	COLOR		
	C5011D	AJH-5011D	BK		

**For HP® Cartridge(CISS Chips)**
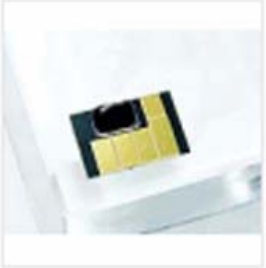
<b>HP® 10</b>	C4840A	AJH-4840AR	BK	HP® Designjet Colorpro ga HP® Designjet Colorpro cad HP® Business Inkjet 2000c professional series HP® Business Inkjet 2500c professional series	
	C4841A	AJH-4841AR	C		
	C4842A	AJH-4842AR	Y		
	C4843A	AJH-4843AR	M		
	C4844A	AJH-4844AR	BK	HP® Designjet 500/500PS HP® Designjet 800/800PS HP® Designjet 815mfp HP® Designjet 1100 HP® Designjet 2200 HP® Designjet 2300/2230/2250/2280/2600/1700 HP® Designjet100/110 HP® Business inkjet 3000/3000n/3000dtn HP® Business Inkjet 2000c professional series HP® Business Inkjet 2500c professional series	
<b>HP® 11</b>	C4836A	AJH-4836AR	C	HP® Business Inkjet 1100 series HP® Business Inkjet 2200/2300/2230 HP® Business Inkjet 2250/2280/2600series HP® Color Inkjet Printer cp1700 HP® Designjet 100/110/120/10PS/20PS/50PS	
	C4837A	AJH-4837AR	M		
	C4838A	AJH-4838AR	Y		HP® Business Inkjet 1100 series HP® Business Inkjet 2200/2300/2230 HP® Business Inkjet 2250/2280/2600series HP® Color Inkjet Printer cp1700 HP® Designjet 100/110plus Printer series
<b>HP® 12</b>	C4804A	AJH-4804AR	C	HP® Business Inkjet 3000/3000n/3000dtn	
	C4805A	AJH-4805AR	M		
	C4806A	AJH-4806AR	Y		

<b>HP® 13</b>	C4814A	AJH-4814AR	BK	HP® Business Inkjet 1000
	C4815A	AJH-4815AR	C	
	C4816A	AJH-4816AR	M	
	C4817A	AJH-4817AR	Y	
<b>HP® 14</b>	C5010A	AJH-5010AR	COLOR	HP® Color Inkjet Printer CP1160series HP® Officejet D125xi/D135/D135xi/D145/D155xi HP® Officejet 7110 series/7130series HP® Officejet 7140series HP® Digital Copier 610series
	C5011A	AJH-5011AR	BK	
	C5010D	AJH-5010DR	COLOR	
	C5011D	AJH-5011DR	BK	
<b>HP® 18</b>	C4936A	AJH-4936AR	BK	HP® Officejet Pro K5300/5400dn HP® Officejet Pro L7380 HP® Officejet Pro L7580 HP® Officejet K5400dn/K5400dtn
	C4937A	AJH-4937AR	C	
	C4938A	AJH-4938AR	M	
	C4939A	AJH-4939AR	Y	
<b>HP® 38</b>	C9412A	AJH-9412AR	MK	HP® Photosmart Pro B9180
	C9413A	AJH-9413AR	PK	
	C9414A	AJH-9414AR	LG	
	C9415A	AJH-9415AR	C	
	C9416A	AJH-9416AR	M	
	C9417A	AJH-9417AR	Y	
	C9418A	AJH-9418AR	LC	
	C9419A	AJH-9419AR	LM	
<b>HP® 82</b>	C4911A	AJH-4911AR	C	HP® Designjet 500/500PS HP® Designjet 800/800PS HP® Designjet 815mfp HP® Designjet 820mfp
	C4912A	AJH-4912AR	M	
	C4913A	AJH-4913AR	Y	HP® Designjet 500/500PS HP® Designjet 800/800PS HP® Designjet 815mfp HP® Designjet 820mfp HP® Designjet 10PS/20PS/50PS



<b>HP® 84</b>	C5016A	AJH-5016AR	BK	HP® Designjet 90r/10ps/20ps/50ps/30/120/130 series HP® Business Inkjet 2600
	C5017A	AJH-5017AR	LC	HP® Designjet 10ps/20ps/50ps/120 series
	C5018A	AJH-5018AR	LM	
<b>HP® 85</b>	C9425A	AJH-9425AR	C	HP® Designjet 30/90r/130 series
	C9426A	AJH-9426AR	M	
	C9427A	AJH-9427AR	Y	
	C9428A	AJH-9428AR	LC	
	C9429A	AJH-9429AR	LM	
<b>HP® 88</b>	C9385A	AJH-9385AR	BK	HP® Officejet PRO K550
	C9386A	AJH-9386AR	C	
	C9387A	AJH-9387AR	M	
	C9388A	AJH-9388AR	Y	
	C9396A	AJH-9396AR	BK	HP® Officejet PRO K550
	C9391A	AJH-9391AR	C	
	C9392A	AJH-9392AR	M	
	C9393A	AJH-9393AR	Y	
<b>HP® 02</b>	C8721W	AJH-8721WR	BK	HP® Photosmart D7300/D7100/D6100/C7100/C6100/C5100/8200/3100 series
	C8719W	AJH-8719WR	BK	
	C8771W	AJH-8771WR	C	
	C8772W	AJH-8772WR	M	
	C8773W	AJH-8773WR	Y	
	C8774W	AJH-8774WR	LC	
	C8775W	AJH-8775WR	LM	
<b>HP® 801</b>	C8721Z	AJH-8721ZR	BK	HP® Photosmart D7300/D7100/D6100/C7100/C6100/C5100/8200/3100 series
	C8719Z	AJH-8719ZR	BK	
	C8771Z	AJH-8771ZR	C	
	C8772Z	AJH-8772ZR	M	
	C8773Z	AJH-8773ZR	Y	
	C8774Z	AJH-8774ZR	LC	
	C8775Z	AJH-8775ZR	LM	





<b>HP® 363</b>	C8719E	AJH-8719ER	BK	HP® Photosmart D7300/D7100/D6100/C7100/C6100/C5100/8200/3100 series
	C8721E	AJH-8721ER	BK	
	C8771E	AJH-8771ER	C	
	C8772E	AJH-8772ER	M	
	C8773E	AJH-8773ER	Y	
	C8774E	AJH-8774ER	LC	
	C8775E	AJH-8775ER	LM	
<b>HP® 177</b>	C8721H	AJH-8721HR	BK	HP® Photosmart D7300/D7100/D6100/C7100/C6100/C5100/8200/3100 series
	C8719H	AJH-8719HR	BK	
	C8771H	AJH-8771HR	C	
	C8772H	AJH-8772HR	M	
	C8773H	AJH-8773HR	Y	
	C8774H	AJH-8774HR	LC	
	C8775H	AJH-8775HR	LM	

