SENSOR TESTER

BLS-SC08

MANUAL



BLS - SC08

(For common rail system sensors)

PACKING LIST

BLS-SCOS SEXNO TESTED THE PARTY OF THE PART	1
THE STANGER AND THE STANGER AN	1
5 LINES CABLE	1
METER PROBES	1
AC220V POWER CABLE	1
DC12V POWER CABLE	1

1. Function:

A: This tester can check the following sensors::

Rail pressure sensor, temperature sensor, pedal sensor, boost pressure sensor, air flow sensor, speed sensor, cam sensor and so on.

B: Checking of the driving signals (pulse) of common rail pump and injector.

C: Looking up the positive and negative pole of signal.

D: Measuring DC voltage. Max.30VDC

2. Characteristic:

Convenience, shortcut.

Two type power supply effective, AC220V or DC12V.


3. Technical parameters:

Power supply: AC220V or DC12V. Never two in!

Range of measuring DC voltage: DC0 ~ 30V


Voltage of pulse: <=24VDC.

4. Description:

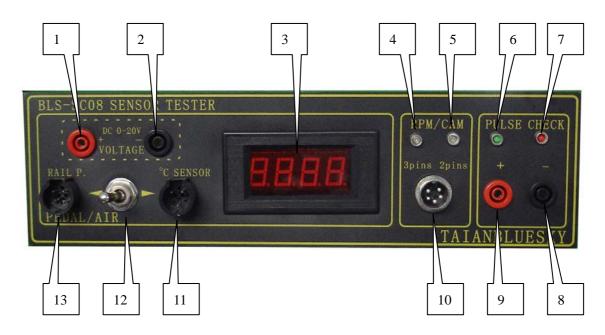

NO.	NAME	DESCRIPTION	NOTE
1	Positive IN terminal		Red probe
2	Negative IN terminal	Max. DC30V	Black probe
3	Digital display	Display signal	
4	Indicator light for HALL		3 lines of 5 Lines cable
	sensor	Checking of speed sensor	
5	Indicator light for	and cam sensor.	2 lines of 5 Lines cable
	electromagnetic sensor		
6	Indicator light for positive	Light showing: red probe is	
	pole of pulse signal	positive.	Meter probes
7	Indicator light for negative	Light showing: red probe is	
	pole of pulse signal	negative.	
8	INPUT of pulse signal	Don't distinguish positive	Max. 24VDC
9		and negative	
10	INPUT of speed sensor		5 Lines cable
	and cam sensor.		
11	INPUT of temperature	Red and yellow line of 3	3 Lines cable
	sensor	Lines cable	
12	Select switch for checking	Right: temperature sensor	
	sensor	Left: pressure, pedal, air	
		sensor	
13	INPUT of pressure, pedal,		3 Lines cable
	air sensor		

CABLES USING

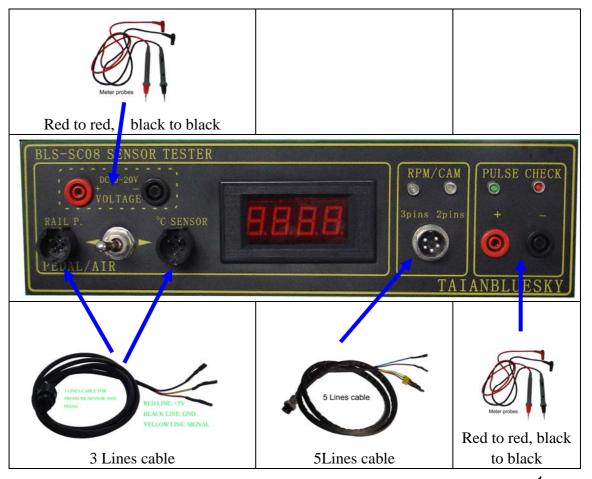

Only one type electric power be connected in. Never two in!

