

# PVC Tray for Canon



**J type**(the tray for following modes is same):

ip7120 ip7130 ip7180 ip7230 ip7240 ip7250 ip7280 ip7200 ip5400

MG5420 MG5430 MG5440 MG5450 MG5480 MG5550 MG5580

MG6320 MG6330 MG6350 MG6380 MG6430 MG6450 MG6530

MG7120 MG7130 MG7180 MX728 MX923

**G type**(the tray for following modes is same):

PIXMA IP4600 IP4700 IP4680 IP4760 IP4850 IP4950 IP4840 IP4940 IP

4820 IP4920 IP4880 IP4980 IP4870 IP4970 IP4810 IP4910 IP4830 IP49

30 MP630 MP640 MP980 MP990 MG5250 MG6150 MG8150 MG8250

MG5420 MG6140 MG8140 MG5220 MG5320 MG8120 MG6120 MG62

20 MG6180 MG8180 MG6170 MG8170

# PVC Tray for Epson



**New Model** (The tray for following models is the same):

RX590 RX680 R330 R270 R280 R285 R290 R380 R390 T50 T60 A50

P50 L800 L801 etc.

**Old Model** (the tray for following modes is same):

R230 R300 R200 R220 R320 R310 R350 R210 etc.