



YELLOWRIVER
MAKE YOUR STAGE TO BE MORE EXCELLENT

LED PAR LIGHT



Model:YR-P0354S

(3WX54pcs RGBW)

User Manual

Please read these instructions carefully before use

Contents

Section 1. Getting Started

- ✧ Unpacking
- ✧ Safety Instruction

Section 2. Set Up

- ✧ Installation
- ✧ Controlling Board
- ✧ Machine Connection

Section 3. troubleshooting

- ✧ Troubleshooting

Section 4. Reference

- ✧ Control Menu
- ✧ DMX Protocol
- ✧ Specification

Section 1. Getting Started

- ✧ Unpacking
- ✧ Safety Instruction

Unpacking

1pc Fixture

1/4pc AC Power Cable with Plug

1/4pc Signal Convertor Cable

1pc User Manual

Thanks for choosing our product. Carefully unpack the box and check the contents to ensure that all parts are present and in good conditions. If anything damaged in transit, notify the shipper immediately and keep the packing material for inspection. Again, please save the carton and all packing materials. If a fixture must be returned to manufacturer, it is important that the fixture be returned in the original manufacturer box and packing.

Safety Instruction



For your safe, please read this user manual carefully before turn on the fixture. This machine should be operated by qualified engineer!

- Please conserve this manual as operation guidance. If you sell this product to other user, please make sure that they also receive this user manual.
- Always make sure that you are connecting to the proper voltage and that the line voltage you are connecting to is not higher than that stated on the decal or rear panel of the fixture.
- If the fixture is intended to indoor use only. To prevent risk of fire or shock, do not expose fixture to rain or moisture. Make sure there are no flammable, explosive or corrosive materials surrounded in 10meters while operating.
- The unit must be installed in a location with adequate ventilation, at least 5m away from adjacent surfaces. Be sure that no ventilation slots are blocked.
- Some fixture may carry high heat, do not aim at objective more than 2minutes.
- Safe rope should be used to install machine. Bearing of safe rope should be more than 3times of the machine weight.
- Always disconnect from the power source before servicing or replacing fuse/lamp and be sure to replace with same fuse/lamp size and type. Cut off power before moving, repairing and cleaning the machine.
- To avoid electric shock, all fixtures must be connected to circuits with a suitable earth connection.
- Always secure fixture using a safety chain and carrying handles.
- Do not operate at ambient temperatures higher than 104°F(40°C).
- In case of failure or mis-function occurred, stop using immediately. Never try to repair the fixture by yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center. Buy the same spare parts/components from manufacturer directly.
- Make sure the power cable is never crimped or damaged.
- Avoid direct eye exposure to the light source while it is on.
- Do not power on and power off the fixture frequently

- When use DMX controller, please make sure that there is no interference sources(e.g. intercom, high frequency radio waves and radiation source)

Caution! There are no user serviceable parts inside the unit. Do not open the housing or attempt any repairs yourself. In the unlikely event your unit may require service, please contact your local distribution or after-sale service center.

Section 2. Set Up

- ✧ Installation
- ✧ Controlling Board
- ✧ Machine connection

Installation

- This machine should be mounted through the screw holes of truss. Safety rope is a must to fix fixture well. Make sure truss and safety rope have strong load capacity to bear more than 3 times of machine weight .
- This machine should be installed by qualified technician.



Controlling Board



Front display panel




- 1. LED Display Panel
- 2. Button

MENU	Switch menu function
UP	Scroll upwards
DOWN	Scroll downwards
ENTER	Confirm by pressing ENTER


- 3. DMX Signal Input
3 PIN XRL port for DMX512 signal input (daisy chain);
- 4. DMX signal output
3 PIN XRL Port for DMX512 signal output (daisy chain);
- 5. Power Input
AC power cable port input(daisy chain)
- 6. Power Output
AC power cable port output;(daisy chain)

Machine Connection

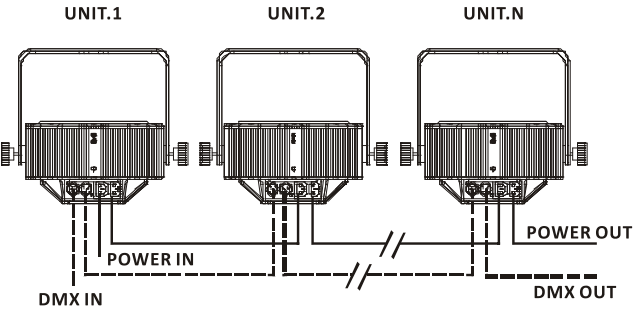

Cable Connectors

 Cables must have a male XLR connector on one end and a female XLR connector on the other end.



A word on termination: DMX is a resilient communication protocol, however errors still occasionally occur. Termination reduces signal errors, and therefore best practices include use of a terminator in all circumstances. If you are experiencing problems with erratic fixture behavior, especially over long signal cable runs, a terminator may help improve performance.



To build your own DMX Terminator: Obtain a 120-ohm, 1/4-watt resistor, and wire it between pins 2&3 of the last fixture. They are also readily available from specialty retailers.

Master and slave: select one machine as master, press the menu to choose the function you want. Press other machines' address to be DMX state. Use signal cable to connect machines one by one. Then slave machines will run the same as master machine.

Use controller to control lot of machines: if all machines are set the same menu data, or different menu data, after use signal cable to connect to controller, all machines will be controlled by controller. (before connect to controller, all machines should be in the same channel mode 5ch or 9ch).

ATTENTION:

Maximum 8PCS fixtures connected by Daisy chain connection.

Section 3. Troubleshooting

Problem	Probable Cause(s)	Remedy
No response from fixture when power is applies	No power to fixture	Check power cables
	Primary fuse blown	Replace fuse
	Secondary fuse blown	Replace fuse
Fixture resets but does not respond correctly to controller(DMX mode operation)	Controller not connected	Connect controller
	Incorrect addressing of the fixtures	Check address setting on fixture and controller
	Bad data link connection	Inspect cables and correct poor connections and/or broken cables.
	Conflict between tracking and vector control	Eliminate scene cross-fade on controller
	Data link not terminated	Insert termination plug in output of last fixture

	Defective fixture or 2 devices transmitting on link	Bypass fixtures one at a time until normal operation is regained: unplug both connectors and connect them directly together
Colors cannot be mixed	Random color mixing is on	Turn off random color mixing
Fixture does not reset correctly	Electronic or mechanical failure	Contact service technician
No light, lamp cuts out intermittently, or burns out too quickly	Lamp missing or blown	Disconnect fixture and replace lamp
	Fixture or lamp is too hot	Allow fixture to cool. If problem persists, contact service technician

Section 4. Reference

- ✧ Control Menu
- ✧ DMX Protocol
- ✧ Specification

Control Menu

No.	Menu	Function Specification (Press" ENTER")	
1	R---	r000 to r255 : from dark to bright	The 4 color's different brightness can mix out all kinds of color
2	G— —	g000 to g255: from dark to bright	
3	B---	b000 to b255: from dark to bright	
4	N---	n000 to n255: from dark to bright	
5	C---	C000 to C255: 7 color shade speed, from slow to fast	
6	J---	J000 to J255: 7 color skip speed , from slow to fast.	

7	FS---	FS00 to FS09: choose flashing color	
8	F---	F000 to F255: flash speed, from slow to fast	
9	LS---	LS00 to LS09: choose color	
10	L---	L000 to L255: 7 color from dark to bright	
11	U---	U00 to U255: sound active speed, from slow to fast	
12	A— —	A000 to A255: auto speed, from slow to fast	
13	D9CH	DMX 9 channel mode, should connect with DMX controller	
14	D5CH	DMX 5 channel mode, should connect with DMX controller	

CH7	Color mix	Seven color mix
CH8	Auto	0-60: shade ; 61-120: skip ; 121-180: shade+skip ; 181-240: flash by sound ; 241-255: skip by sound
CH 9	Auto Speed	DMX8 Channel auto speed & sound volume adjust(from slow to fast)

DMX protocol

DMX512 Channel Chart: (5CH)

CH	Function	Specification
CH1	Dimmer	R G B W color from dark to bright
CH2	R dimmer	Red color from dark to bright
CH3	G dimmer	Green color from dark to bright
CH4	B dimmer	Blue color from dark to bright
CH5	W dimmer	White color from dark to bright

DMX512 Channel Chart: (9CH)

CH	Function	Specification
CH1	Dimmer	R G B W color from dark to bright
CH2	R dimmer	Red color from dark to bright
CH3	G dimmer	Green color from dark to bright
CH4	B dimmer	Blue color from dark to bright
CH5	W dimmer	White color from dark to bright
CH6	Strobe	7 color flash speed, from slow to fast

Specification

Voltage: AC110V-240V

Frequency: 50/60Hz

Machine Power: 180W

LED power: 3W

LED QTY: 54pcs (R12 G14 B14 W14)

Beam Angle: 30°

Control Mode: DMX512/Auto/Manual/Sound Active

Channel: 9/ 5CH (switchable)

Indoor: IP20

Net weight:2.8kg

Size:26*26*11.5cm(excluding the bracket)



保 修 卡

Protection to Fix Card

非常感谢您使用我们的产品

1. 本产品从购买日起，正常操作使用并未经拆修，经保修人员确认属产品质量问题，一年内享受保修服务，在任何正常情况下均提供维修。
2. 保修卡应在购买时予填写。保修卡无本公司保修章无效。产品维护时请带保修卡。

Very thank you for using our products

1. This product from the acquisition, normal operation and all the parts inside the, the warranty of quality products confirm asked problem, enjoy a year warranty service, in any normal maintenance are available.
2. The warranty card when buy should be to fill in. Without this company product warranty chapter ss invalid. Please bring the product maintenance warranty Card.

顾客姓名 Customer Name	购买日期 Purchasing Date	产品型号 Product Model	购买商 Purchaser
保修记录： Warranty record			

广州市雅格莱灯光音响设备有限公司

Guangzhou City Ya Ge Lai Lighting&Audio Equipment Co.,Ltd.

地址：广州市白云区人和镇东华工业区东昌路6号

Address:No.6., Dong Chang Road ,Dong Hua Emigrant Industrial Park , Ren He Town, Baiyun District, Guangzhou City, Guangdong province, China.



合格证

CERTIFICATE

本产品经检验符合技术条件, 准予出厂:
The product Has Been Tested According To Technical Requirements And Passed:

检验员 _____

本公司有权对此份产品说明书进行修改, 恕不另行通知。

Our company reserve right to revise this user manual without notice!

Innovation | Efficiency | Dedication | Harmonious