
Instruction of Manual

Before use, please take out the Insulated Sheet

Place the remote control face down on a horizontal flat surface and use the opener or Coin to release the battery compartment cover by rotating it in an anti clockwise direction.

Set the battery cover and opener to one side.

Rest one finger lightly on the battery and pull the printed tag to ease the anti clockwise direction. insulating film from underneath the battery. Try to avoid touching the black O-ring as it is coated with light grease.

Replace the battery cover and lock it back in place using the opener or coin.

How to set up your Device

1, Press and Hold the device button: TV or SAT or DVD about 3 seconds until the LED Lighting ON.

2, Enter your device code from the manufactures list, e.g. 376

3, If the code is valid, the led will blink 2 times and saved, back to normal situation

4, If the vode is in-valid, the led will blink and keeping lighting on.

How to Manual Searching your device code

Before searching, please make sure the device you want to set up is power ON.

1, Press and Hold the device button: TV or SAT or DVD about 3 seconds until the LED Lighting ON.

2, Press CH- (forward) or CH+ (backward) to searching

3, Once the device POWER OFF, press OK or TV/SAT/DVD device key to save

How to Auto Searching your device code

Before searching, please make sure the device you want to set up is power ON.

1, Press and Hold the device button: TV or SAT or DVD about 3 seconds until the LED Lighting ON.

2, Press POWER button and release, remote will to auto searching

3, Once the device POWER OFF, press OK or TV/SAT/DVD device key to save

How to Programm/Learning from your origin remote control

1, Before set up learning, Place the original remote control and the learning remote control **roughly 10 mm apart facing 'head-to-head' with each other.**

2, On the learning remote control press and release the required device button, TV (TV), satellite (SAT) or DVD (DVD) as appropriate.

3, Press and hold the SET (SET) button on the learning remote control until the red light lights and remains lit. The remote control is now in learning mode.

If the red light does not turn on, go back to step 2 and try again.

4, On the learning remote control press and release the button that is to be programmed. The red light will flash rapidly.

5, On the original remote control, press and hold the button that is to be learned.

When the red light on the learning remote control flashes three times and then remains lit the code has been learnt. If the red light does not flash, repeat steps 4 and 5.

Note: If step 5 is not completed within 15 seconds the learning remote control will exit learning mode and the light will stop flashing.

6, Repeat steps 4 and 5 to program other buttons.

7, Once the required buttons have been programmed press the SET (SET) button again on the learning remote control to exit learning mode.

Deleting All Button Programmes for One Device

1 Press and release the appropriate device button TV (TV), satellite (SAT) or DVD (DVD) to select which device's programs are to be deleted.

2 Press and hold the chosen device button together with SET (SET) button until the red light flashes three times.

3 All of the programmed buttons for the chosen device have now been cleared of their programming.

Deleting programs from buttons does not delete any three digit brand code which has been entered.