

# **Waterproof**

---

## **Cable/TV/SAT/DVD Universal Remote with Learning**

LPI-W053-UPRCU V4.0

## **User's Guide**

2018-10-30 [www.Lpinte.com](http://www.Lpinte.com)

Technology email: [info@Lpinte.com](mailto:info@Lpinte.com)

The LPI-W053-UPRCU V4.0 universal learning splashproof remote control has an IP67 waterproof rating allowing use in wet areas and even floats when dropped in the bath.

The 4 in 1 remote control is designed to allow the user to control up to three different devices by using the TV, SAT and DVD buttons to select which device is to be controlled

It is pre-programmed with over 2000 codes for TV's, Satellite Receivers, DVD players and VCR Recorders. Auto search or direct entry makes it easy to select the pre-programmed brands.

The remote control also has the facility to directly learn remote control codes from other infrared remote controls. This allows the remote control to learn up to 48 functions for each chosen device. The remote control can be used in replace of the Sky™ satellite receiver remote control. Enabling control of both the Sky™ satellite receiver and others from a single remote control

IR codes from any other IR Remote Control can be copied with the head to head learning function and assigned to any button except SET/CABLE/TV/SAT/DVD five buttons.

One more smart function is that after you learnt the 1<sup>st</sup> remote from any ORIGIN remote one button by one button, you no need learning the 2<sup>nd</sup> like previous intricacies one button by one buttons. You only set up one step that help you easy copy full codes from the 1<sup>st</sup> learnt remote.

The remote control requires CR2032 battery (included) and easy programming to control your devices. For best results, please read and perform all instructions listed here. Also, keep these instructions for future reference.

# Table of Contents

## **Features and Functions**

Key Charts

Activating the Remote Control

Replace battery

DEVICE TABLE

Set up your components

Enter a brand code

Searching for your code

Manual Searching

Auto Searching

Checking/Recalling the code

MANUAL PROGRAMMING AND PROGRAM DELETION

ONE STEP COPY BETWEEN LEARNING REMOTES

Troubleshooting

## **Manufacturer's Codes**
























Setup Codes for TVs

Setup Codes for Satellite Receivers

Setup Codes for DVDs

Setup Codes for Cables


## Features and Functions Key Chart

PHOTO	ICON	Description	RE-Program mable
 <p>WATERPROOF REMOTE CONTROLLER LFE-W053-UPRCU V4.0</p>		When the LED(red) blinks,the remote is working and (after programming) is sending signals	N/A
		Press POWERonce to turn on or off the selected device	YES
		Push to once to turn the sound off or on	YES
		Spare for learning others device power On/Off, e.g. STB, Led Bulb On/Off	YES
	<b>SET</b>	Use SET for all programming sequences	<b>NO</b>
		Device button and each working led indicator	<b>NO</b>
		-/-- 3 digital numbers or EPG Guide	YES
	<b>MENU</b>	Press to display your selected device' main menu	YES
		UP/LEFT/RIGHT/DOWN Moving	YES
		Push to confirm a selection or guide	YES
		TV/AV exchange or Input source select	YES
	<b>EXIT</b>	Push to exit current menu	YES
		RGYB color adjustable	YES
		Rewind	YES
		USB or PAUSE	YES
		PLAY/PAUSE	YES
		FAST FORWARD	YES
		RECORD	YES
		set the sleep timer on a selected device	YES
		STOP	YES
		Push to display information or PVR list	YES
	<b>VOL+/-</b>	Push to inrease or decrease volume	YES
	<b>Numbers</b>	Use the keypad (1~ 9and 0)to directly select channels	YES
	<b>CH+/-</b>	Push to go up or down channel numbers	YES
		Skip Back or to previous page	YES
		Skip Forward or to next page	YES
		Subtitle or view mode	YES
	<b>HOME</b>	Homepgae	YES
		Push to displaysub-titles or closed captions	YES
		AV MODE	YES
<b>AUDIO</b>	Push to preset audio	YES	
<b>BACK</b>	 Push to return previous page in menu	YES	
<b>FAV</b>	Push to display Favor Channel or contents	YES	
<b>GUIDE</b>	Push to disply guide	YES	

## Activating the Remote Control

Before the remote control can be used an insulating plastic film must be removed from beneath the battery. Place the remote control face down on a horizontal flat surface and use the coin to release the battery compartment cover by rotating it in an anti-clockwise direction. Set the battery cover and opener to one side.

Rest one finger lightly on the battery and pull the printed tag to ease the insulating film from underneath the battery. Try to avoid touching or loss the black O-ring as it is waterproof guarantee. Replace the battery cover and lock it back in place using a coin.

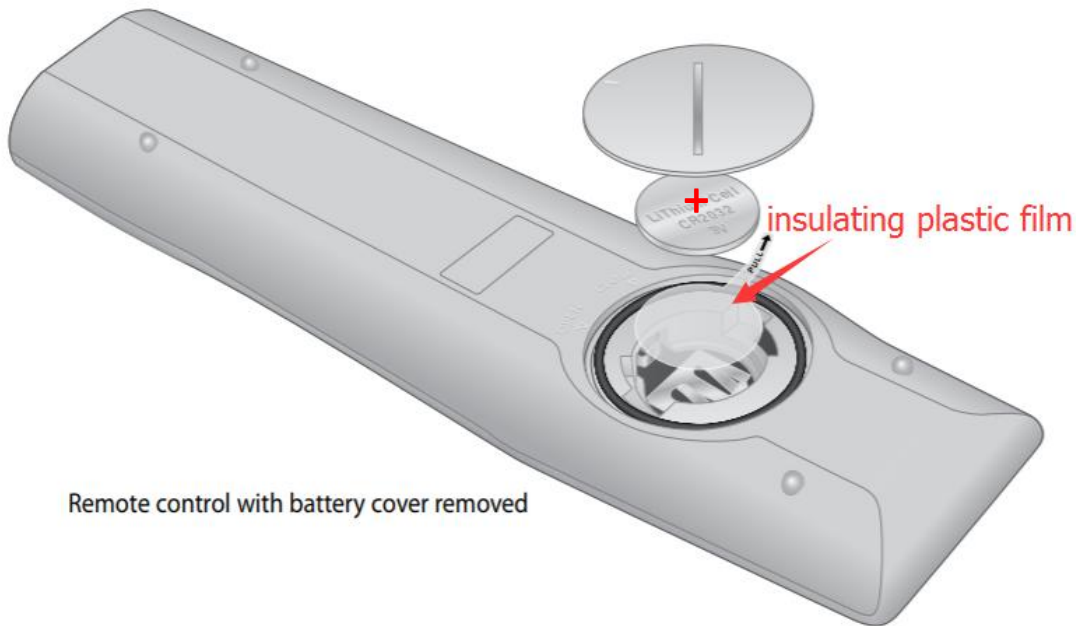

Remote control with battery cover removed

## Replacing the Battery

Place the remote control face down on a horizontal flat surface and use the coin to release the battery compartment cover by rotating it in an anti-clockwise direction. Set the battery cover and coin to one side. Carefully remove the old battery and dispose of it safely.





Try to avoid touching the black O-ring as it is waterproof guarantee.

Insert the new CR2032 battery (recommend Sony/Panasonic brand) with the positive (+) side upwards. Replace the battery cover and lock it back in place using a coin.

## DEVICE TABLE

**NOTE:** Please refer to the table below when performing the instructions in "Setting up Your Components"

After programming, the Universal Remote Control with Learning will be able to control the following types of devices:

DEVICE KEY	CONTROLS THESE DEVICES
	TV,HDTV, LCD TV, MIRROR TV, PLASMA TV,HT Projector and others IR codes device
	Satellite, SKY,SAT-DVR,DTV Setup Box,TV, AUX and others IR codes device
	DVD,DVD Recorder,DVD-DVR,TV,AUX and others IR codes device
	Cable Box,TV, AUX and other IR codes device










## SETTING UP YOUR COMPONENTS

### Entering a Brand Code

Your CODE RECORD

TV	DVD	SAT	CABLE

To control devices other than the default brands, perform the following steps; otherwise skip this section:

1. Press and hold the device button  or  or  or  that you wish to control about 13 seconds until the device and master red led stays on.
2. Use the Manufacturer's Codes to locate the type of device and brand name, e.g. TV 379
3. Enter the three-digit code 3-7-9 for your device use number buttons 0~9.
4. As each digit is entered the red light will flash once and then remain on.
5. If the three digit code is correct the red light will blink twice and then go off.  
If the three digit code is incorrect the red light will remain on wait for new 3 digit codes.
6. you can Press any  or  or  or  or  to EXIT.

Note:

If no codes enter more than 15 seconds, the LED will off and auto exit code entry mode.











If the three digit code is correctly, the LED indicator blink twice and then off.

If the three digit code is invalid, the LED will keeping ON and waiting for enter new code.


















Also Entering a three digit code will delete/erase the programmed buttons for that device.

## SEARCHING FOR YOUR CODE

### Auto Searching Codes

1. Switch the chosen device (TV, satellite receiver, DVD recorder/player/cable) that you wish to find the code for, to **ON**. When the correct code has been found the device will switch OFF.
2. Press and hold down the  or  or  or  button about 13 seconds until the red light stays on, then release the button.
3. Press the power button () once and release, this will start the auto search mode.
4. When the device switches OFF. Immediately press and release ok () button or the device button ( or  or  or ) that was initially selected, to save the code in the remote control. When the red light switches off, all the codes have been tried and the auto search mode has been exited. One cycle will take about 15~20 minutes.
5. To exit the auto search mode before all the codes have been tried, press and release the device button that was initially selected.
6. To learn which three digit code has been set to control the device see Checking/Recalling the Device Code.






### Manu Searching Codes

1. Switch the chosen device (TV, satellite receiver, DVD recorder/player/cable) that you wish to find the code for, to **ON**. When the correct code has been found the device will switch **OFF**.
2. Press and hold down the  or  or  or  button about 13 seconds until the red light stays on, then release the button.
3. Press CH+ () or CH- () once and release. Each time CH+ () or CH- () is pressed a code is transmitted. To perform a fast search, press and hold down CH+ () or CH- () button. When the device switches OFF, release the CH+ () or CH- () button.
4. Press and release ok () button or the device button ( or  or  or ) that was initially selected to save the code in the remote control.
5. To learn which three digit code has been set to control the device see Checking/Recalling the Device Code.

Note: Also you can hold CH+ () or CH- () as fast searching until device POWER OFF.


## Checking/Recalling the code

To find out which three digit code is controlling any device:

- 1 Press and release the device button: (  or  or  or  ) for which you want to find the code.
- 2 Press the same device button again, together with the OK (  ) button and release both buttons.
- 3 The red light will flash.
- 4 Count the number of flashes for each digit in the three digit code.
- 5 The red light will remain off for a short time between numbers.
- 6 When all three numbers have been flashed the red light will remain off.

One Flash = 1	Two Flashes = 2	Three Flashes = 3
Four Flashes = 4	Five Flashes = 5	Six Flashes = 6
Seven Flashes = 7	Eight Flashes = 8	Nine Flashes = 9
Ten Flashes = 0		

For example:

Press and release the SAT (  ) button.

Press and release the SAT (  ) and OK (  ) buttons.


The remote control would then show two flashes (2), pause, eight flashes (8), pause, and one flash (1), to confirm the three digit code of 281.

Write down the device's code 3 digits in the appropriate code boxes.

TV 1		DVD 1		SAT 1		Cable 1	
TV 2		DVD 2		SAT 2		Cable 2	
TV 3		DVD 3		SAT 3		Cable 3	

## Entering a Sky™ Satellite Receiver Code

Refer to Entering a Brand Code.

Press and hold down the satellite SAT (  ) device button until the red light stays on, then release the device button. Enter the 3 digit code. 192, 288 to 294 inclusive.  
Test the functionality of the control of the Sky™ satellite receiver








The Universal Remote Control with Learning includes a Learning feature so you can add functions that are unique to your home entertainment devices. However, there are some considerations.







**NOTE:** Please have your original remote controls handy before programming learning. Be sure to press each teaching key within 5 seconds of the previous entry. Otherwise, the Universal Remote Control with Learning exits the learning mode.

## MANUAL PROGRAMMING AND PROGRAM DELETION

High levels of ambient light such as natural sunlight or energy efficient fluorescent lights should be avoided when manually programming the remote control. Any button other than the device buttons

( or  or  or ) TV, SAT and DVD and the SET () button can be manually programmed.

### MANUALLY PROGRAMMING A BUTTON

1. Place the original remote control and the learning remote control roughly 10 mm apart facing head-to-head with each other. On the learning remote control
  2. Press and release the required device button ( or  or  or ) as appropriate.
  3. Press and hold the SET () button about 13 seconds on the learning remote control until the red light lights and remains lit, then release the button. The remote control is now in learning mode. If the red light does not turn on, go back to step 2 and try again.
  4. On the learning remote control press and release the button that is to be programmed. The red light will flash rapidly.
  5. On the original remote control, press and hold the button that is to be learned. When the red light on the learning remote control **flashes three times and then remains lit** the code has been learnt. If the red light does not flash, repeat steps 4 and 5.
- Note: If step 5 is not completed within 15 seconds the learning remote control will exit learning mode and the light will stop flashing.
6. Repeat steps 4 and 5 to program other buttons.
  7. Once the required buttons have been programmed press the SET () button again on the learning remote control to exit learning mode.



10mm











ORIGIN REMOTE

1<sup>st</sup> Learnt Remote call Master

FULL BLANK LEARNING CODE

TV	DVD	SAT	CABLE
389	272	296	297

## ONE STEP COPY TO ANOTHER LEARNING REMOTES

1. Set up learnt remote(Master), Press and release the required device button (  or  or  or  ) as appropriate. E.g. TV button
2. Press and hold the SET (  ) button, together with the Up arrow (  ) button and release, the red light will stay on. The master remote transmitting codes.
3. Set up the learning remote control, Press and release **the same device button** as master remote.
4. Press and hold the SET (  ) button, together with the Down arrow (  ) button and release, the red light will stay on. The learning remote receiving codes from master remote.
5. Place the MASTER remote control and the learning remote control roughly 10 mm apart facing "head-to-head" with each other. After the two remotes establishing a connection, red light will flash and sending signals. During this period, do not move the remote.






Note: Entering a three digit code will delete/erase the programmed buttons for that device.



First Master one: SET (  ) + Up (  )

Then Learning one: press SET (  ) + Down (  )

## Deleting All Button Programmes for One Device

1. Press and release the appropriate device button (  or  or  or  ) to select which device's programs are to be deleted.
2. Press and hold SET (  ) button, together the chosen device button until the red light flashes twice times. That all of the programmed buttons for the chosen device have now been cleared of their programming.

**Deleting programs from buttons does not delete any three digit brand code**

## TROUBLESHOOTING

Problem	Solution
The red light flashes five times after a button is pressed.	Replace the battery with a new type CR2032 battery.
The red light does not flash when any button is pressed.	Replace the battery with a new type CR2032 battery.
The red light does not flash when a 'programmed' button is pressed.	The button has not been programmed or has not been programmed correctly. Program the button.
The red light stays on and all buttons no action	Take out battery and then re-put in to reset
The remote control does not operate a device correctly or some commands are not working	Try all listed codes for the device as shown in the control code pdfs or program the buttons from the device's own remote control.
During learning the red light does not flash three times or stays on for a long time after pressing a button to be learnt.	Memory is full or a bad capture has occurred. For optimum learning, avoid high levels of ambient light such as natural sunlight or energy efficient fluorescent lights. Try adjusting the position of the remote controls before performing the procedure again.

Manufacturers Codes as .xls files