

Bluetooth audio amplifie

BL-4225



Controls And Functions -----

What's In The Box? -----

Support -----

User Manual -----

Using the AUX IN Cable -----

Using the MP3 Link Connection (Line In) -----

Connecting to the Mains Supply -----

Using the Bluetooth Operation -----

Using the USB Operation -----

Using the FM Mode -----

 
Troubleshooting -----

Specifications -----

Quick System Installation Guide -----

Safety Information -----

Side View/Control Buttons

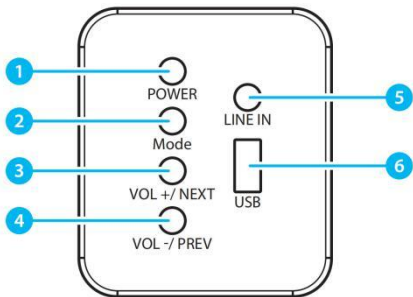

- | | |
|-------------------|---------------------|
| 1. Power | 4. Volume-/Previous |
| 2. Mode | 5. Line In |
| 3. Volume +/-Next | 6. USB Function |

Remote Control

10. **Power On/Off**
Switch the unit between on and Standby mode
11. **Volume +**
Press to increase the volume
12. **Back Step**
Use in AUX or Bluetooth mode to go back a track.
13. **Play/Pause**
Press to play and pause
14. **Volume -**
Press to decrease the volume
15. **Bass Increase**
Press to increase the bass
16. **EQ**
Press the button to adjust the equaliser. Press and **hold** the button to turn the soundbar LED light on and off.
17. **Bass Decrease**
Press to decrease the bass
18. **MODE**
Press button repeatedly to switch between soundbar modes
19. **Forward Step**
Use in AUX or Bluetooth mode to go forward a track
20. **Treble Increase**
Press to increase the treble
21. **Treble Decrease**
Press to decrease the treble

Using the Remote Control

The remote control sensor at the front of the soundbar is sensitive to the remote control's commands up to a maximum of 8 metres away and within a maximum arc of 30 degrees.

Please note that the operating distance may vary depending on the brightness of the room.

Box Contents

1. BL-4225 Soundbar
2. Remote Control
3. Power Adapter x 1
4. AUX IN Cable
5. Optical Cable
6. User Manual
7. 3.5mm to 3.5mm Line In Cable
8. 2 x Screws
9. 2 x Expanded Rubber Stopper

 


1. BL-4225 Soundbar



2. Remote Control

In Cable



3. Power Adapter



4. AUX IN Cable



5. 3.5mm to 3.5mm Line In Cable

Support

Thank you for your purchasing the BL-4225 Soundbar.

Please follow the guidance of the user manual to set up your new purchase and begin enjoying its features.

Using the AUX IN Cable

Use the AUX Stereo Audio Cable (included) to connect the TV's stereo AUX (L/R) audio output socket.

Connect the audio output cable of the soundbar via the 'AUX' input sockets of the unit.

Then press **MODE** on the remote control (**Rem.18**) or press the Mode button on the unit to scroll to the AUX IN function.

Turn on your television

Troubleshooting: If you are not receiving a picture or encountering interference, please ensure that the AUX cable is being connected to 'output' AUX port on your TV set. This will ensure that the sound is being exported correctly.

If your TV does not have 'output' AUX port, please use an alternative connection method.

AUX stereo audio cable



Rear view of the unit

Specifications

Power Supply	DC 16.8V / 2A
Power Consumption	40W
Power Output (RMS)	20W
Working environment (Temperature)	-10~ + 55C
Relative Humidity	5% ~ 90%
Frequency Response	+/- 3dB
Bluetooth Audio reception signal	V5.0
Bluetooth signal to audio amplification output	R out-40W L out-40W Optimum 40hm 40W speaker
Built in lithium battery Working hours up to 8 hours	16.8V4000mha

Using the MP3 Link Connection (Line In)

 
Plug one end of a 3.5mm to 3.5mm Line In cable (included) into the Line In port on the unit. Before use, disconnect any cables connected to the Stereo RCA Inputs.

Plug the other end of the cable into the audio output/headphone output on an MP3 player or other audio source.

Press the Power button on the soundbar or POWER button directly on the remote control (**Rem.10**) to switch on the unit.

Press the Mode button repeatedly on the soundbar or press the MODE button on remote control (**Rem.18**) repeatedly to enter LINE in mode.

Audio played through the connected device will now be heard through the speakers.

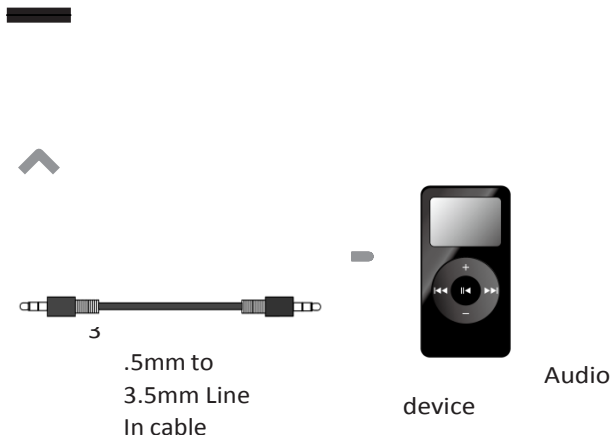

Connecting to the Mains Supply

Ensure that the power supply voltage is in the voltage of 100V~240V.

This unit is designed to use adapter.

Connecting the unit to any other power source may cause damage to the unit.

Unwind the mains cable to its full length.

Connect the mains plug to a mains socket.

Make sure the mains plug is fully inserted into the mains socket.

Connect the adapter to the unit via the DC input Socket.
(DC-16.8V-IN)



DC-in Power Cable

Ensure all audio connections of the unit are connected before connecting to the mains power socket.

Unplug the power cord from the outlet when the unit is use for an extended period of time.

Using the Bluetooth Operation

Pairing a Bluetooth Device for the First Time

Press the POWER button on the unit or the POWER button on the remote control (**Rem.10**) to switch on the unit.

Select and press the MODE button repeatedly on the remote control until in Bluetooth mode (**Rem.18**) or press the Mode button repeatedly on the sound bar to enter Bluetooth mode.

Using the native controls on your Bluetooth device, select the “BL-4225” in your Bluetooth settings to pair.

Refer to the user manual for your specific device for instructions on pairing and connecting Bluetooth devices.

When successfully paired and connected, a beep will issue from the unit. After initial pairing, the unit will stay paired unless unpaired manually by the user.

If your device should become unpaired or you find it is unable to connect, repeat the above steps.

Playing Audio Wirelessly

Follow the instructions for pairing a Bluetooth device.

Use the native controls on the connected Bluetooth Device to select a track.

To Play/Pause the track or Skip Forwards/Backwards to a selected track, use the remote control (**Rem.12,13,19**).

Audio played through the connected Bluetooth device will now be heard through the speakers.

Using the USB Operation

Insert USB to Play Music Automatically.

Select and press the MODE button repeatedly on the remote control until in USB mode (Rem.18) or press the Mode button repeatedly on the soundbar to enter USB mode.

To Play/Pause the track or Skip Forwards/Backwards to a selected track, use the remote control (**Rem.12,13,19**).

Audio played through the connected USB device will now be heard through the speakers.

Using the FM Mode

Select and press the MODE button repeatedly on the remote control (**Rem.18**) or press the Mode button on the soundbar repeatedly to enter FM (White) mode.

Ensure that the wire aerial on the back panel of the soundbar is extended.

When on FM mode, press and **hold** the 'Play/Pause' button on the remote (**Rem.13**) or on the soundbar to begin searching for available FM stations.

After the search is complete, the soundbar will save the stations with good signal. To scroll through these saved stations, press the 'Previous/Next' buttons on the remote control (**Rem.12/19**).

Please note:

If you are having trouble with receiving stations, complete another auto-scan and adjust the aerial if needs be.

