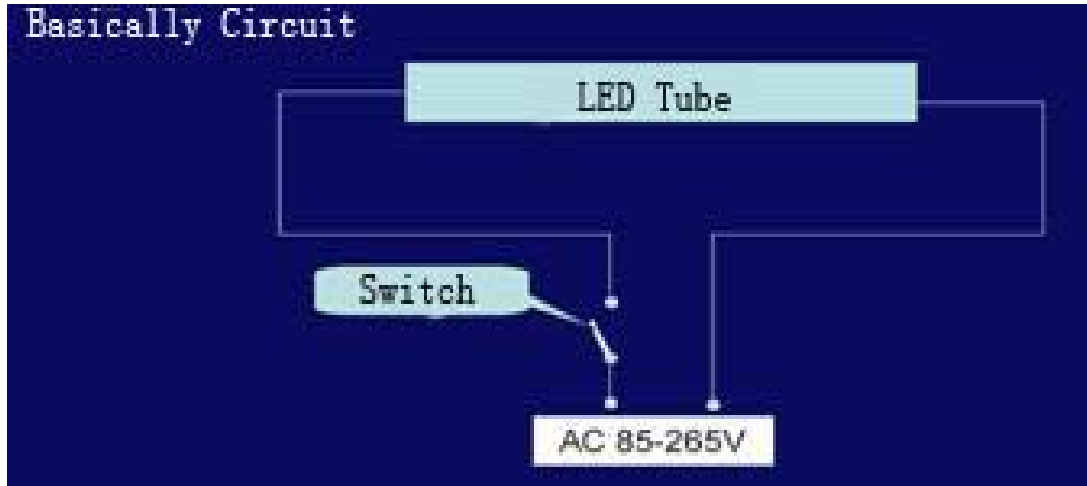



PRODUCT SPECIFICATION

Installation Manual:** Basically Circuit**

- When installing the LED Tube to the conventional fluorescent tube hanger, please pay attention to the conventional tube hanger.

A* When installing LED tube to Inductive ballast tube hanger:

1* Take out the starter from the inductive ballast tube hanger.

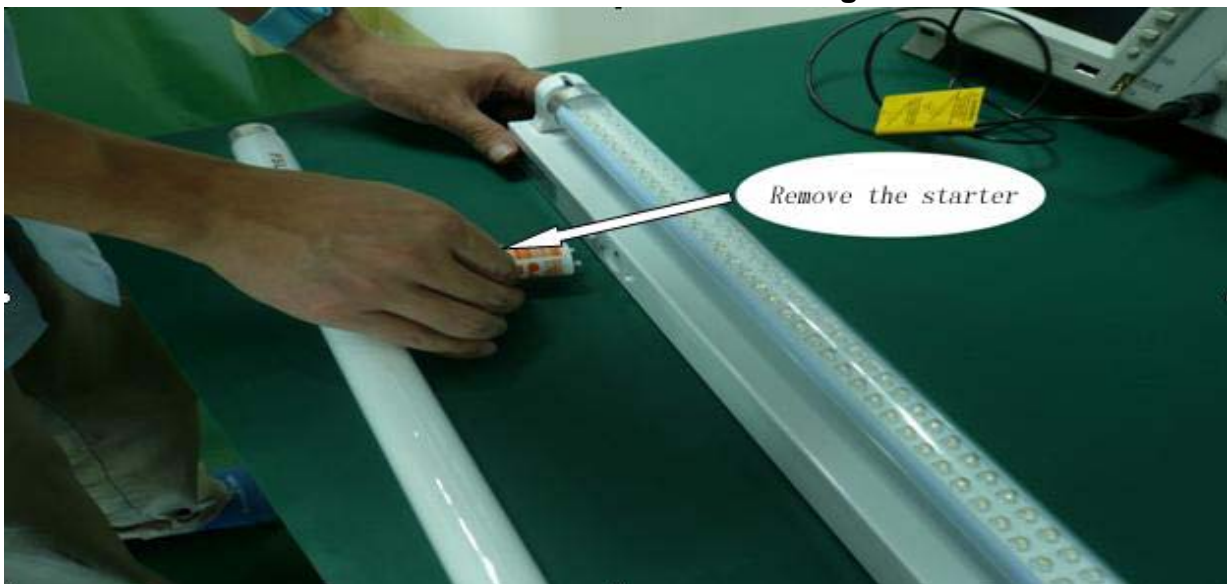

Address:

6/F,2th building of Hua Feng Technical Industrial Park ,Xi Xiang Town of Bao An District ,Shen Zhen

Attn: Charile Zha


Mobile :86-13510504966

Tel: 86-755-29455481

Fax: 86-755-29082009

E-mail: 356LED@gmail.com

Website: [Http://www.ks-lighting.cn](http://www.ks-lighting.cn)

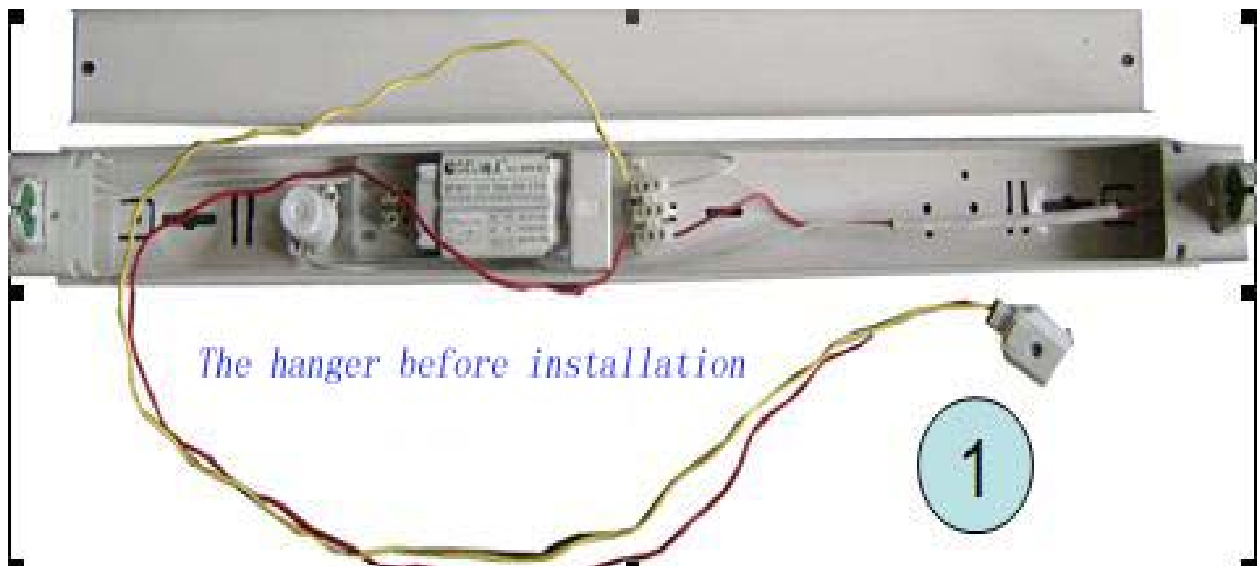PRODUCT SPECIFICATION**2* Install the LED tube into the inductive ballast tube hanger directly****B* Installing LED tube to Electronic ballast tube hanger:****1. The tube hanger before the installation****Address:**

6/F,2th building of Hua Feng Technical Industrial Park ,Xi Xiang Town of Bao An District ,Shen Zhen

Attn: Charile Zha

Mobile :86-13510504966

Tel: 86-755-29455481


Fax: 86-755-29082009

E-mail: 356LED@gmail.com


Website: [Http://www.ks-lighting.cn](http://www.ks-lighting.cn)

PRODUCT SPECIFICATION

2* Take out the starter & electronic ballast from the tube hanger.

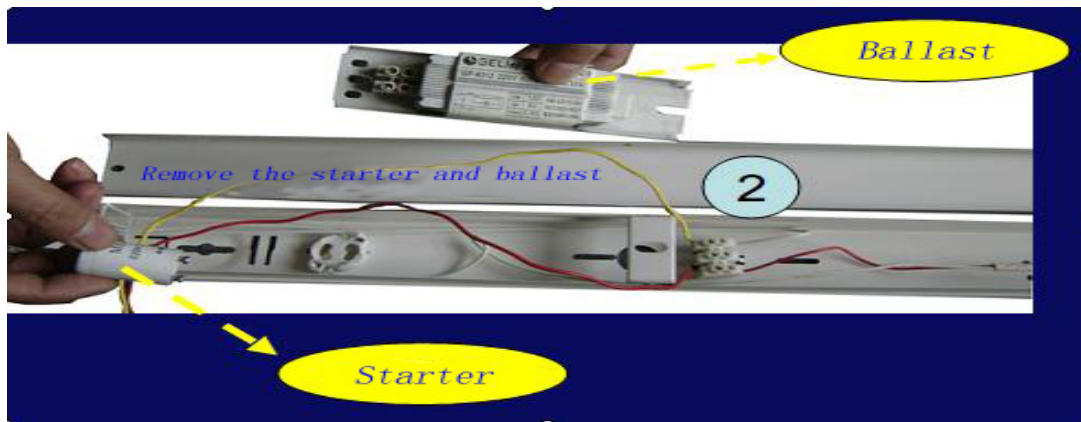

3* Connect the anode / cathode directly

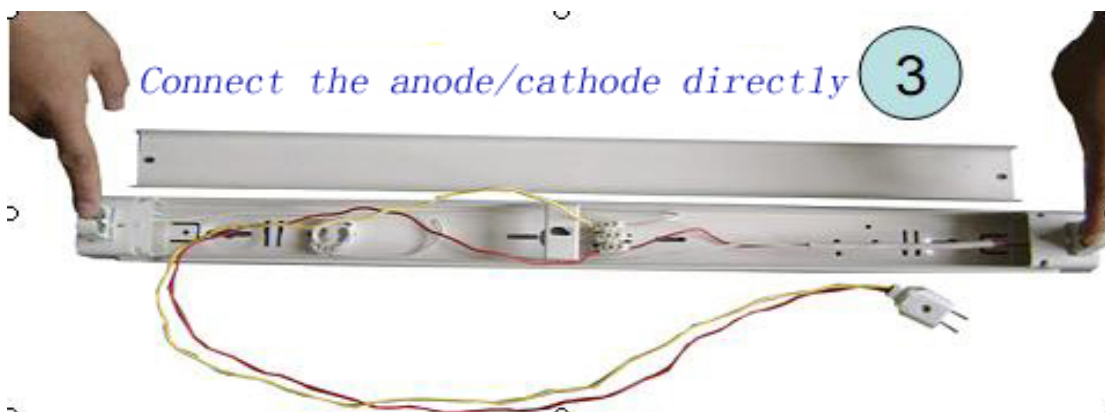

4* Put the tube into the Hanger directly for the operating .



Address:

6/F,2th building of Hua Feng Technical Industrial Park ,Xi Xiang Town of Bao An District ,Shen Zhen

Attn: Charile Zha

Mobile :86-13510504966

Tel: 86-755-29455481

Fax: 86-755-29082009

E-mail: 356LED@gmail.com

Website: [Http://www.ks-lighting.cn](http://www.ks-lighting.cn)