



热升华转印机

Heat Transfer Printing Machine

操作说明

Operational Instruction



东莞市至上印花机械有限公司

Best Printing Machine Limited 29-1

Website: [Http://www.zsheatpress.com](http://www.zsheatpress.com)

Email: sales@zsheatpress.com



前言 Preface

- 非常感谢您选用至上印花机械滚筒式升华转印机器。
 - 本手册为您介绍热转印机器的安装、操作、功能设置和故障诊断、排除等事项。
 - 不正确的安装和使用可能会导致热转印机的损坏或发生其他意外事故。在装机之前，请务必详细阅读本手册并正确安装和使用。
 - 转印机长期运行在工业场合中，由于环境的温度、湿度、粉尘及操作的影响，机器本身的器件的老化及磨损等原因，都会导致转印设备潜在故障的发生，因此有必要对本设备进行日常和定期的检查与维护。
 - 在使用过程中遇到疑难问题时，请和本公司的技术服务部联系。
-
- Thanks for choosing our new designed Best brand heat-transfer machine.
 - This manual will lead you to know how to install, operate, set the function, and fault diagnosis to exclude such matters.
 - Incorrect installation and use may cause damage to the heat transfer machine or other accident occurs. Installed before, be sure to carefully read this manual and the correct installation and use.
 - The machine need inspection & maintenance every week, to make sure it works well and find some problem before it happened.

简介 Introduce

ZS 系列型滚筒式升华热转印印花设备,采用导热油层周边电加热发热导流的原理设计制造,升温快,筒体表面温度均衡稳定,毯带脱离等合理的机械结构,配用三相变频调速装置,使整机操作简单,维修方便,转印效果达到最佳,广泛适用于国内外数码印花行业.

ZS Heat-transfer Machine, enjoy a good reputation as it's steady temperaturere system, great quality, easy to operate, and fast feedback after-sale service team. Our product is used in everywhere of the world, bring much profits to our client.

注意事项 Announcements

- 本说明书提供给客户安装调试,参数设定,故障诊断及操作使用的有关注意事项,务请妥善保管.
- 在安装调试使用前,请您仔细阅读本说明书,以免由于误操作而引起设备,甚至人身安全事故损失.
- 用户必须按照本机额定功率选配供电导线和安装专用漏电保护开关.
- 开机前机器外表必须牢固单独接地线,否则可能造成严重的人身伤害事故.
- 本机器必须安装在通风、光亮的场所.机器周围不得少于 1.5 米空间,垂直水平安装.
- 工作中发生异常情况应立即停机检查.同时应把毯带脱离滚筒,并用风扇帮助散热冷却,防止损坏毯

东莞市至上印花机械有限公司

Best Printing Machine Limited 29-2

Website: [Http://www.zsheatpress.com](http://www.zsheatpress.com)

Email: sales@zsheatpress.com



带.

- 操作人员必须严格遵守机器各部位的禁令标志进行操作.
- 机箱内的控制线路上及变频器上, 平常应保持清洁, 不能有灰尘等金属导电物品掉入。转电器保护罩不得打开, 小心触电。
- 需更换发热体、减速机、导热油等, 必须采用本公司专用型号, 不得私自更改、更换。
- 发热筒体外表经过特殊处理不得用腐蚀性液体擦洗及有硬物进入划伤。
- 关机时确保温度低于 80 度以下, 方可关掉总电源
- 机器运转时一定要有人在位, 停电时及时把毛毯与滚筒完全分离
- 机器原料进出口请不要堆放杂物, 以免被滚筒卷入造成机器损坏。

- This manual is offered to client to install, technical data set, problem solve, and operate, pls keep it carefully.
- Pls read this manual very carefully before install.
- You must choose the Power Line and Professional electric leakage protection Switch as we asked.
- The machine outside must be firmly grounded separately, or it may cause serious personal injury accident.
- The machine must be installed in ventilation, bright place. Clearing all the stuff around the machine, 1.5m would be fine.
- If there is something wrong, turn off the power, and move the blanket from the drum, use some big fan to make it cool down.
- The operator must follow the instruction at the machine, do not operate wrongly.
- Do not panic when you heard a "Bang", it's the drum's expanding voice as the high temperature, normal sign.
- Keep the Chassis control circuit board and inverter clean, do not let the dust or something in. Do not open the electrical protection cover shall unless you are a professional electronic engineer.
- Pls use the model we equipped before you change some parts, such as the heating element, the reducer, the heat conduction oil, etc..
- No Chemical Liquids or Hard metal object to touch the drum, will damage it, when there is something be stucked, pls use clean water, soft fabric pieces to swipe it off when machine is turned off, the drum is not hot.
- Turn the machine off when the temperature is less than 80°C.
- There must be someone when the machine working. Completely separate the blanket and roller in time when power cutting.



主要技术数据 Mainly Technical Data

ZS-BA42 Series Roller sublimation heat transfer machine Technical parameter			
Model	ZS-BA42120	ZS-BA42170	ZS-BA42190
Roller Tape	Simple Drum	Simple drum	Simple drum
Roller size	420*1200mm	420*1700mm	420*1900mm
Roller diameter	420mm	420mm	420mm
Roller surface	Coated with Teflon	Coated with Teflon	Coated with Teflon
Transfer width	1200mm	1700mm	1900
Transfer speed	120-380m/h	120-380m/h	120-380m/h
Diameter of shaft	50mm	50mm	50mm
Air swelling shaft	2	2	2
The main machine dim	1900*1000*1200	2500*1000*1200	2640*900*1200
The work table dim	3500*1188*900	3500*1888*900	3500*2090*900
Installed dim	4500*2500*1200	4500*2500*1200	
Wooden box size	2580*105*1330	2580*105*1330	
Net weight	520kg	600kg	750kg
Gross weight	550kg	650kg	800kg
Blanket size	175*2680*8	175*2680*8	1950*2680*8
Blanket separation method	Manual	Manual	Manual
Pressurized cylinder	1set	1set	1set
Air pressure	su80*50	su80*50	su80*50
Pressurized way	Pneumatic pressure	Pneumatic pressure	Pneumatic pressure
Pressure shaft diameter	87mm	87mm	87mm
Power supply	3 phase 380 volts	3 phase 380 volts	3 phase 380 volts
Current	41a/71a	41a/71a	40a
Heating tube and power	18*1.5=27kw	18*1.5=27kw	18*1.5=27kw
Heating method			
Oil capacity	60kg	60kg	75kg
Heating temperature	260	260	260
Conveyor size	1680*7050	1680*7050	1950
Conveyor belt material	PVC	PVC	PVC
Glass size	1300*940*650 3Piece	1300*940*650 3Piece	
Total glass size	2900*1710	2900*1710	

东莞市至上印花机械有限公司

Best Printing Machine Limited 29-4

Website: [Http://www.zsheatpress.com](http://www.zsheatpress.com)

Email: sales@zsheatpress.com



损耗件 Wearing parts

毛毯, 发热管, 碳刷, 轴承

Blanket, heat tube, Carbon Brash, bearing.

机器维护


- 1、集电环碳刷维护
- 2、法兰轴承打油
- 3、电路板电器小风扇灰尘清理 毛毯清洁、滚筒清洁
- 4、滚筒定时加油, 使用 3-5 个月后, 每月加大概 8-10L.
- 5、大电箱里不要放过多的外物

Machine Maintenance

- Use the Carbon Brash to swipe for the Collecting Ring.
- Add Oil for the Flange Bearing every week, to make it runs smoothly.
- Use small fan & brush to clean the PCB board, keep the blanket & drum clean and dry.
- Add heat oil every week, 8-10L after 3-5monthes.
- No other stuff should be put in the Machine's electronic box.

结构说明 Construction of Machine

1. 型号

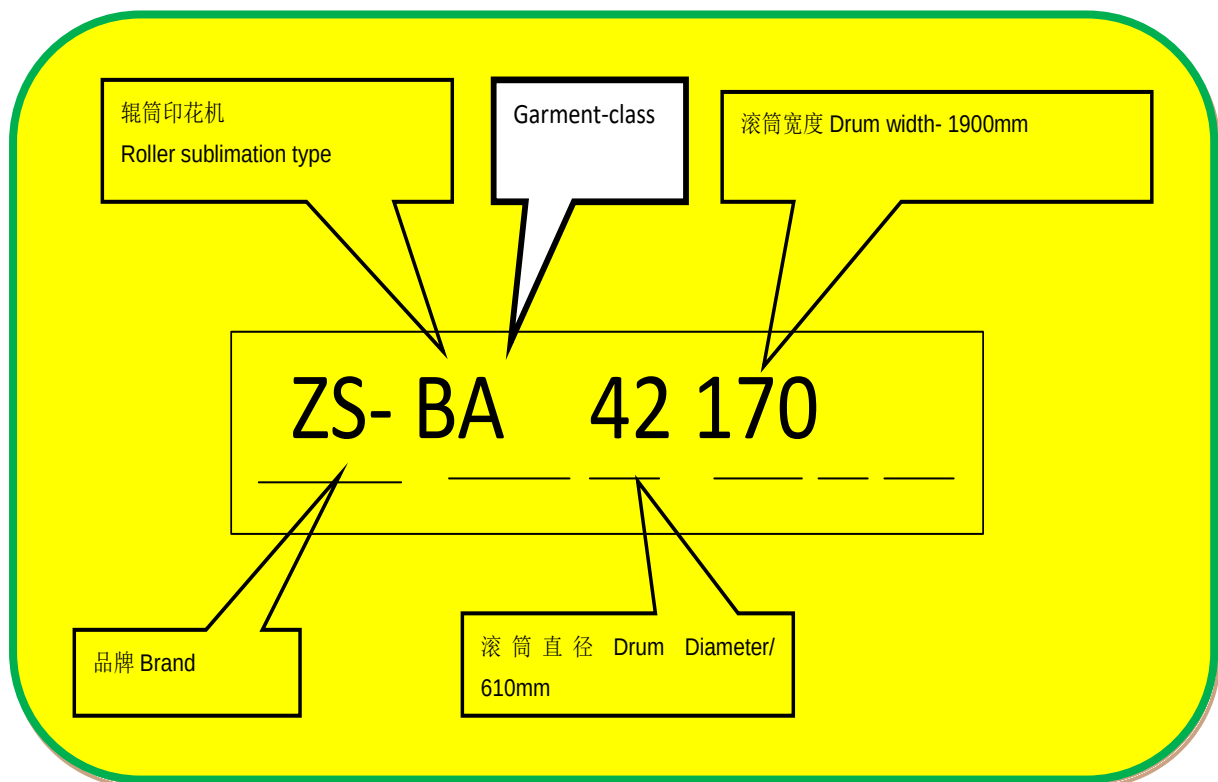

东莞市至上印花机械有限公司

Best Printing Machine Limited 29-5


Website: [Http://www.zsheatpress.com](http://www.zsheatpress.com)

Email: sales@zsheatpress.com

2. 外观及各部件说明

➤ 主机/Head

主机一部份零件名称 (1)

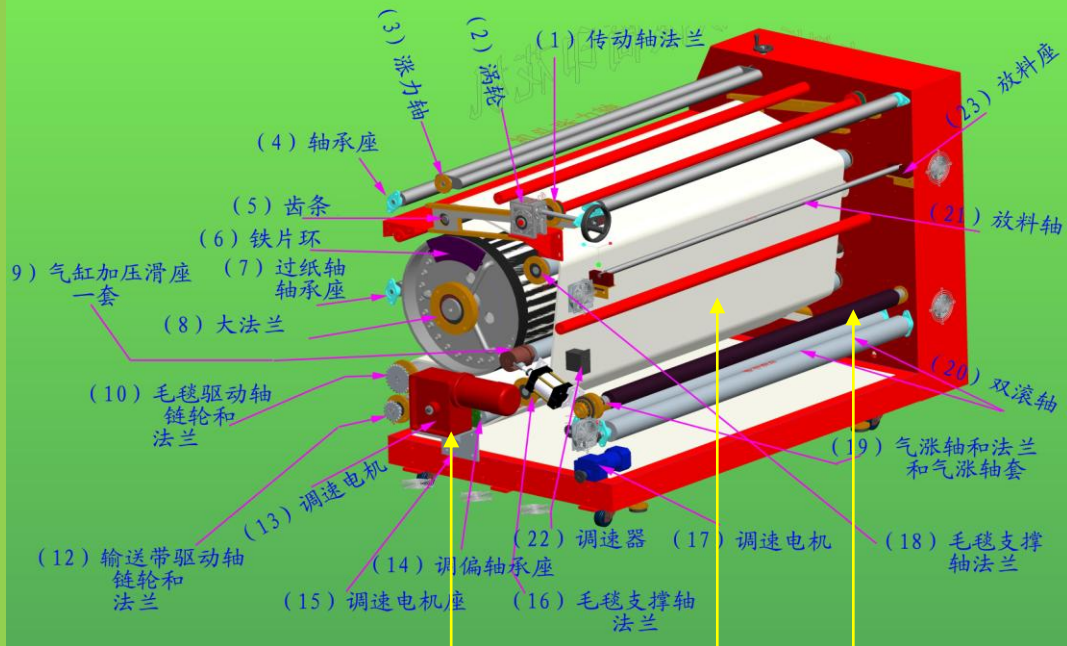



此表格为上图部位解释/this table is for the above photo.

Item No.	名称 Item Name	Item No.	名称 Item Name
1.	传动轴法兰 Propeller Shaft Flange	13.	调速电机 Speed-adjust generator
2.	涡轮 50 Turbine50	14.	UCF205
3.	张力轴 Tension Axis	15.	调速电机座 Speed-adjust generator Seat
4.	UCFL204	16.	毛毯支撑轴法兰 Blanket determination Bearing Flange
5.	齿条 Rack	17.	调速电机 1:36 和 3 分链轴 Speed-adjust 1:36 & 3" sprocket
6.	铁片环 Iron Ring	18.	毛毯支撑法兰 Blanket Supporting Flange
7.	UCFL204	19.	气胀轴和法兰，轴套 Shafts, Flange & axle sleeve
8.	大法兰 Big Flange	20.	双滚轴 Double side Axle
9.	气缸加压滑座 Air Cylinder Pressure Slide	21.	放料轴 Protection Paper Axle
10.	毛毯驱动轴 5 分链轮&法兰 Blanket Drive Axis 5" Sprocket & Flange	22.	调速器 Speed Controller
12.	输动带驱动轴 5 分链轮&法兰 Transfer Line Drive Axis 5" Sprocket & Flange	23.	放料座 Protection Paper Axle's Seat



东莞市至上印花机械有限公司

Best Printing Machine Limited 29-7

Website: [Http://www.zsheatpress.com](http://www.zsheatpress.com)

Email: sales@zsheatpress.com

主机一部份零件名称排名 (2)

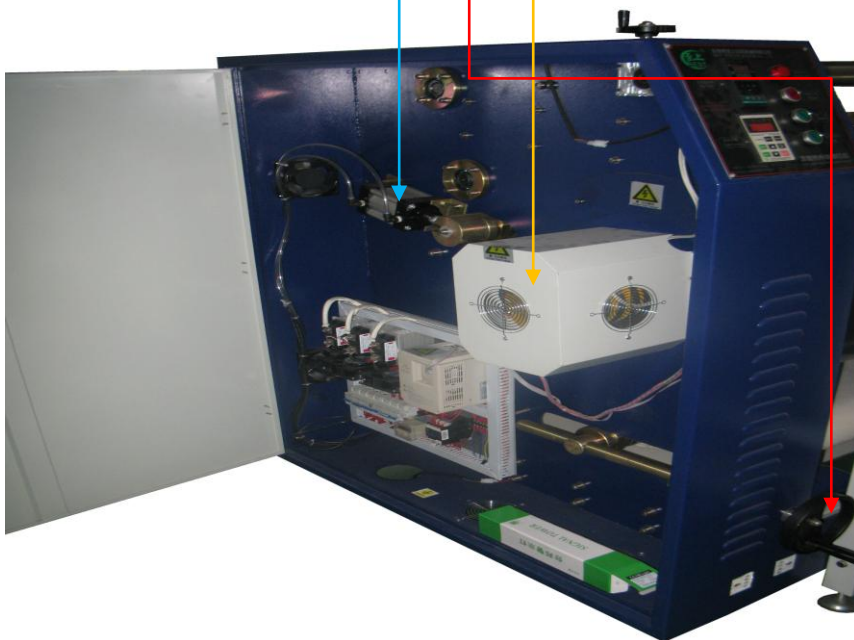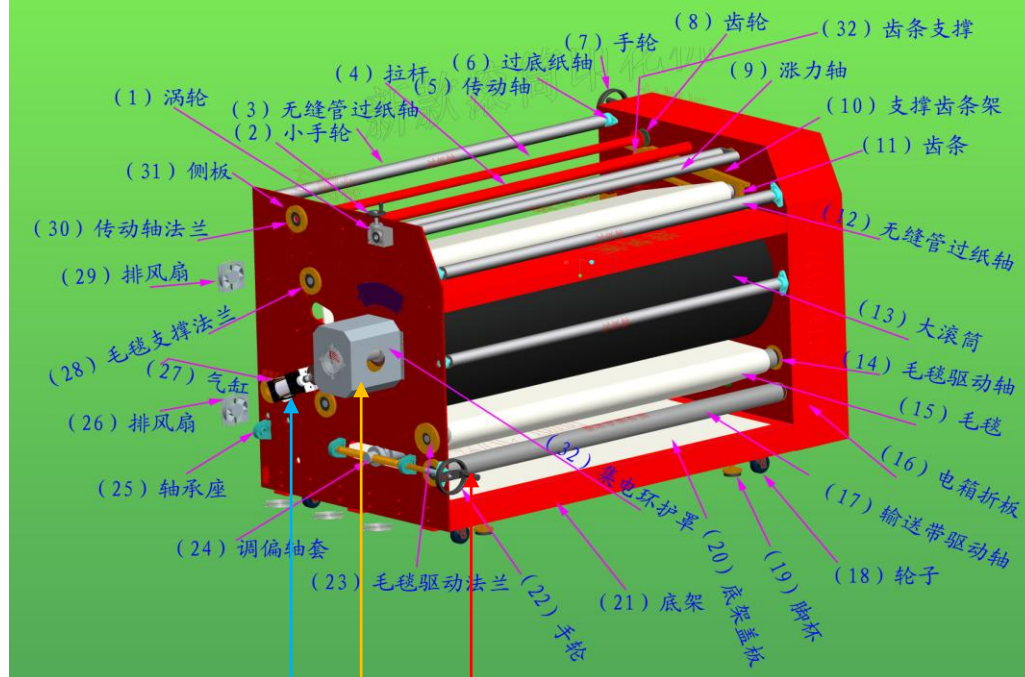

东莞市至上印花机械有限公司

Best Printing Machine Limited 29-8

Website: [Http://www.zsheatpress.com](http://www.zsheatpress.com)

Email: sales@zsheatpress.com



此表格为上图部位解释/this table is for the above photo.

Item No.	名称/Item Name	Item No.	名称/Item Name
1.	涡轮 30/Turbine 30	17.	输送带驱动轴 Transport Drive Axle
2.	小手轮/Hand Wheel	18.	轮子/wheel
3.	无缝管过纸轴 Sublimated Paper Axle	19.	脚环/Bottom Point
4.	拉杆/Bar	20.	底座盖板/Bottom Plate
5.	转动轴/Rotating axis	21.	底架/Bottom Frame
6.	UCFL204	22.	手轮/Hand Wheel
7.	手轮/Hand Wheel	23.	毛毯驱动法兰 Blanket Drive Flange
8.	齿轮/Gear	24.	调偏轴套 Adjusting Axle Sleeve
9.	张力轴/Tension Axis	25.	UCPA205
10.	支撑齿条架 Supporting Rack Frame	26.	排风扇/Fan
11.	齿条/Rack	27.	气缸/ Air Cylinder
12.	无缝管过纸轴 Protection Paper Axle	28.	毛毯支撑法兰 Blanket Supporting Flange
13.	大滚筒/Drum	29.	排风扇/Fan
14.	毛毯驱动轴 Blanket Drive Axle	30.	传动轴法兰 Transport Axle Flange
15.	毛毯/Blanket	31.	侧板/Side Plate
16.	电箱折板 Electric box plate	32.	齿条支撑 Rack Supporting



东莞市至上印花机械有限公司

Best Printing Machine Limited 29-9

Website: [Http://www.zsheatpress.com](http://www.zsheatpress.com)

Email: sales@zsheatpress.com

➤ 工作架/Work Table

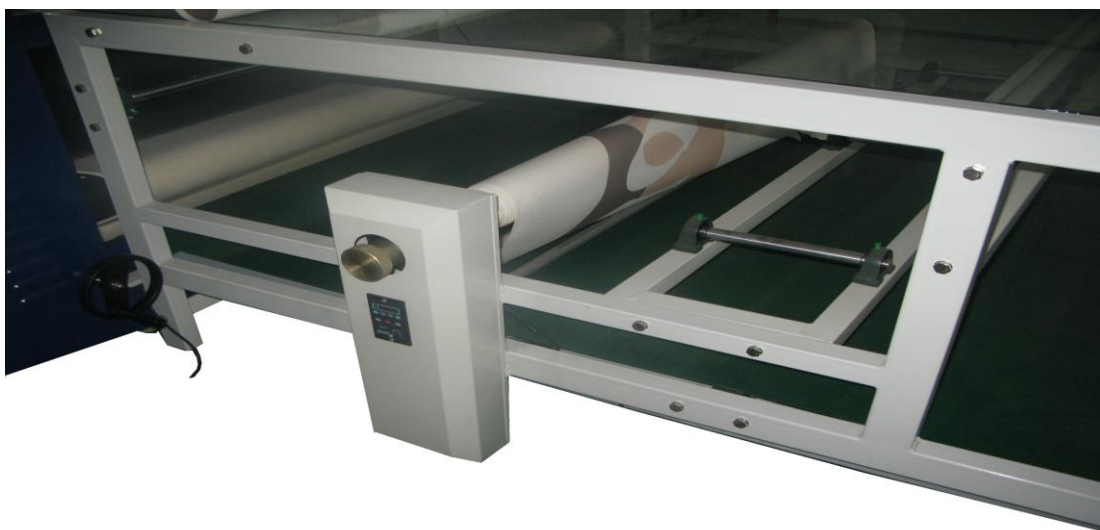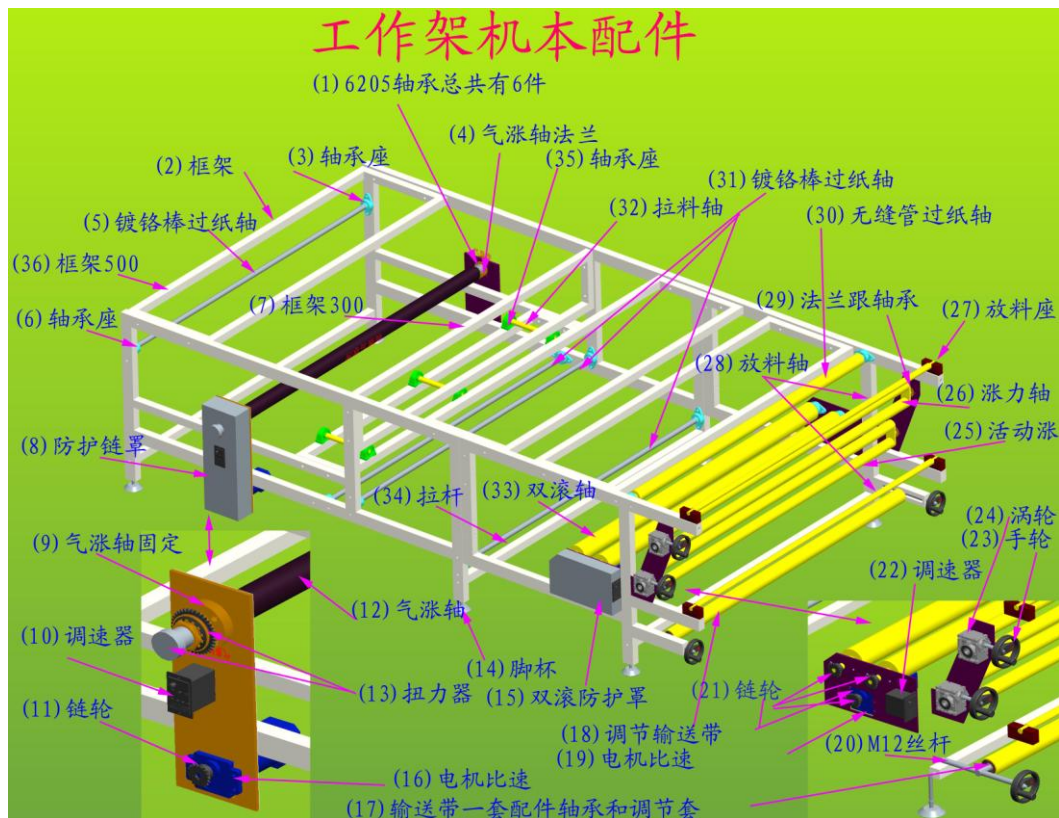

东莞市至上印花机械有限公司

Best Printing Machine Limited 29-10


Website: [Http://www.zsheatpress.com](http://www.zsheatpress.com)

Email: sales@zsheatpress.com




Item No.	名称/Item Name	Item No.	名称/Item Name
1.	6205 轴承共 6 件 6205 bearing, 6sets	19.	120W 电机比速 1:36/120W Motor Speed 1:36
2.	框架/Frame	20.	M12 丝杆/M12 Screw Rob
3.	UCF1204	21.	3 分 18 齿/3points 18teeth
4.	气胀轴法兰/ Shafts Flange	22.	调速器/Adjusting Speed Panel
5.	镀络棒过纸轴 Sublimated paper Through Axle	23.	手轮/Hand Wheel
6.	UCF1204	24.	涡轮/Turbine
7.	框架 300/Frame 300	25.	活动张/
8.	防护链罩/Chains Cover	26.	张力轴/Tension Axis
9.	气胀轴固定/Shafes Fixing	27.	放料座/Fabric Axle Seat
10.	调速器/Speed Control Panel	28.	放料轴/Fabric Axle
11.	3 分 18 齿/3points 18teeth	29.	法兰, 6202 轴/Flange,6202Axle
12.	气胀轴/Shafes Axle	30.	无缝管过纸轴/Paper Through Axle
13.	扭力/Torque Converter	31.	镀络棒过纸轴/Paper Through Axle
14.	脚杯/Supporting Point	32.	拉料轴/Fabric Through Axle
15.	双滚防护罩/Two Roll Axles Cover	33.	双滚轴/Double Axles
16.	120W 电机比速 1: 36/120W Motor Speed 1:36	34.	拉杆/Bar
17.	输送带 (6305 轴承&调节套) Convey-er Belt	35.	UCPA204
18.	调节输送带 Adjusting Convey-er Belt	36.	框架 500/Frame 500

➤ 左右机箱/The Left & Right Electrics Box

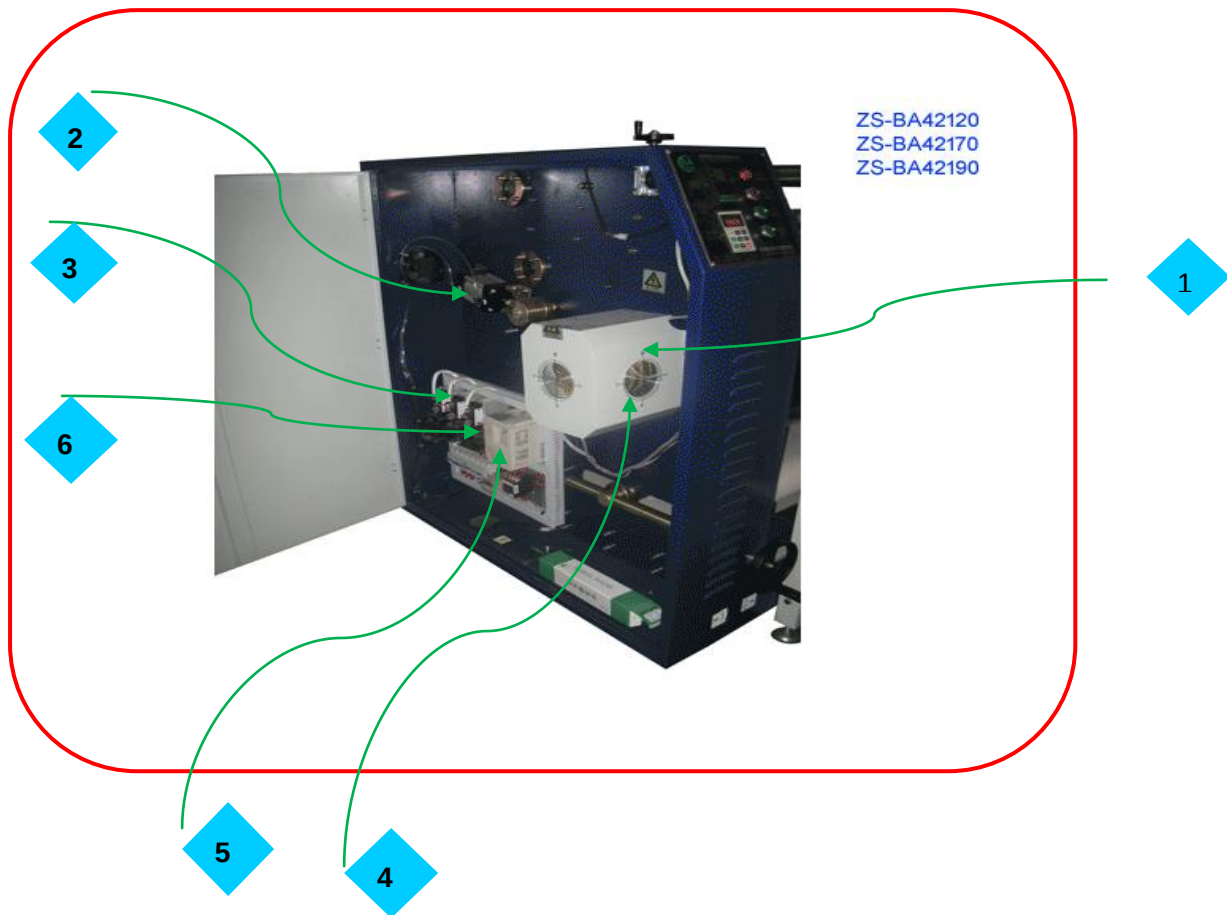

Item No.	名称 /Item Name	Item No.	名称 /Item Name
1.	集电环护罩 /Cover of Collecting Ring	5.	变频器 / Frequency Transformer
2.	气缸 /Air Cylinder	6.	交流接触器 /AC Connector
3.	固态断路器 /SSR(Solid State Relay)	7.	计时器 /Time-meter
4.	散热风扇 / Fan for Cooling	8.	断路器 /Circuit-breaker

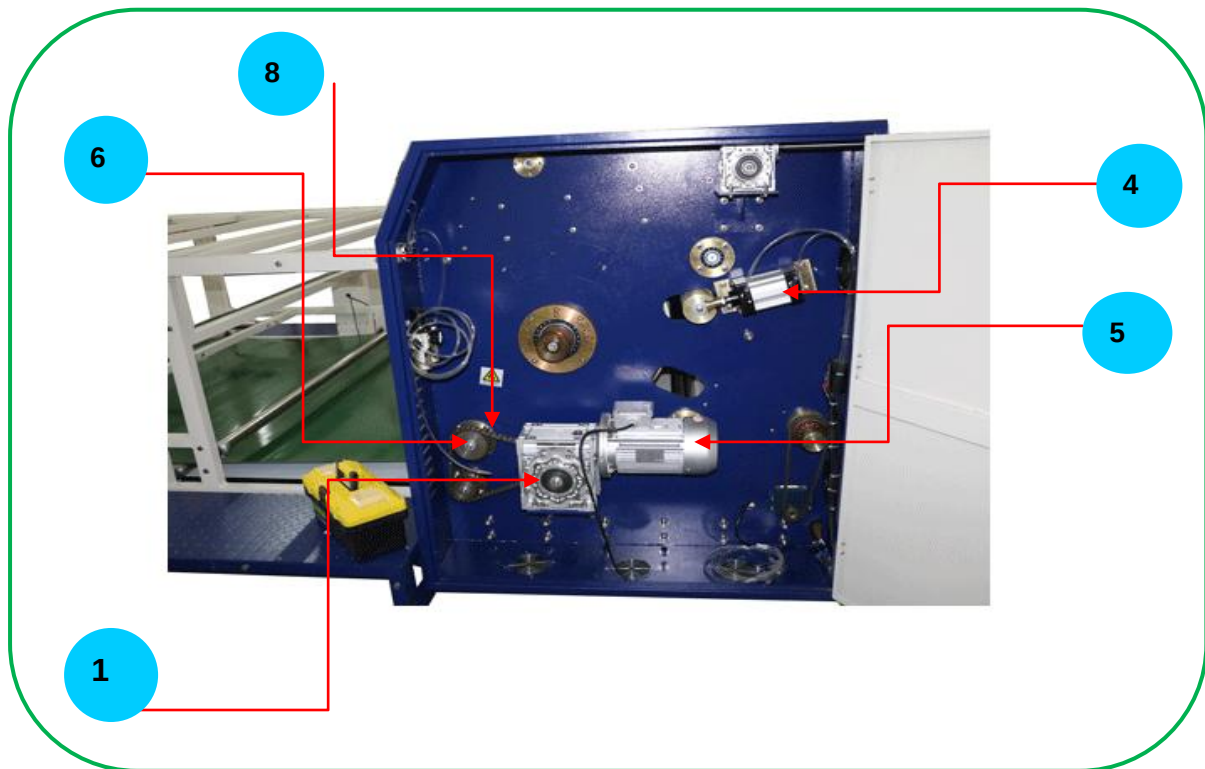

Item No.	名称/Item Name	Item No.	名称/Item Name
1.	涡轮/Turbine	6.	毛毯驱动链轮 Drive Chains & Wheel for the blanket
2.	气压表/Barometer	7.	扭力器/Torque Converter
3.	散热风扇/ Fan for Cooling	8.	电机轮链/Motor Chains & wheel
4.	气缸/Air Cylinder	9.	调速器/Speed Controller
5.	减速电机/Gear Motor		

3. 机器组装 Assemble

当你收到我们机器时,工作台需要重新组装。
具体组装过程如下:

3.2.1 请先将主机安放于合适的地面, 并进行水平校正, 水平校正使用水平尺进行;
Machine should be installed on flat ground and use Leveling instrument to make it be steadily & straight.



东莞市至上印花机械有限公司

Best Printing Machine Limited 29-13

Website: [Http://www.zsheatpress.com](http://www.zsheatpress.com)

Email: sales@zsheatpress.com



3.2.2 按照下图所示依次安装各部件:

Please assemble the machine as below instruction, one step by one step.

- 安装左墙架 1

Install the left frame 1




- 安装水平框架，并用 M12*100MM 螺丝紧固

Installing level frame and fix it with M12*100mm Screw.

- 接左墙架 2 Connecting left frame 2.


- 链接右墙架，墙架之间用 M12*100 螺

Connecting right frame and fix with M12*100mm Screw



- 安装水平框架，并用 M12*100mm 螺丝固定于两边墙架上，在框架全部固定好之前，请不要紧固螺丝。确保水平框架的水平，

Installing level frame and fix to left and right frame.

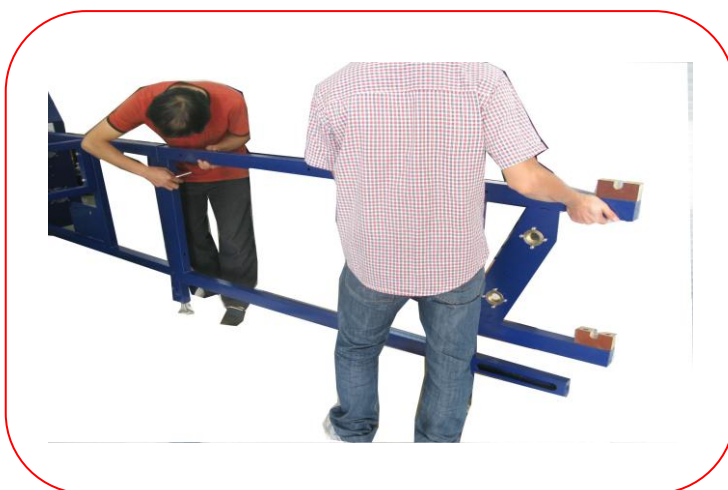

东莞市至上印花机械有限公司

Best Printing Machine Limited 29-14

Website: [Http://www.zsheatpress.com](http://www.zsheatpress.com)

Email: sales@zsheatpress.com



热转印机的框架有： 左边两块，右边两块，水平三块。

在安装过程，要求，两边的支撑框架垂直于辊筒的水平面，而水平框架要平行于辊筒面， 精确地安装位置将能确保机器的转印质量和使用寿命。

Heat transfer machine frame: the left two, right two, the level of three.

In the installation process, requirements, both sides of the support frame perpendicular to the horizontal plane, and the horizontal frame to be parallel to the roller surface, the precise location of the installation will be able to ensure that the transfer of the machine quality and service life.

- 安装收料输送带
- Installing roller of PVC Belt






- 安装张力辊轴承
- Installing bear



- 安装纠偏手轮
- Installing handle for rectifying a deviation

- 安装收纸电机
- Installing paper collecting motor system

- 安装张力调整装置
- Installing Tension adjustment device



东莞市至上印花机械有限公司

Best Printing Machine Limited 29-16

Website: [Http://www.zsheatpress.com](http://www.zsheatpress.com)

Email: sales@zsheatpress.com



3.3 配装玻璃平台/Glass for Work Table


因为玻璃在运输过程中易碎，我们机器没有配置玻璃给到客户，请您再当地按照我们的尺寸购买玻璃，我们建议您选择钢化玻璃（因为滚筒温度可以达到 400 度，目前市面上能耐高温且在适合价位的为钢化玻璃）。根据我们常规配置，工作台为 3.5 米长度，则需要准备 3 张玻璃，尺寸分别为一张 129x171x1cm, 2 张 81x171x1cm.若您所购买的工作台非 3.5m,请与我们销售人员或者售后人员联系。

We do not equipped with the Glass for you as it's very fragile and easy to broken while transporting. Pls purchase it at your local market according to the below size we offered, and Toughened Glass is the one we recommended, it can bear the heat over 400℃. If the work table you asked is the standard size, pls contact our sales or after-sell stuff to get the right size.

3.4 接线 Power supply

电气控制主板方框图

Electrical Control Board Block Diagram

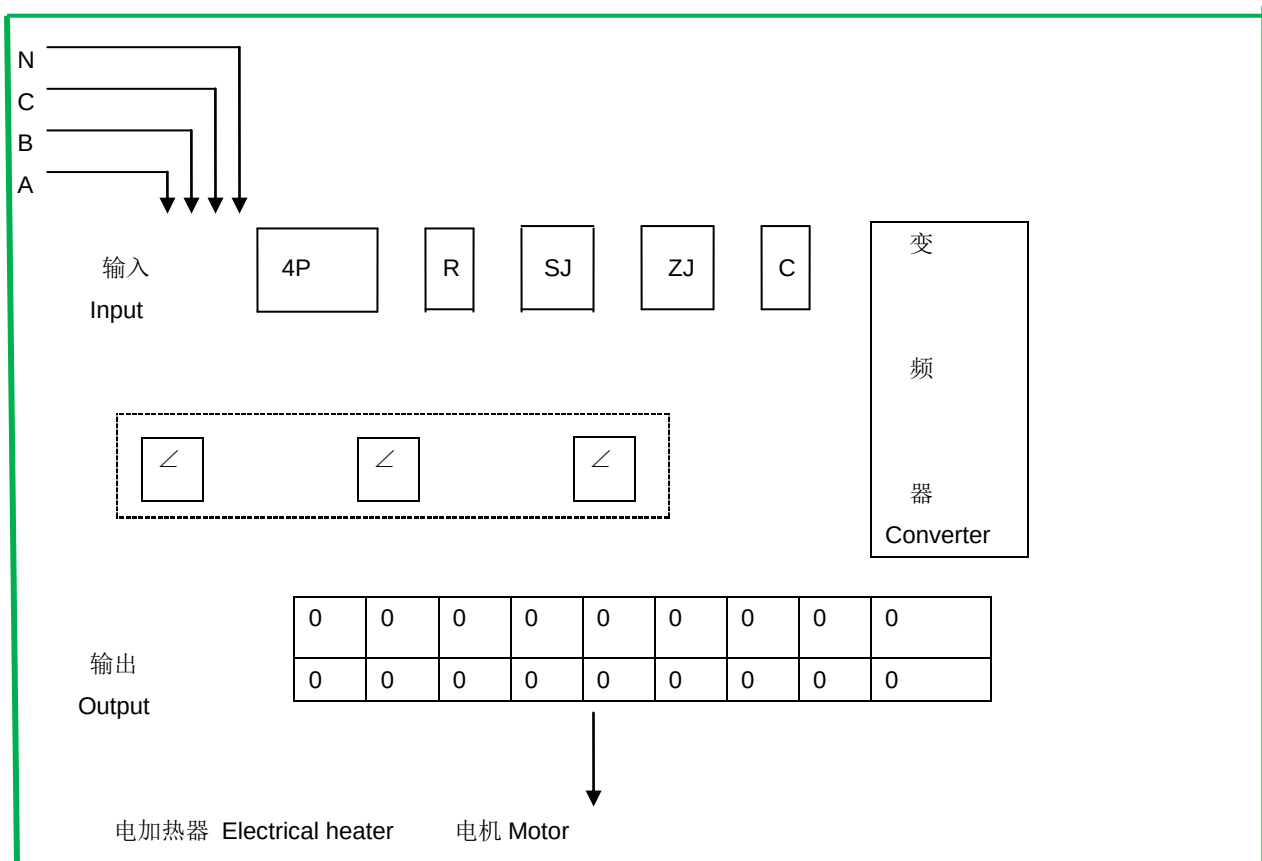

东莞市至上印花机械有限公司

Best Printing Machine Limited 29-17

Website: [Http://www.zsheatpress.com](http://www.zsheatpress.com)

Email: sales@zsheatpress.com



操作与控制 How to Operate the Machine

1. 机械部分/Machine

开机前检查一下机械传动部分是否正常，调正好毯带张力，待温度适合您的工作温度时即可开始工作。

Pls check if every part is ok before start the machine, make the blanket in the right position and tightness. And start the printing after the showed temp. Is the one you needed.

- 1) 确认机体良好接地和电源接线无误后，推上机箱内断路器，然后，按下“总电源”按钮，再按下变频控制面板上“运行”键，把频率调在适当位置上。
- 2) 按下“加温”键，设定好所需温度，此数据靠客户根据不同的面料成分而定。我厂建议，客户在到达设定温度时先用小块面料和转印纸转印。如温度过高或过低，可作出相应调整，以保证大幅转印品的质量。
- 3) 在工作台的放布架和放纸架上放好面料和转印纸，主机温度达到转印效果时，把面料平整的拉至台板上，使之平整进入滚筒内。注意，转印纸有墨水的一面对着面料，且在面料下面。
- 4) 在转印过程中，客户可根据转印出的图案深浅来调整温度上升或降低，也可调整筒体的速度来控制。
- 5) 转印工作结束后，关掉“加温”键，本机停止加温，当温度下降到 80℃时可以关掉主机，并将毛毯与滚筒分离。
- 6) 特殊情况下，可以同时关掉“总电源”和“加温”按钮，当主机运行到时间后会自动停机，正常情况下，不建议使用该功能。

1. Push the State Relay on after check the power is supplied and the machine is grounded. Press "Power" and then "Start" to turn to the right frequency.
2. Press "Start", and set up the temp. You needed, the temp. Is decided by the material type printing pattern, and if the color is dark or light. Pls use a small piece to make the best before mass production, so you would not waste the material. If the printed affection is not so good, pls try to raise or down the temp. & speed, pls do not stop until you find the correct temp..
3. Put the Printed Paper Roll and Blank Fabric Roll in the Work table, and let them go through as we trained you. Let the fabric rolled into the drum, without any fold. Pls attention, make the fabric above the printed paper, so the ink can be transfer to fabric. And the paper with patterns towards the fabric.
4. While the machine working, you can raise or down the temp. According to the patter, raise it while in dark color, and down it while in light color. The work speed also can reach this, make it faster while light color and slower while dark

东莞市至上印花机械有限公司

Best Printing Machine Limited 29-19

Website: [Http://www.zsheatpress.com](http://www.zsheatpress.com)

Email: sales@zsheatpress.com



color.

5. Pls press "Start" after you finished work, and wait for another 30min-50mins to let it turn to 80℃, and then turn the machine off, and let blanket and drum be separated.

6. If there is any urgent thing happened, pls turn "Power" & "Start" off, and the machine would stop work. Pls do not use it in well condition, it

警告!!! 机器停电或操作人员离开时, 没有将毛毯与滚筒完全分离, 有可能引起毛毯燃烧。

Attention!!! Pls make the Blanket & Drum be separated while the machine is not work, especially nobody in the work house. If not, it may cause the fire and burn

7 毯带调节/Blanket adjustment



由于受水平引力的影响, 印花机的毛毯和输送带有可能左右偏移, 因此机器上设置了偏调移手柄, 具体操作如下:

如果毯带往右偏移, 将毛毯调节手柄左方向旋转顺时针, 注意: 调节时根据毯带的实时偏移情况, 逐次调节, 不能一次旋转很多圈, 这样反而调不好的要慢慢调整, 而且毯带调节过程不是一两分钟就可调好的。反之, 如毯带 往左偏移 (指电控柜一端), 将毛毯调节手柄右方向旋转顺时针。(人面对机器右手为右边) (人面对机器左手为左边)

特别提示:

新毛毯与机器有一定的磨合期 (毛毯在中间时不需要向左右偏移), 前期 (半个月) 在毛毯调偏边过程中一定要专人看守, 专人调节, 毛毯为损耗品, 不在保修范围内。

The Blanket & Transport Belt will go left and right as the Earth Gravity, you can use the Wheels at the machine to make it right, the method as below:

If the blanket go to right, then use the Wheel in Clockwise until it in the correct position. Pls note turn the wheel according to the distance the blanket move. It may take times to correct, you need to try and try. If the Blanket go to the left, then use the Wheel in anti-clockwise. When you face the machine, your right hand is

东莞市至上印花机械有限公司

Best Printing Machine Limited 29-20


Website: [Http://www.zsheatpress.com](http://www.zsheatpress.com)

Email: sales@zsheatpress.com



the right we called, and left hand is left.

2. 控制面板操作键/The Control Panel

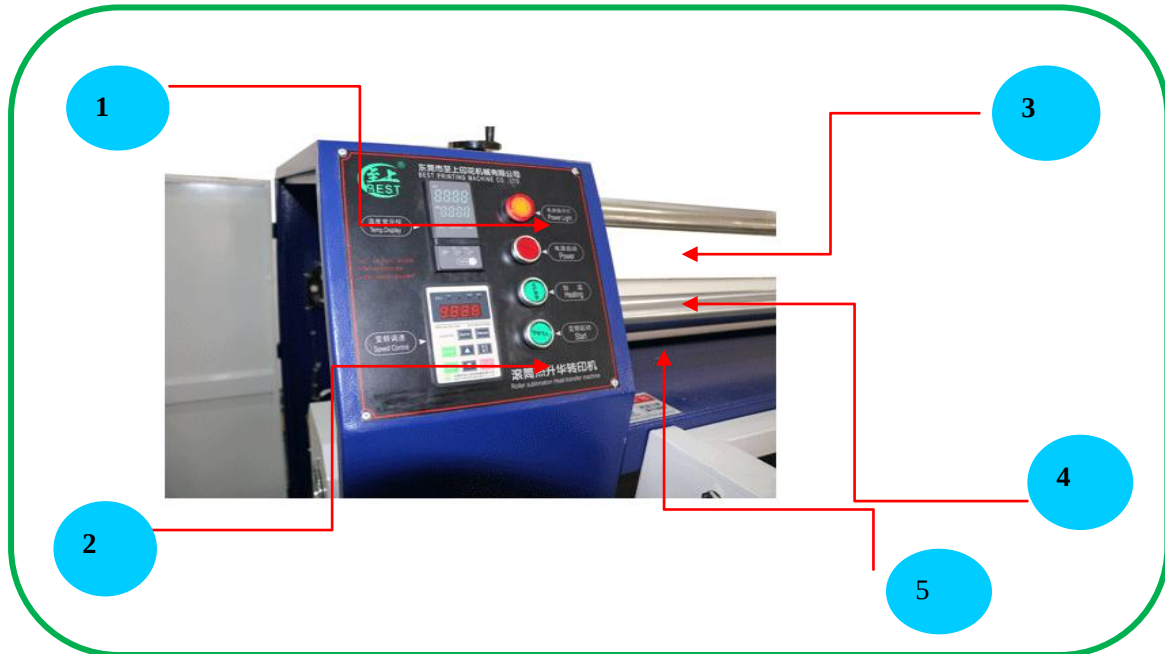

- ① 温度控制仪, 客户按该仪器操作说明操作。
- ② 交流电机变频控制器, 客户按照该变频器操作说明书操作。
- ③ 红色闭锁按钮, 按一下开(红灯亮)、再按一下关(红灯灭), 该钮为本机二次控制电源总开关, 同时作为急停开关, 如工作完毕、客户必须拉开本机供电总闸。
- ④ 绿色闭锁按钮, 按一下开(绿灯亮)、再按一下关(绿灯灭), 该钮控制本机加温系统。
- ⑤ 绿色闭锁按钮, 按一下开(绿灯亮)、再按一下关(绿灯灭), 该钮控制本机变频器的电源供给, 客户在按下该钮后变频器开始运行, 变频控制盘面显示原始工作状态, 客户可根据需要进行盘面操作。

- ① Temperature Display & Control Panel, operate as the below instruction.
- ② The Speed Control Panel, you can make the drum worker faster & slower.
- ③ Power light, press it once, then the power is on and press it again, then it would turn the power off. This bottom also is the Urgent Stop bottom when needed.
- ④ Heating, it control the machine's heating system, press it to make the heating system start, and press again to stop.
- ⑤ Start, it control the Frequency Transformer's power.

东莞市至上印花机械有限公司

Best Printing Machine Limited 29-21

Website: [Http://www.zsheatpress.com](http://www.zsheatpress.com)

Email: sales@zsheatpress.com



Speed Panel.



当前测定温度 PV-The current temp.

设定温度 SV-The setting temp.


The Temp. Display & Control Panel.

东莞市至上印花机械有限公司


Best Printing Machine Limited 29-22

Website: [Http://www.zsheatpress.com](http://www.zsheatpress.com)


Email: sales@zsheatpress.com

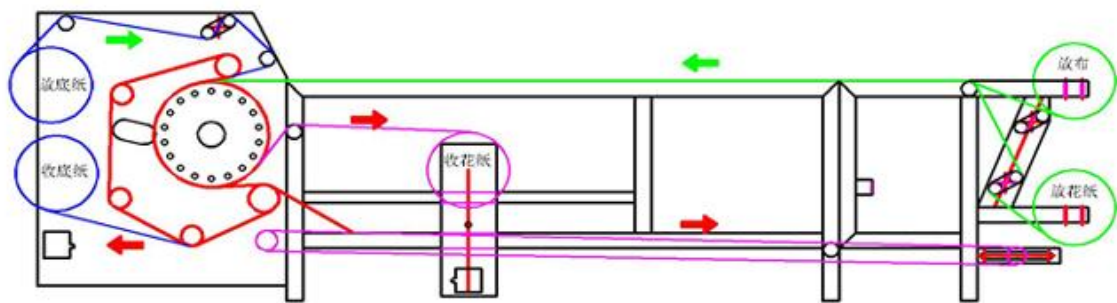

420mm Roller

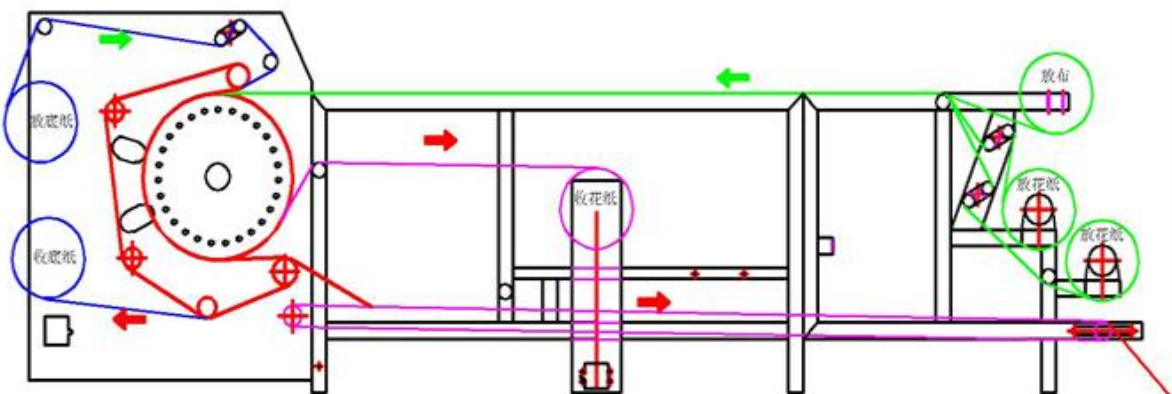

610mm Roller

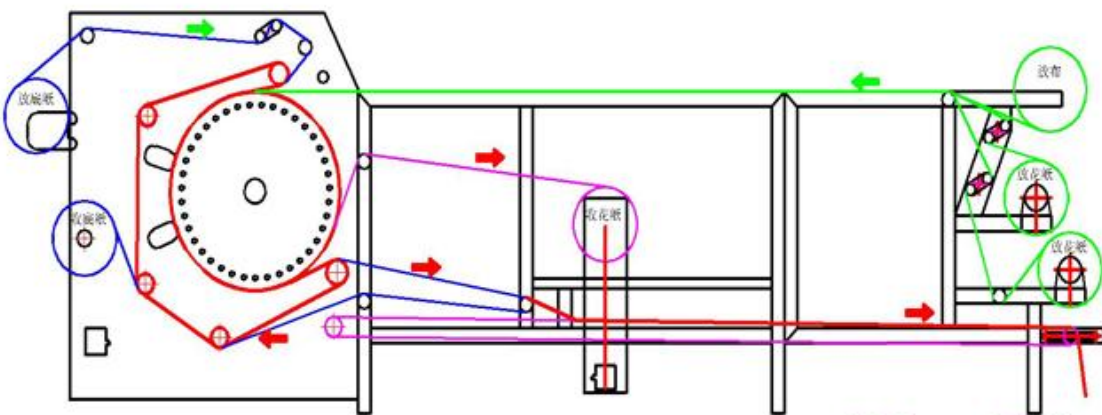

800mm Roller



常见故障排除与维护 Trouble and shooting

1 常见故障排除对策

故障现象	故障原因	排除方法
温度加不上	①集电环与碳刷接触不良	①用细砂纸除去积碳，吻合安装
	②缺相—即进线或主线有脱离或松动	②检查路线
	③有一组或多组发热管烧坏或接线柱松动	③更换发热管或拧紧接线
	④发热体老化，（新机不可能有此项情况）	④更换发热管
	⑤固态继电器坏掉	⑤更换
温度控制不了	①固态继电器击穿	①更换
	②温控仪坏掉	②更换
筒体不转	①毯带太松	①拉紧毯带
	②链轮打滑	②拧紧卡紧螺丝
	③轴承卡死	③更换轴承
	④变频器故障或交流接触器故障	④更换
	⑤电机或减速机故障	⑤更换
显示温度浮动	①温度探头坏掉	①更换
	②碳刷与集电环之间接触不吻合	②用细砂纸磨到吻合
	③集电环上有异物	③除去异物
总开关跳闸	①电热管老化或烧掉	①更换
	②集电环击穿	①更换集电环 ②更换固态继电器



Common troubleshooting countermeasures

Problem	Reason	How to Solve
Temp. Cannot be raised	①Collecting ring and Carbon brush did not connect well.	①Take the Carbon Brush out, and use fine Sandpaper to polish it, and then install it and see if the connection is well.
	② The power supply problem	②Checking the Wires, and try to make every wire be connected with the machine.
	③Heat tube is broken	③ Replace heat tube
	④ Heat tube used for a long time.	④ Replace the heat tube
	⑤Relay is broken	⑤ Replace the relay
Temp. is Out of control	① Relay is broken	① Replace the relay
	② Temperature controller is broken	② replace it
The Drum did not move	① Blanket is too Flabby	① Tighten the Blanket
	②The chain is skid	② Screw down the chain
	③the bear is broken	③Replace the bear
	④Transducer is broken	④Replace
	⑤ Motor is broken	⑤Replace
Temp. Go down and up without operate	①The temp. probe is broken	①Replace
	② The collecting ring and carbon brush did not connect well.	② Take the Carbon Brush out, and use fine Sandpaper to polish it, and then install it and see if the connection is well.
	① Dust on collecting ring	③Remove the dust
The total switch trip	① Heat tube is broken	①Replace
	② Collecting ring is Breakdown	①Replace the ring ②replace the relay

注:检修排除故障必须具备专业知识的技术人员.如确不能排除,请及时与生产厂家联系.

东莞市至上印花机械有限公司

Best Printing Machine Limited 29-25

Website: [Http://www.zsheatpress.com](http://www.zsheatpress.com)

Email: sales@zsheatpress.com



2 日常维护/Daily Maintenance

定期检查机内积尘,并及时清理,保持各部件清洁。

定期检查减速机及链条链轮是否正常,如发现异常情况及时处理。

定期检查电线连接桩头,发现松动或烧焦现象应及时处理。

定期清除变频器散热器及外壳的灰尘。

定期检查电机风罩周围是否有杂物堆积,如有应及时清除保证电机散热。

- (1) Checking the Electric Box every day, clear the dust and keep every part clean.
- (2) Checking the Decelerator & Chains & Wheels everyday, if there is any problem, fix it and call us if you cannot solve it by yourself.
- (3) Checking the Wire Connection every day, if there is any loose, fix it.
- (4) Checking the Frequency Transformer everyday, clear the dust if it have.
- (5) Checking the Fan everyday, and if there is some dust, clear it and make sure no surroundings around.

更换加热管

Replace Heat Tube

- ◆ Open the right machine door and open the roller window



东莞市至上印花机械有限公司

Best Printing Machine Limited 29-26

Website: [Http://www.zsheatpress.com](http://www.zsheatpress.com)

Email: sales@zsheatpress.com



Heating roller structure

注意：想确保机器已断电

1. 打开机器两端检修孔。
 2. 松开加热管固定螺丝机连接铜片。
 3. 拔出加热管。
 4. 检查新加热管两端绝缘瓷片是否拧紧。
 5. 插入新加热管，并检查加热管两端露出筒体的距离是否一致。
 6. 固定好加热管，放入绝缘瓷片，并用铜片连接好。
 7. 更换好所有发热管后，再次检查所有螺丝是否拧紧。
-
1. Open the Electrics Box and check if the Heat Tube is broken or not.
 2. Unfix the copper connection's screw.
 3. Pull out the heating tube.
 4. Check if the Insulation Ceramics of the new Heat Tube are fixed tight, if not, make it tighter.
 5. Insert new heating pipes, check if the distance of every ends are the same.
 6. Fixed the heating pipes tight, put the ceramic in, use the copper to connect the two.
 7. Check the Heat Tube's screw before you finished.

在操作过程中请切记一下警告！/Pls take the below Attention into mind while operating.



警告!!! 机器滚筒存在高温，请勿用手触摸，以防烫伤！

Attention!!! The Drum is very hot, pls do not touch it, will burn you.

警告!!! 机器操作过程，工作台请避免放置任何杂物，以免进入滚筒，损坏机器！

Attention!!! Pls do not put anything except the fabric needed to print, or it would be took to the Drum and damage the machine.

警告!!! 机器周围应避免堆放任何易燃物品，否则可能导致火灾。

Attention!!! No Inflammable goods should be around the machine, or it may cause a fire. Pls be careful!

警告!!! 经过专业培训的电工人员才能维修机器。

Attention!!! Only Trained Electrical Engineer can repair this machine, pls do not open the Electrics Box by yourself.

警告!!! 突然停电时，应随即操作机器使毯带和辊筒脱离。

Attention!!! In the event of a sudden power failure, the machine should be operated immediately to disengage the blanket and the roller.

