

SHENZHEN GRAIGAR MACHINERY CO., LTD.

Xinfu Building,Center Road,Shajing Street,Baoan District,Shenzhen CN Tel: +86 755 27541660 Fax:0086-755-23728063 Email:sales@graigar.com Http://www.gensetspart.com

HGM93XX MPU(CAN) Series Genset Controller

USER MANUAL



Smartgen Technology

This manual is suitable for HGM9310MPU, HGM9320MPU, HGM9310CAN and HGM9320CAN series controller only.

Clarification	of notation	used within	this	publication.
Clarinoadori	ornotation		uno	publication

Clarification of notation used within this publication.			
SIGN	INSTRUCTION		
	Highlights an essential element of a procedure to ensure correctness.		
ACAUTION!	Indicates a procedure or practice, which, if not strictly observed, could result in damage or destruction of equipment.		
WARNING!	Indicates error operation may cause death, serious injury and significant property damage.		

CONTENTS

1	OVERVIEW	7
2	MODULES COMPARISON	8
3	PERFORMANCE AND CHARACTERISTICS	9
4	SPECIFICATION	.12
5	OPERATION	.13
	5.1 INDICATOR LIGHT	.13
	5.2 KEY FUNCTIONS	.15
	5.3 LCD DISPLAY	.17
	5.3.1 Main Display	
	5.3.2 User Menu And Parameters Setting Menu	
	5.4 AUTO START/STOP OPERATION	.22
	5.5 MANUAL START/STOP OPERATION	.24
	5.6 SWITCH CONTROL PROCEDURES	.25
	5.6.1 HGM9320MPU(CAN) Switch Control Procedures	
	5.6.2 HGM9610 Switch Control Procedures	.26
6	PROTECTION	.28
	6.1 WARNINGS	.28
	6.2 SHUTDOWN ALARM	.30
	6.3 TRIP AND STOP ALARM	.32
	6.4 TRIP ALARM	.33
7	WIRINGS CONNECTION	.34
8	SCOPES AND DEFINITIONS OF PROGRAMMABLE PARAMETERS	.37
	8.1 CONTENTS AND SCOPES OF PARAMETERS	.37
	8.2 ENABLE DEFINITION OF PROGRAMMABLE OUTPUT PORTS	.46
	8.2.1 Custom Period Output	.50
	8.2.2 Custom Combined Output	.50
	8.3 DEFINED CONTENTS OF CONFIGURABLE INPUT PORTS (ALL ACTIVE WHE	N
	CONNECT TO GRAND (B-))	.52

8	3.4 SE	LECTION OF SENSORS	55
8	3.5 CC	ONDITIONS OF CRANK DINSCONNECT SELECTION	56
9	PAF	RAMETERS SETTING	57
10	SEN	NSORS SETTING	58
11	COI	MMISSIONING	59
12			
13		TALLATION	
14	GSI	M SHORT MESSAGE ALARM AND REMOTE CONTROL	33
1	4.1	GSM SHORT MESSAGE ALARM	33
1	4.2	GSM SHORT MESSAGE REMOTE CONTROL	33
15	COI	NNECTIONS OF CONTROLLER WITH J1939 ENGINE	35
1	5.1	CUMMINS ISB/ISBE	35
1	5.2	CUMMINS QSL9	35
1	5.3	CUMMINS QSM11(IMPORT)	36
1	5.4	CUMMINS QSX15-CM570	36
1	5.5	CUMMINS GCS-MODBUS	37
1	5.6	CUMMINS QSM11	37
1	5.7	CUMMINS QSZ13	38
1	5.8	DETROIT DIESEL DDEC III / IV	38
1	5.9	DEUTZ EMR2	39
1	5.10	JOHN DEERE	39
1	5.11	MTU MDEC	70
1	5.12	MTU ADEC(SMART MODULE)	70
1	5.13	MTU ADEC(SAM MODULE)	71
1	5.14	PERKINS	71
1	5.15	SCANIA	72
1	5.16	VOLVO EDC3	72
1	5.17	VOLVO EDC4	73

16 FAUL	6 FAULT FINDING			
15.20	WEICHAI	74		
15.19	YUCHAI	74		
15.18	VOLVO-EMS2	73		

10VERVIEW

HGM93XX MPU(CAN) series genset controllers are used for genset automation and monitor control system of single unit to achieve automatic start/stop, data measure, alarm protection and "three remote" (remote control, remote measuring and remote communication). The controller adopts large liquid crystal display (LCD) and selectable Chinese, English or other languages interface with easy and reliable operation.

HGM93XX MPU(CAN) series genset controllers adopt 32 bits micro-processor technology with precision parameters measuring, fixed value adjustment, time setting and threshold adjusting and etc. The majority of parameters can be set using front panel and all the parameters can be set using PC (via USB port) and can be adjusted and monitored with the help of RS485 port. It can be widely used in a number of automatic genset control system with compact structure, simple connections and high reliability.

2 MODULES COMPARISON

	ltem	HGM9310MPU	HGM9320MPU	HGM9310CAN	HGM9320CAN
	Dimension		4.3	3"	
LCD	Pixel		480 x	272	
AMF			•		
Input Numb		8	8	8	8
Outpu Numb	ut port per	8	8	8	8
Sense	or number	5	5	5	5
Neutr currei	· · ·	•	•	•	•
Scheo functi		•	•	•	•
RS48	5		•		
GSM					
J1939	9				
USB					
Real-	time clock				
Event	t log			•	•

(1) Two of the output ports are fixed: start output and fuel output.

(2) The analog sensors are composed by 3 fixed sensors (temperature, pressure, fuel level)

and 2 flexible sensors.

3PERFORMANCE AND CHARACTERISTICS

HGM9310 MPU(CAN), used for single automation systems, auto start/stop of the unit are performed with the help of remote signal.

HGM9320 MPU(CAN), has all functions of **HGM9310 MPU(CAN)** as well as automatic mains failure function (AMF), particularly well suited for single automation systems that include mains and generator.

Key characteristics,

- ♦ With ARM-based 32-bit SCM, highly integrated hardware, new reliability level.
- 480x272 TFT LCD with backlight, multilingual interface (including English, Chinese or other languages) which can be chosen at the site, making commissioning convenient for factory personnel;
- Improved LCD wear-resistance and scratch resistance due to hard screen acrylic;
- Silicon panel and pushbuttons for better operation in high-temperature environment;
- RS485 communication port enabling remote control, remote measuring, remote communication via ModBus protocol (RS485 communication port is needed);
- Equipped with SMS (Short Message Service) function. When genset is alarming, controller can send short messages via SMS automatically to max. 5 telephone numbers. besides, generator status can be controlled and checked using SMS(GSM port is needed);
- Equipped with CANBUS port and can communicate with J1939 genset. Not only can you monitoring frequently-used data (such as water temperature, oil pressure, speed, fuel consumption and so on) of ECU machine, but also control start, stop, raising speed and speed droop via CANBUS port(CAN BUS port is needed).
- Suitable for 3-phase 4-wire, 3-phase 3-wire, single phase 2-wire, and 2-phase 3-wire systems with voltage 120/240V and frequency 50/60Hz;
- Collects and shows 3-phase voltage, current, power parameter and frequency of generator or mains.

Mains	Generator		
Line voltage (Uab, Ubc, and Uca)	Line voltage (Uab, Ubc, and Uca)		
Phase voltage (Ua, Ub, and Uc)	Phase voltage (Ua, Ub, and Uc)		
Phase sequence	Phase sequence		
Frequency Hz	Frequency Hz		
UCM02XX MDU/CAN) Series Conset Controller	Version: 1.0 2014-07-24 Page 9 of 75		
HGM93XX MPU(CAN) Series Genset Controller	Version: 1.0 2014-07-24 Page 9 of 75		

Load

Current IA, IB, IC Each phase and total active power KW Each phase and total reactive power Kvar Each phase and total apparent power KVA Each phase and average power factor PF Accumulate total generator power kWh, kvarh, kVAh Earth current A

- For Mains, controller has over and under voltage, over and under frequency, loss of phase and phase sequence wrong detection functions; For generator, controller has over and under voltage, over and under frequency, loss of phase, phase sequence wrong, over and reverse power, over current functions;
- ♦ 3 fixed analog sensors (temperature, oil pressure and fuel level);
- ◆ 2 flexible sensors can be set as temperature sensor, oil pressure sensor or level sensor;
- Precision measure and display parameters about Engine,
 - Temp. (WT)°C/°F both be displayedOil pressure (OP)kPa/Psi/Bar all be displayedFuel level (FL)%(unit)Speed (SPD)r/min (unit)Battery Voltage (VB)V (unit)Charger Voltage (VD)V (unit)

Hour count (HC) can accumulate to max. 65535 hours.

Start times can accumulate to max. 65535 times.

- Protection: automatic start/stop of the genset, ATS(Auto Transfer Switch) control with perfect failure indication and protection function;
- ♦ All output ports are relay-out;
- Parameter setting: parameters can be modified and stored in internal FLASH memory and cannot be lost even in case of power outage; most of them can be adjusted using front panel of the controller and all of them can be modified using PC via USB or RS485 ports.
- More kinds of curves of temperature, oil pressure, fuel level can be used directly and users can define the sensor curves by themselves;
- Multiple crank disconnect conditions (generator frequency, speed sensor, oil pressure)

are optional;


- Widely power supply range DC(8~35)V, suitable to different start battery voltage environment;
- Event log, real-time clock, scheduled start & stop generator (can be set as start genset once a day/week/month whether with load or not);
- PLC (programmable logic control) function allows for specific function can be user-defined.
- Logon wallpaper and display time are user-defined.
- Can be used on pumping units and as an indicating instrument (indicate and alarm are enable only, relay is inhibited);
- With maintenance function. Actions (warning or shutdown) can be set when maintenance time out;
- All parameters used digital adjustment, instead of conventional analog modulation with normal potentiometer, more reliability and stability;
- Waterproof security level IP55 due to rubber seal installed between the controller enclosure and panel fascia;
- Metal fixing clips enable perfect in high temperature environment;
- Modular design, self-extinguishing ABS plastic enclosure, pluggable connection terminals and embedded installation way; compact structure with easy mounting;
- Accumulative total run time and total electric energy of A and B. Users can reset it as 0 and re-accumulative the value which make convenience to users to count the total value as their wish.

4 SPECIFICATION

Items	Contents	
Operating Voltage	DC8.0V to DC35.0V, Continuous Power Supply.	
Power Consumption	<4W (standby ≤2W)	
Alternator Input Range 3-Phase 4-Wire 3-Phase 3-Wire Single-Phase 2-Wire 2-Phase 3-Wire	AC15V-AC 360V (ph-N) AC30V - AC620V (ph-ph) AC15V - AC360V (ph-N) AC15V - AC360V (ph-N)	
Alternator Frequency	50Hz/60Hz	
Speed Sensor Voltage	1.0V to 24.0V (RMS)	
Speed Sensor Frequency	10,000 Hz (max.)	
Start Relay Output	16A DC28V supply output	
Fuel Relay Output	16A DC28V supply output	
Auxiliary Relay Output (1)	7A DC28V supply output	
Auxiliary Relay Output (2)	7A DC28V supply output	
Auxiliary Relay Output (3)	7A DC28V supply output	
Auxiliary Relay Output (4)	7A AC250V voltage free output	
Auxiliary Relay Output (5)	7A AC250V voltage free output	
Auxiliary Relay Output (6)	7A AC250V voltage free output	
Case Dimension	237 mm x 172 mm x 45 mm	
Panel Cutout	214mm x160mm	
C.T. Secondary	5A rated	
Working Conditions	Temperature: (-25~+70)°C; Humidity: (20~93)%RH	
Storage Condition	Temperature:(-25~+70)°C	
Protection Level	IP55 Gasket	
Insulating Intensity	Apply AC2.2kV voltage between high voltage terminal and low voltage terminal; The leakage current is not more than 3mA within 1min.	
Net Weight	0.85kg	

5 OPERATION

5.1INDICATOR LIGHT

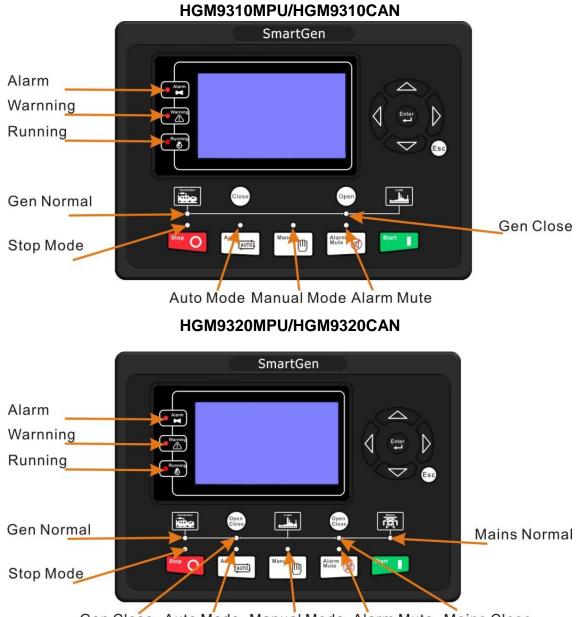

Gen Close Auto Mode Manual Mode Alarm Mute Mains Close

ANote: Selected light indicators description:

Warning indicator and Alarm indicator:

Alarm Type	Warning Indicator	Alarm Indicator
Warning	Slow flashing	Slow flashing
Trip Alarm	Slow flashing	Slow flashing
Shutdown Alarm	Off	Fast flashing
Trip and Stop Alarm	Off	Fast flashing

Running indicator: illuminated from crank disconnect to ETS while extinguished during other periods.

Genenerator normal light: It is illuminated when generator is normal; flashing when generator state is abnormal; extinguished when there is no generator power.

Mains normal light: It is illuminated when mains is normal; flashing when mains state is abnormal; extinguished when there is no mains power.

5.2KEY FUNCTIONS

Stop O	Stop	Stop running generator in Auto/Manual mode; Reset alarm in stop mode; Lamp test (press at least 3 seconds); During stopping process, press this button again to stop generator immediately.		
Start	Start	Start genset in Manual mode.		
Manual	Manual Mode	Press this key and controller enters in Manual mode.		
Auto	Auto Mode	Press this key and controller enters in Auto mode.		
Alarm Mute	Mute/Reset Alarm	Alarming sound off; If there is trip alarm, pressing the button at least 3 seconds can reset this alarm.		
Open Close	Gen Close/Open	Can control generator to switch on or off in manual mode. (HGM9310MPU, HGM9310CAN without)		
Open Close	Mains Close/Open	Can control generator to switch on or off in manual mode. (HGM9310MPU, HGM9310CAN without).		
Close	Close	Can close breaker in manual mode (HGM9320MPU, HGM9320CAN without)		
Open	Open	Can open breaker in manual mode (HGM9320MPU, HGM9320CAN without)		
	Up/Increase	1) Screen scroll; 2) Up cursor and increase value in setting menu.		
	Down/Decrease	1) Screen scroll; 2) Down cursor and decrease value in setting menu.		
	Left	1) Screen scroll; 2) Left move cursor in setting menu.		
D	Right	1) Screen scroll; 2) Right move cursor in setting menu.		
Enter	Set/Confirm	Select viewing area;		
Esc	Exit	 Returns to the main menu; In settings menu returns to the previous menu. 		

NOTE: In manual mode, pressing and simultaneously will force generator to crank. Successful start will not be judged according to crank disconnect conditions, operator will have to crank the starter motor manually; when operator decides that the engine has fired, he/she should release the button and start output will be deactivated, safety on delay will start.

WARNING: Default password is 00318, user can change it in case of others change the advanced parameters setting. Please clearly remember the password after changing. If you forget it, please contact Smartgen services and send all PD information in the controller page of "**ABOUT**" to us.

5.3LCD DISPLAY

5.3.1 MAIN DISPLAY

Main screen show pages; use D to scroll the pages and D to scroll the screen.

 \star Main screen, including as below:

Gen: voltage, frequency, current, active power, reactive power;

Mains: voltage, frequency;

Engine: speed, temperature, oil pressure, battery voltage;

Other some status

★ Status, including as below,

Status of genset, mains, and ATS

ANOTE: HGM9310MPU, HGM9310CAN has no mains status screen.

★Engine, including as below,

Speed, engine temperature, engine oil pressure, fuel level, auxiliary analog 1, auxiliary analog 2, battery voltage, charger voltage, accumulated run time, accumulated start times, user's total run time A, user's total run time B.

ANOTE: If connected with J1939 engine via CANBUS port, this page also includes: coolant pressure, coolant level, fuel temperature, fuel pressure, inlet temperature, exhaust temperature, turbo pressure, fuel consumption, total fuel consumption and so on. (Different engine with different parameters)

 \star Gen, including as below,

Phase voltage, line voltage, frequency, phase sequence

★Load, including as below,

Current, active power(positive and negative), total active power (positive and negative), reactive power(positive and negative), total reactive power (positive and negative), apparent power, total apparent power, power factor(positive and negative), average power factor (positive and negative), accumulated energy, earth current, total electric energy A and B.

ONOTE: Power factor shows as following,

COS < 0L	COS > 0L	Remark:
COS < 0C	COS > 0C	P stands for active power Q stands for inactive power

Power factor	Conditions	Active power	Inactive power	Remark
COS>0L	P>0,Q>0	Input	Input	Load is inductive resistance.
COS>0C	P>0,Q<0	Input	Output	Load is capacitance resistance.
COS<0L	P<0,Q>0	Output	Input	Load equal to one under excitation generator
COS<0C	P<0,Q<0	Output	Output	Load equal to one over excitation generator.

Note:

1. Input active power: generator or mains supply electricity to load.

2. Output active power: load supply electricity to generator or mains.

- 3. Input reactive power: generator or mains send reactive power to load.
- 4. Output reactive power: load send reactive power to generator or mains.

★Mains, including as below,

Phase voltage, line voltage, frequency, phase sequence

ANOTE: HGM9310MPU, HGM9310CAN has no mains status screen.

★Alarm:

Display all alarm information. e.g. warning alarm, shutdown alarm, trip alarm and trip and stop alarm.

NOTE: For ECU alarms and shutdown alarms, if the alarm information is displayed, check engine according to it, otherwise, please check the manual of generator according to SPN alarm code.

Event log

Records all start/stop events (shutdown alarm, trip and stop alarm, manual /auto start or stop) and the real time when alarm occurs.

Others, including,

Time and Date, count down time for maintenance, input/output ports status

About, including,

Issue time of software and hardware version, product PD number

5.3.2 USER MENU AND PARAMETERS SETTING MENU

Press and hold for more than 3 seconds to enter into user menu;

★Parameter

- 1. After entering the correct password (factory default password is 00318) you can enter parameter settings screen.
- 2. After entering the correct password (factory default password is 09300) you can enter basic parameter settings screen which can meet the demands of most users as the basic parameters can be set in sequence.

★Language

Selectable Chinese, English and others (default: Espanol)

★Commissioning

On load, off load or custom commissioning can be chosen. Custom commissioning can configure on load or not during commissioning, when to commissioning and select the mode after commissioning (manual mode, auto mode and stop mode).

★Clear users' accumulation

Can clear total run time A and B, total electric energy A and B.

Parameter setting Including as following,

- ★Mains settings
- ★Timer settings
- ★Engine settings
- ★Generator settings
- ★Load settings
- ★Switch settings
- ★Temperature sensor settings
- ★Oil pressure sensor settings
- ★Level sensor settings
- ★Flexible sensor 1
- ★Flexible sensor 2
- ★Input port settings
- ★Output port settings
- ★Module settings
- ★Scheduling and maintenance settings
- ★GSM settings

Example,		
Return	>Start Delay	Enter
Mains	>Return Delay	Form1: Use
Timers >	>Preheat Delay	
Engine	>Cranking Time	enter settings (form2), $\stackrel{{}_{Esc}}{\longrightarrow}$ to exit settings
Generator	>Crank Rest Time	menu.
Load	>Safety On Time	
Switch	>Start Idle Time	
Temp. Sensor	>Warming Up Time	
OP Sensor	>Cooling Time	
Level Sensor	>Stop Idle Time	
Flexible Sensor 1	>ETS Hold Time	

Return	> Start Delay	Form 2:
Mains	> Return Delay	Enter
Timers >	> Preheat Delay	Use 🗪 🤝 to scroll settings, 🖤 to enter
Engine	> Cranking Time	settings (form 4), Esc to return to previous
Generator	> Crank Rest Time	settings (form 4), \bigcirc to return to previous
Load	> Safety On Time	menu. (Form 1).
Switch	> Start Idle Time	
Temp. Sensor	> Warming Up Time	
OP Sensor	> Cooling Time	
Level Sensor	> Stop Idle Time	
Flexible Sensor 1	> ETS Hold Time	

Return	>Start Delay	Form 3:
Mains	> Return Delay	
Timers >	> Preheat Delay	Use 🗪 🤝 to scroll settings, 🖤 to enter
Engine	> Cranking Time	
Generator	> Crank Rest Time	settings (form 4), $\stackrel{{}_{\hbox{\scriptsize ESO}}}{\longrightarrow}$ to return to previous
Load	> Safety On Time	menu. (Form 1).
Switch	> Start Idle Time	
Temp. Sensor	> Warming Up Time	
OP Sensor	> Cooling Time	
Level Sensor	> Stop Idle Time	
Flexible Sensor 1	> ETS Hold Time	

Otent Delevi		
> Start Delay		Form 4:
> Return Delay	00008	Enter
> Preheat Delay		Press $\textcircled{1}$ to enter settings (form 5), $\textcircled{1}$ to
> Cranking Time		return to previous menu. (Form 6).
>Crank Rest Time		
> Safety On Time		
> Start Idle Time		
> Warming Up Time		
> Cooling Time		
> Stop Idle Time		
> ETS Hold Time		
> Start Delay		Form5:
> Return Delay	<mark>0</mark> 0008	
Droboot Dolou		Press V V to change cursor position.

> Return Delay	<mark>0</mark> 0008	
>Preheat Delay		Press 🔍 🕽 to change cursor position,
> Cranking Time		< 🔝 are used for changing cursor
> Crank Rest Time		value, 🕶 Confirm setting (form 4), 🔄 exit
> Safety On Time		value, Confirm setting (form 4), C exit
> Start Idle Time		setting (form 4).
> Warming Up Time		
> Cooling Time		
> Stop Idle Time		
> ETS Hold Time		

> Start Delay		Form 6:
> Return Delay	00008	Enter
> Preheat Delay		Use 🗪 to scroll settings. 🖤 to enter
> Cranking Time		Esc)
> Crank Rest Time		settings (form 4), ^(Esc) to return to previous
> Safety On Time		menu. (Form 1).
> Start Idle Time		
> Warming Up Time		
> Cooling Time		
> Stop Idle Time		
> ETS Hold Time		

ANOTE: Pressing **Can exit setting directly during setting**.

5.4AUTO START/STOP OPERATION

Auto mode is selected by pressing the button; a LED besides the button will illuminate to confirm the operation.

Automatic Start Sequence:

- HGM9320MPU(CAN): When Mains is abnormal (over and under voltage, over and under frequency, loss of phase, phase sequence wrong), it enters into mains "abnormal delay" and LCD display count down time. When mains abnormal delay is over, it enters into "start delay"; it also enters into this mode when "remote start on load" is active.
- HGM9310MPU(CAN): When "Remote Start (on load)" is active, "Start Delay" timer is initiated;
- 3. "Start Delay" countdown will be displayed on LCD;
- 4. When start delay is over, preheat relay energizes (if configured), "preheat delay XX s" information will be displayed on LCD;
- 5. After the above delay, the Fuel Relay (if configured) is energized, and then one second later, the Start Relay is engaged. The engine is cranked for a pre-set time. If the engine fails to fire during this cranking attempt then the fuel relay and start relay are disengaged for the pre-set rest period; "crank rest time" begins and wait for the next crank attempt.
- 6. Should this start sequence continue beyond the set number of attempts, the start sequence will be terminated, the first line of LCD display will be highlighted with black and Fail to Start fault will be displayed.
- 7. In case of successful crank attempt, the "Safety On" timer is activated, allowing Low Oil Pressure, High Temperature, Under speed and Charge Alternator Failure inputs to stabilise without triggering the fault. As soon as this delay is over, "start idle" delay is initiated (if configured).
- 8. During "start idle" delay, under speed, under frequency, under voltage alarms are inhibited. When this delay is over, "warming up" delay is initiated (if configured).
- 9. After the "warming up" delay has expired, if generator status is normal, its indicator will be illuminated. If generator voltage and frequency have reached on-load requirements, then the generator close relay will be energized; genset will take load; generator power indicator will illuminate and generator will enter into Normal Running status. If voltage or frequency is abnormal, the controller will initiate shutdown alarm (alarm information will be displayed on LCD).

ANote: When started via "Remote Start (off Load)" input, same procedures as above but generator close relay deactivated, moreover, genset off load in NO.9 item.

HGM93XX MPU(CAN) Series Genset Controller Version: 1.0 2014-07-24 Page 22 of 75

Automatic Stop Sequence:

- 1. HGM9320MPU(CAN), when mains return normal during genset running, enters into mains voltage "Normal delay" and its indicator illuminated. When mains normal delay is over, enter into "stop delay"; also can be into this mode when "remote start on load" is inactive.
- 2. HGM9310MPU(CAN), When the "Remote Start" signal is removed, the Stop Delay is initiated.
- 3. Once this "stop delay" has expired, the Generator Breaker will open and the "Cooling Delay" is then initiated. After "transfer delay", close mains relay is energized and mains will take load. Generator indicator extinguish while mains indicator lights.
- 4. During "Stop Idle" Delay (if configured), idle relay is energized.
- 5. "ETS Solenoid Hold" delay begins, ETS relay is energized while fuel relay is de-energized, complete stop is detected automatically.
- 6. "Fail to Stop Delay" begins, complete stop is detected automatically.
- 7. When generator is stop completely, "After stop" delay will be initiated. Otherwise, fail to stop alarm is initiated and the corresponding alarm information is displayed on LCD. (If generator is stop successfully after "fail to stop" alarm has initiated, "After stop" delay will be initiated and the alarm will be removed)
- 8. Generator is placed into its standby mode after its "After stop" delay.

5.5MANUAL START/STOP OPERATION

- 1. MANUAL START: Manual mode is selected by pressing the button; a LED besides the button will illuminate to confirm the operation; then press button to start the gen-set; can detect crank disconnect condition and generator accelerates to high-speed running automatically. With high temperature, low oil pressure, over speed and abnormal voltage during generator running, controller can protect genset to stop quickly. Press (HGM9320MPU, HGM9320CAN) or (HGM9310MPU, HGM9310CAN) can control the switch to close or open. (please refer to No.4~9 of Automatic Start Sequence for detail procedures; it is noted that the switch close/open ways are different)
- MANUAL STOP: Press can stop the running generators. (please refer to No.3~8 of Automatic Stop Sequence for detail procedures).

NOTE: In "manual mode", the procedures of ATS please refer to *Switch Control Procedure* of generator in this manual.

5.6SWITCH CONTROL PROCEDURES

5.6.1 HGM9320MPU(CAN) SWITCH CONTROL PROCEDURES

Manual transfer procedures

When controller is in **Manual** mode, the switch control procedures will start through manual transfer process.

Users can control the loading transfer of ATS via pressing button to switch on or off.

A. If "Open breaker detect" is "SELECT Disable"

Press generator switch on or off key (i), if generator has taken load, will send unload signal; if taken no load, generator will send load signal; if mains has taken load, will send unload signal, and then generator will take load after the mains "open delay".

Press mains switch on or off key^(esc), if mains has taken load, will send unload signal; if taken no load, mains will send load signal; if generator has taken load, will send unload signal, and then mains will take load after the generator "open delay".

If "Open breaker detect" is "SELECT Enable"

To transfer load from mains to generator need to press mains switch off key (e^{pen}) firstly. After open delay, press generator switch on key (e^{pen}) , and generator will take load (there is no action when pressing switch on key directly).

The way to transfer from generator to mains is as same as above.

Auto transfer procedures:

When controller is in AUTO mode, switch control procedures will start through automatic transfer.

1. If input port is configured as Close Mains Auxiliary

A. If "Open breaker detect" is "SELECT Enable"

When transferring load from mains to generator, controller begins detecting "fail to transfer", then the open delay and transfer rest delay will begin. When detecting time out, if switch open failed, the generator will not switch on, otherwise, generator switch on. Detecting transfer failure while generator switch on. When detecting time out, if switch on fail, it is need to wait for generator to switch on. If transfer failed and warning "SELECT Enable", there is alarming signal whatever switch on or off failure.

The way to transfer from generator load to mains load is as same as above.

B. If "Open breaker detect" is "SELECT Disable"

Mains load is transferred into generator load, after the delay of switch off and transfer interval, generator switch on. Detecting transfer fail while generator switch on. After detecting time out, if switch on fail, then wait for generator switch on. If transfer fail and warning "SELECT Enable", there is alarming signal.

2. If input port is not configured as Close Mains Auxiliary

Mains load is transferred into generator load, after switch off and transfer interval delay, generator switch on.

The way to transfer generator load to mains load is as same as above.

5.6.2HGM9610 SWITCH CONTROL PROCEDURES

Manual control procedures,

When controller is in Manual mode, manual control will be executive.

Users can control switch on or off by pressing panel key.

Press generator switch on key, generator will output load signal. Press generator switch off key, generator will output unload signal.

Auto control procedures,

When controller is in auto mode, switch control procedures will start auto transfer.

1. If input port is configured as Close Mains Auxiliary

A. If "Open breaker detect" is select "Enable"

Generator load is transferred into generator unload, after the open delay, the controller detects "transfer failure" while open signal is outputting. When detecting time out, if open failed, it will wait for breaker opened. Otherwise, breaker open is completed.

Generator unload is transferred into generator load, after the close delay, the controller detects "transfer failure" while close signal is outputting. When detecting time out, if close failed, it will wait for breaker closed. Otherwise, breaker close is completed.

If transfer failed and warning select "Enable", there is alarming signal whatever breaker open or close failure.

B. If "Open breaker detect" is select "Disable"

Generator unload is transferred into generator load, after the close delay, the controller detects "transfer failure" while close signal is outputting. When detecting time out, if close failed, it will wait for breaker closed. Otherwise, breaker close is completed.

If transfer failed and warning select "Enable", there is alarming signal whatever breaker

open or close failure.

2. If input port is not configured as Close Mains Auxiliary

Generator un-load is transferred into generator load, close generator output.

Generator load is transferred into generator un-load, open generator output.

NOTE:

When using ATS of no interposition, "Open breaker detect" should "Disable";

When using ATS of having interposition, "Open breaker detect" select "Disable" or "Enable"

both are OK. If select "Enable", breaker open output should be configured;

When using AC contactor, "Open breaker detect" should select "Enable".

6PROTECTION

6.1 WARNINGS

Warnings are not shutdown alarms and do not affect the operation of the gen-set. Warning alarms does not lead to shutdown. Warning alarms types are as follows:

No	Туре	Description
		When the controller detects that the engine speed has
1	Over Speed	exceeded the pre-set value, it will initiate a warning alarm.
2	Under Speed	When the controller detects that the engine speed has fallen
2		below the pre-set value, it will initiate a warning alarm.
3	Loss of Speed Signal	When the controller detects that the engine speed is 0 and
		the action select "Warn", it will initiate a warning alarm.
4	Gen Over Frequency	When the controller detects that the genset frequency has
		exceeded the pre-set value, it will initiate a warning alarm.
5	Gen Under	When the controller detects that the genset frequency has
	Frequency	fallen below the pre-set value, it will initiate a warning alarm. When the controller detects that the generator voltage has
6	Gen Over Voltage	exceeded the pre-set value, the controller will initiate a
0		warning alarm.
-	Genset Under	When the controller detects that the genset voltage has fallen
7	Voltage	below the pre-set value, it will initiate a warning alarm.
	Ŭ	When the controller detects that the genset current has
8	Gen Over Current	exceeded the pre-set value and the action select "Warn", it
		will initiate a warning alarm.
9	Fail To Stop	After "fail to stop" delay, if gen-set does not stop completely,
3	•	it will initiate a warning alarm.
10	Charge Alternator	When the controller detects that charger voltage has fallen
	Failure	below the pre-set value, it will initiate a warning alarm.
11	Battery Under Volt	When the controller detects that start battery voltage has
	,	fallen below the pre-set value, it will initiate a warning alarm.
12	Battery Over Volt	When the controller detects that start battery voltage has
		exceeded the pre-set value, it will initiate a warning alarm.
13	Maintenance Due	When count down time is 0 and the action select "Warn", it will initiate a warning alarm.
		If reverse power detection is enabled, when the controller
		detects that the reverse power value (power is negative) has
14	Reverse Power	fallen below the pre-set value and the action select "Warn", it
		will initiate a warning alarm.
		If over power detection is enabled, when the controller
15	Over Power	detects that the over power value (power is positive) has
15		exceeded the pre-set value and the action select "Warn", it
		will initiate a warning alarm.
16	ECU Warn	If an error message is received from ECU via J1939, it will
		initiate a warning alarm.
17	Gen Loss of Phase	If loss of phase detection is enabled, When controller detects
		the generator loss phase, it will initiate a warning alarm.

No	Туре	Description
18	Gen Phase Sequence Wrong	When the controller detects a phase rotation error, it will initiate a warning alarm.
19	Switch Fail Warn	When the controller detects that the breaker close or open failure occurs, and the action select "Warn", it will initiate a warning alarm.
20	Temperature Sensor Open Circuit	When the controller detects that the temperature sensor is open circuit and the action select "Warn", it will initiate a warning alarm.
21	High Temperature	When the controller detects that engine temperature has exceeded the pre-set value, it will initiate a warning alarm.
22	Low Temperature	When the controller detects that engine temperature has fallen below the pre-set value, it will initiate a warning alarm.
23	Oil Pressure Open Circuit	When the controller detects that the oil pressure sensor is open circuit and the action select "Warn", it will initiate a warning alarm.
24	Low Oil Pressure	When the controller detects that the oil pressure has fallen below the pre-set value, it will initiate a warning alarm.
25	Level Sensor Open Circuit	When the controller detects that the level sensor is open circuit and the action select "Warn", it will initiate a warning alarm.
26	Low Fuel Level	When the controller detects that the fuel level has fallen below the pre-set value, it will initiate a warning alarm.
27	Flexible Sensor 1 Open Circuit	When the controller detects that the flexible sensor 1 is open circuit and the action select "Warn", it will initiate a warning alarm.
28	Flexible Sensor 1 High	When the controller detects that the sensor 1 value has exceeded the pre-set value, it will initiate a warning alarm.
29	Flexible Sensor 1 Low	When the controller detects that the sensor 1 value has fallen below the pre-set value, it will initiate a warning alarm.
30	Flexible Sensor 2 Open Circuit	When the controller detects that the flexible sensor 2 is open circuit and the action select "Warn", it will initiate a warning alarm.
31	Flexible Sensor 2 High	When the controller detects that the sensor 2 value has exceeded the pre-set value, it will initiate a warning alarm.
32	Flexible Sensor 2 Low	When the controller detects that the sensor 2 value has fallen below the pre-set value, it will initiate a warning alarm.
33	Digital Input	When digit input port is set as warning and the alarm is active, it will initiate a warning alarm.
34	GSM Com Fail	When select GSM enable but the controller couldn't detect GSM model, controller sends corresponding warning signal.
35	Earth Fault	If earth fault detection is enabled, when the controller detects that the earth fault current has exceeded the pre-set value and the action select "Warn", it will initiate a warning alarm.

6.2SHUTDOWN ALARM

When controller detects shutdown alarm, it will send signal to open breaker and shuts down generator.

Shutdown	alarms	as following:
----------	--------	---------------

No	Туре	Description
1	Emergency Stop	When the controller detects an emergency stop alarm signal, it will initiate a shutdown alarm.
2	Over Speed	When the controller detects that the generator speed has exceeded the pre-set value, it will initiate a shutdown alarm.
3	Under Speed	When the controller detects that the generator speed has fallen below the pre-set value, it will initiate a shutdown alarm.
4	Loss of Speed Signal	When the controller detects that the engine speed is 0 and the action select "Shutdown", it will initiate a shutdown alarm.
5	Gen Over Frequency	When the controller detects that the genset frequency has exceeded the pre-set value, it will initiate a shutdown alarm.
6	Gen Under Frequency	When the controller detects that the genset frequency has fallen below the pre-set value, it will initiate a shutdown alarm.
7	Gen Over Voltage	When the controller detects that the generator voltage has exceeded the pre-set value, the controller will initiate a shutdown alarm.
8	Genset Under Voltage	When the controller detects that the genset voltage has fallen below the pre-set value, it will initiate a shutdown alarm.
9	Fail To Stop	If the engine does not fire after the pre-set number of attempts, it will initiate a shutdown alarm.
10	Gen Over Current	When the controller detects that the genset current has exceeded the pre-set value and the action select "Shutdown", it will initiate a shutdown alarm.
11	Maintenance Due	When count down time is 0 and the action select "Shutdown", it will initiate a shutdown alarm.
12	ECU Shutdown	If an error message is received from ECU via J1939, it will initiate a shutdown alarm.
13	ECU Fail	If the module does not detect the ECU data, it will initiate a shutdown alarm.
14	Reverse Power	If reverse power detection is enabled, when the controller detects that the reverse power value (power is negative) has fallen below the pre-set value and the action select "Shutdown", it will initiate a shutdown alarm.
15	Over Power	If over power detection is enabled, when the controller detects that the over power value (power is positive) has exceeded the pre-set value and the action select "Shutdown", it will initiate a shutdown alarm.
16	Temperature Sensor Open Circuit	When the controller detects that the temperature sensor is open circuit and the action select "Shutdown", it will initiate a shutdown alarm.

HGM93XX MPU(CAN) Series Genset Controller

No	Туре	Description
17	High Temperature	When the controller detects that engine temperature has exceeded the pre-set value, it will initiate a shutdown alarm.
18	Oil Pressure Open Circuit	When the controller detects that the oil pressure sensor is open circuit and the action select "Shutdown", it will initiate a shutdown alarm.
19	Low Oil Pressure	When the controller detects that the oil pressure has fallen below the pre-set value, it will initiate a shutdown alarm.
20	Level Sensor Open Circuit	When the controller detects that the level sensor is open circuit and the action select "Shutdown", it will initiate a shutdown alarm.
21	Flexible Sensor 1 Open Circuit	When the controller detects that the flexible sensor 1 is open circuit and the action select "Shutdown", it will initiate a shutdown alarm.
22	Flexible Sensor 1 High	When the controller detects that the sensor 1 value has exceeded the pre-set value, it will initiate a shutdown alarm.
23	Flexible Sensor 1 Low	When the controller detects that the sensor 1 value has fallen below the pre-set value, it will initiate a shutdown alarm.
24	Flexible Sensor 2 Open Circuit	When the controller detects that the flexible sensor 2 is open circuit and the action select "Shutdown", it will initiate a shutdown alarm.
25	Flexible Sensor 2 High	When the controller detects that the sensor 2 value has exceeded the pre-set value, it will initiate a shutdown alarm.
26	Flexible Sensor 2 Low	When the controller detects that the sensor 2 value has fallen below the pre-set value, it will initiate a shutdown alarm.
27	Digital Input	When digit input port is set as shutdown and the alarm is active, it will initiate a shutdown alarm.
28	Earth Fault	If earth fault detection is enabled, when the controller detects that the earth fault current has exceeded the pre-set value and the action select "Shutdown", it will initiate a shutdown alarm.

6.3TRIP AND STOP ALARM

On initiation of the trip and stop condition the controller will de-energize the 'Close Generator' Output to remove the load from the generator. Once this has occurred the controller will start the Cooling delay and allow the engine to cool before shutting down the engine.

No	Туре	Description
1	Gen Over Current	When the controller detects that the genset current has exceeded the pre-set value and the action select "Trip and Stop", it will initiate a trip and stop alarm.
2	Maintenance Due	When count down time is 0 and the action select "Trip and Stop", it will initiate a trip and stop alarm.
3	Reverse Power	If reverse power detection is enabled, when the controller detects that the reverse power value (power is negative) has fallen below the pre-set value and the action select "Trip and Stop", it will initiate a trip and stop alarm.
4	Over Power	If over power detection is enabled, when the controller detects that the over power value (power is positive) has exceeded the pre-set value and the action select "Trip and Stop", it will initiate a trip and stop alarm.
5	Digital Input	When digit input port is set as "Trip and Stop" and the alarm is active, it will initiate a trip and stop alarm.
6	Earth Fault	If earth fault detection is enabled, when the controller detects that the earth fault current has exceeded the pre-set value and the action select "Trip and Stop", it will initiate a trip and stop alarm.

6.4TRIP ALARM


On initiation of the trip condition the controller will de-energize the 'Close Generator' Output without stop the generator.

Trip alarm as following,

No	Туре	Description	
1	Gen Over Current	When the controller detects that the genset current has exceeded the pre-set value and the action select "Trip", it will initiate a trip alarm.	
2	Reverse Power	If reverse power detection is enabled, when the controller detects that the reverse power value (power is negative) has fallen below the pre-set value and the action select "Trip", it will initiate a trip alarm.	
3	Over Power	If over power detection is enabled, when the controller detects that the over power value (power is positive) has exceeded the pre-set value and the action select "Trip", it will initiate a trip alarm.	
4	Digital Input	When digit input port is set as "Trip" and the alarm is active, will initiate a trip alarm.	
5	Earth Fault	If earth fault detection is enabled, when the controller detects that the earth fault current has exceeded the pre-set value and the action select "Trip", it will initiate a trip alarm.	

7WIRINGS CONNECTION

HGM93XXMPU(CAN) series controller's rear as following:

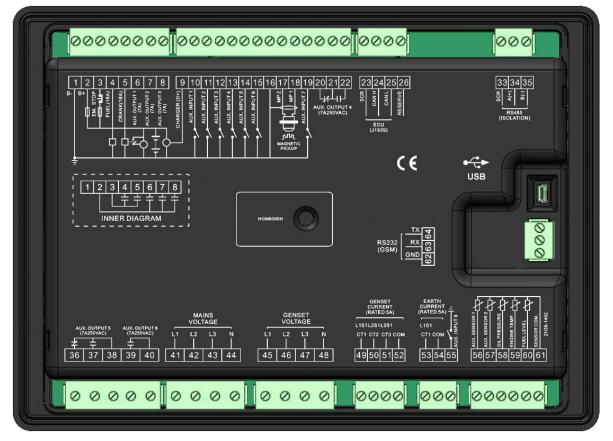

Description of terminal connection:

No.	Function	Cable Size	Remarks		
1	B-	2.5mm ²	Connected with negative of starter battery.		
2	B+	2.5mm ²	Connected with positive of starter battery. If wire length is over 30m, better to double wires in parallel. Max. 20A fuse is recommended.		
3	Emergency stop	2.5mm ²	Connected with B+ via emergency stop button.		
4	Fuel relay output	1.5mm ²	B+ is supplied by 3 terminal, rated 16A.		
5	Crank relay output	1.5mm ²	B+ is supplied by 3 terminal, Connected rated 16A.		
6	Aux. Output 1	1.5mm ²	B+ is supplied by 2 terminal, rated 7A.		
7	Aux. Output 2	1.5mm ²	B+ is supplied by 2 terminal, rated 7A.	Details see form 2.	
8	Aux. Output 3	1.5mm ²	B+ is supplied by 2 terminal, rated 7A.		
9	Charger(D+)	1.0mm ²	Connected with charger st terminals. Being hang up If terminal.		

HGM93XX MPU(CAN) Series Genset Controller

No.	Function	Cable Size	Remarks			
10	Aux. Input 1	1.0mm ²	Ground connected is active (B-).			
11	Aux. Input 2	1.0mm ²	Ground connected is active (B-).			
12	Aux. Input 3	1.0mm ²	Ground connected is active (B-).	Details see form		
13	Aux. Input 4	1.0mm ²	Ground connected is active (B-).	3		
14	Aux. Input 5	1.0mm ²	Ground connected is active (B-).			
15	Aux. Input 6	1.0mm ²	Cround connected in active			
16	Magnetic Pickup		Connected with Speed senso	r, shielding line is		
17	Magnetic Pickup 2	0.5mm ²	recommended. (B-) has alread	dy connected with		
18	Magnetic Pickup 1		speed sensor 2.			
19	Aux. Input 7	1.0mm ²	Ground connected is active (B-).	Details see form 3.		
20			Normally close output, rated 7A.			
21	Aux. Output 4	1.5mm ²	Public points of relay.	Details see form		
22			Normally open output, rated 7A.			
23	ECU CAN	/	Impedance-120Ω shielding wire	e is recommended,		
24	ECU CAN H	0.5mm ²	its single-end earthed.			
25	ECU CAN L	0.5mm ²	(HGM9310MPU, HGM9310CA	N without).		
26	RESERVE	/	Empty terminal			
33	RS485	/				
34	RS485+	0.5mm ²	Impedance-120Ω shielding wire	e is recommended,		
35	RS485-	0.5mm ²	its single-end earthed.			
36		2.5mm ²	Normally close output, rated 7A.			
37	Aux. Output 5	2.5mm ²	Normally open output, rated 7A.	Details see form		
38		2.5mm ²	Public points of relay 2.			
39	Aux. Output 6	2.5mm ²	Normally open output, rated 7A.			
40		2.5mm ²	Public points of relay			
41	Mains A-phase voltage input	1.0mm ²	Connected to A-phase of m recommended). (HGM9310MPU, HGM9310CA	·		
42	Mains B-phase voltage input	1.0mm ²	Connected to B-phase of m recommended). (HGM9310MPU, HGM9310CA	ains (2A fuse is		

HGM93XX MPU(CAN) Series Genset Controller

No.	Function	Cable Size	Remarks		
	Mains C-phase	2	Connected to C-phase of mains (2A fuse is		
43	voltage input	1.0mm ²	recommended).		
			(HGM9310MPU, HGM9310CAN without). Connected to N-wire of mains.		
44	Mains N-wire input 1.0mm ²		(HGM9310MPU, HGM9310CAN without).		
45	Genset A-phase 1.0mm		Connected to A-phase of gen-set (2A fuse is		
45	voltage input	1.0000	recommended).		
46	Genset B-phase voltage input	1.0mm ²	Connected to B-phase of gen-set (2A fuse is recommended).		
47	Genset C-phase	1.0mm ²	Connected to C-phase of gen-set (2A fuse is		
	voltage input		recommended).		
48	Genset N-wire input	1.0mm ²	Connected to N-wire of gen-set.		
49	CT A-phase input	1.5mm ²	Outside connected to secondary coil of current transformer(rated 5A).		
50	CT B-phase input	1.5mm ²	Outside connected to secondary coil of current		
50		1.5000	transformer(rated 5A).		
51	CT C-phase input	1.5mm ²	Outside connected to secondary coil of current transformer(rated 5A).		
52	CT COM	1.5mm ²	See following installation instruction.		
53	Earth Current	1.5mm ²	Outside connected to secondary coil of current		
54		1.5mm ²	transformer(rated 5A).		
55	Aux. Input 8	1.0mm ²	Ground connected is active Details see form (B-).		
56	Aux. sensor 1	1.0mm ²	Connected to temperature, oil		
57	Aux. sensor 2	1.0mm ²	pressure or level sensors.		
58	Oil pressure sensor	1.0mm ²	Connected to oil pressuresensor.Details see form		
59	Temperature sensor	1.0mm ²	Connected to temperature 4. sensor.		
60	Fuel level sensor	1.0mm ²	Connected to fuel level sensor.		
61	Sensor COM	/	Public terminal of sensor, (B-) has already connected.		
62	RS232	0.5mm ²			
63	RS232 RX	0.5mm ²	Connected to GSM module.		
64	RS232 TX	0.5mm ²			

ANOTE: USB ports in controller rear panel are programmable parameter ports, user can directly configure controller via PC.

ANOTE: Please refer to the Module Comparison in this manual for more details.

8 SCOPES AND DEFINITIONS OF PROGRAMMABLE PARAMETERS

8.1CONTENTS AND SCOPES OF PARAMETERS

Form 1

Form No.	Items	Parameters	Defaults	Description	
Main	Mains Setting				
1	AC System	(0~3)	0	0: 3P4W; 1: 3P3W; 2: 2P3W; 3: 1P2W.	
2	Rated Voltage	(30~30000)V	230	Standard for checking mains over/under voltage. (It is primary voltage when using voltage transformer).	
3	Rated Frequency	(10.0~75.0) Hz	50.0	Standard for checking mains over/under frequency.	
4	Normal Time	(0~3600)s	10	The delay from mains abnormal to normal.	
5	Abnormal Time	(0~3600)s	5	The delay from mains normal to abnormal.	
6	Volt. Trans.(PT)	(0~1)	0	0: Disable ; 1: Enable	
7	Over Voltage	(0~200)%	120%	Setting value is mains rated voltage's percentage, and return value (Over	
8	Under Voltage	(0~200)%	80%	Voltage default: 116; Under Voltage default: 84) and delay value (default: 5s) can be set.	
9	Over Frequency	(0~200)%	114%	Setting value is mains rated frequency's percentage, return value	
10	Under Frequency	(0~200)%	90%	(Over Frequency default: 110; Unde Frequency default: 94) and dela value (default: 5s) can be set.	
11	Loss of Phase	(0~1)	1		
12	Reverse Phase	(0~1)	1	0: Disable; 1: Enable	
Time	r Setting				
1	Start Delay	(0~3600)s	1	Time from mains abnormal or remote start signal is active to start genset.	
2	Return Delay	(0~3600)s	1	Time from mains normal or remote start signal is deactivated to genset stop.	
3	Preheat Delay	(0~3600)s	0	Time of pre-powering heat plug before starter is powered up.	
4	Cranking Time	(3~60)s	8	Time of starter power up	

No.	Items	Parameters	Defaults	Description
5	Crank Rest Time	(3~60)s	10	The waiting time before second power up when engine start fail.
6	Safety On Delay	(0~3600)s	10	Alarms for low oil pressure, high temperature, under speed, under frequency /voltage, charge fail are inactive.
7	Start Idle Time	(0~3600)s	0	Idle running time of genset when starting.
8	Warming Up Time	(0~3600)s	10	Warming time between genset switch on and normal running.
9	Cooling Time	(0~3600)s	10	Radiating time before genset stop, after it unloads.
10	Stop Idle Time	(0~3600)s	0	Idle running time when genset stop.
11	ETS Solenoid Hold	(0~3600)s	20	The time of powering up the electromagnet during stop procedure.
12	Fail to Stop Delay	(0~3600)s	0	Time between ending of genset idle delay and stopped when "ETS time" is set as 0; Time between ending of ETS hold delay and stopped when "ETS Hold output time" is not 0.
13	After Stop Time	(0~3600)s	0	Time between genset stopped and standby
Engi	ne Setting			
1	Engine Type	(0~39)	0	Default: Conventional genset (not J1939) When connected to J1939 engine, choose the corresponding type.
2	Flywheel Teeth	(10~300)	118	Tooth number of the engine, for judging of crank disconnect conditions and inspecting of engine speed. See the installation instructions.
3	Rated Speed	(0~6000)r/min	1500	Offer standard to judge over/under/loading speed.
4	Speed on Load	(0~100)%	90%	Setting value is percentage of rated speed. Controller detects when it is ready to load. It won't switch on when speed is under loading speed.
5	Loss of Speed Signal	(0~3600)s	5	Time from detecting speed is 0 to confirm the action.
6	Loss of Speed	(0~1)	0	0:Warn; 1:Shutdown

No.	Items	Parameters	Defaults	Description
	Action			
7	Over Speed Shutdown	(0~200)%	114%	Setting value is percentage of rated speed and delay value (Over Speed
8	Under Speed Shutdown	(0~200)%	80%	default: 2s; Under Speed default: 3s) can be set.
9	Over Speed Warn	(0~200)%	110%	Setting value is percentage of rated speed. Delay value (default: 5s) and
10	Under Speed Warn	(0~200)%	86%	return value (Over Speed default: 108; Under Speed default: 90) also can be set.
11	Battery Rated Voltage	(0~60.0)V	24.0	Standard for detecting over/under voltage of battery.
12	Battery Over Volts	(0~200)%	120%	Setting value is percentage of rated voltage of battery. Delay value
13	Battery Under Volts	(0~200)%	85%	(default: 60s) & return value (Over Volts default: 115; Under Volts default: 90) can be set.
14	Charge Alt Fail	(0~60.0)V	8.0	In normal running, when charger D+(WL) voltage under this value, charge failure alarms.
15	Start Attempts	(1~10) times	3	Max. Crank times of crank attempts. When reach this number, controller will send start failure signal.
16	Crank Disconnect	(0~6)	2	See form 5 There are 3 conditions of disconnecting starter with engine. Each condition can be used alone and simultaneously to separating the start motor and genset as soon as possible.
17	Disconnect Generator Freq	(0~200)%	24%	When generator frequency higher than the set value, starter will be disconnected. See the installation instruction.
18	Disconnect Engine Speed	(0~200)%	24%	When generator speed higher than the set value, starter will be disconnected. See the installation instruction.
19	Disconnect Oil Pressure	(0~1000)kPa	200	When generator oil pressure higher than the set value, starter will be disconnected. See the installation instruction.
Gene	erator Setting			

No.	Items	Parameters	Defaults	Description
1	AC System	(0~3)	0	0: 3P4W; 1: 3P3W; 2: 2P3W; 3: 1P2W.
2	Poles	(2~64)	4	Numbers of generator pole, used for calculating starter rotate speed when without speed sensor.
3	Rated Voltage	(30~30000)V	230	To offer standards for detecting of generator' over/under voltage and loading voltage. (It is primary voltage when using voltage transformer).
4	Loading Voltage	(0~200)%	85%	Setting value is percentage of generator rated voltage. Detect when controller ready to loading. If generator voltage under load voltage, won't enter into normally running.
5	Rated Frequency	(10.0~600.0)Hz	50.0	To offer standards for detecting of over/under/load frequency.
6	Loading Frequency	(0~200)%	85%	Setting value is percentage of generator rated frequency. Detect when controller ready to loading. When generator frequency under load frequency, it won't enter into normal running.
7	Volt. Trans.(PT)	(0~1)	0	0: Disable; 1:Enable
8	Over Volt. Shutdown	(0~200)%	120%	Setting value is percentage of generator rated volt. Delay value
9	Under Volt. Shutdown	(0~200)%	80%	(default: 3s) can be set.
10	Over Freq. Shutdown	(0~200)%	114%	Setting value is percentage of generator rated freq. Delay value
11	Under Freq. Shutdown	(0~200)%	80%	(Over Freq. default: 2s; Under Freq. default: 3s) can be set.
12	Over Volt. Warn	(0~200)%	110%	Setting value is percentage of generator rated volt. Delay value
13	Under Volt. Warn	(0~200)%	84%	(default: 5s) and return value (Over Volt. default: 108; Under Volt. default: 86) can be set.
14	Over Freq. Warn	(0~200)%	110%	Setting value is percentage of generator rated frequency. Delay
15	Under Freq. Warn	(0~200)%	84%	value (default: 5s) and return value (Over Freq. default: 108; Under Freq. default: 86) can be set.
16	Loss of Phase	(0~1)	1	0: Disable 1: Enable

No.	Items	Parameters	Defaults	Description
17	Phase Sequence Wrong	(0~1)	1	
Load	Setting			
1	Current Trans.	(5~6000)/5	500/5	The ratio of external CT
2	Full Current Rating	(5~6000)A	500	Generator's rated current, standard of load current.
3	Full kW rating	(0~6000)kW	276	Generator's rated power, standard of load power.
4	Over Current	(0~200)%	120%	Setting value is percentage of generator rated full current. Delay value can be set as definite time and inverse definite minimum time.
5	Over Power	(0~1)	0	0: Disable 1: Enable
6	Reverse Power	(0~1)	0	0: Disable 1: Enable
7	Earth Fault	(0~1)	0	0: Disable 1: Enable
Swite	ch Setting	· · · ·		
1	Transfer Time	(0~7200)s	5	Interval time from mains switch off to generator switch on; or from generator switch off to mains switch on.
2	Close Time	(0~20.0)s	5.0	Pulse width of mains/generator switch on. When it is 0, means output constantly.
3	Open Time	(0~20.0)s	3.0	Pulse width of mains/generator switch off.
4	Check Time	(0~20.0)s	5.0	Time of detecting switch auxiliary contacts after transferred.
5	Warn Enable	(0~1)	0	0: Disable 1: Enable
6	Check Enable	(0~1)	0	0: Disable 1: Enable
7	Enable immediate mains Dropout	(0~1)	1	0: Disable 1: Enable
Mod	ule Setting			
1	Power on Mode	(0~2)	0	0: Stop mode 1: Manual mode2: Auto mode
2	Module Address	(1~254)	1	Controller's address during remote sensing.
3	Stop Bits	(0~1)	0	0: 2 stop bits; 1: 1 stop bit
4	Language	(0~2)	0	0: Simplified Chinese 1: English 2: Others
5	Password	(0~65535)	00318	For entering advanced parameters

HGM93XX MPU(CAN) Series Genset Controller Version: 1.0

No.	Items	Parameters	Defaults	Description	
				setting.	
6	Temperature Units	(0-1)	0	0: °C; 1: °F	
7	Pressure Units	(0-2)	0	0: kPa; 1: Psi; 2: Bar.	
8	Module Mute	(0-1)	0	0: Disable 1: Enable	
9	User Page	(0-1)	0	0: Disable 1: Enable	
10	User Page Time	(0-20.0)s	3.0	If "User Page Time" is enabled, the user-set time will be displayed continuously.	
11	Date and Time			Set the module's date and time.	
GSM	Setting				
1	GSM Enable	(0~1)	0	0: Disable; 1: Enable	
2	Phone Number	Max.20 digits	0	0: Disable; 1: Enable Its national and area's cods must be added. e.g. China: 86136666666666.	
Sche	eduling And Main	tenance Setting	T		
1	Scheduled Run	(0~1)	0	0: Disable; 1: Enable	
2	Scheduled Not Run	(0~1)	0	0: Disable; 1: Enable	
3	Maintenance	(0~1)	0	0: Disable; 1: Enable	
Anal	og Sensors Setti	ng			
Temp	perature Sensor				
1	Curve Type	(0~15)	7	SGX See form 5.	
2	Open Circuit Action	(0~2)	0	0: Warn; 1: Shutdown; 2: No action	
3	High Temp. Shutdown	(0~300)°C	98	Shutdown when sensor temperature higher than this value. Detecting only after safety delay is over. The delay value (default: 3s) can be set.	
4	High Temp. Warn	(0~300) ⁰C	95	Warn when sensor temperature higher than this value. Detecting only after safety delay is over. The delay value (default: 5s) and return value (default: 93) can be set.	
5	Low Temp. Warn	(0~1)	0	0: Disable; 1: Enable	
Oil P	Oil Pressure Sensor				
1	Curve Type	(0~15)	7	SGX See form 5.	
2	Open Circuit Action	(0~2)	0	0: Warn 1: Shutdown 2: No action	
3	Low OP Shutdown	(0~1000)kPa	103	Shutdown when oil pressure lower than this value. Detecting only after safety delay is over. The delay value	

No.	Items	Parameters	Defaults	Description	
				(default: 3s) can be set.	
4	Low OP Warn	(0~1000)kPa	124	Warn when oil pressure higher than this value. Detecting only after safety delay is over. The delay value (default: 5s) and return value (default: 138) can be set.	
Leve	l Sensor		1		
1	Curve Type	(0~15)	4	SGH See form 5.	
2	Open Circuit Action	(0~2)	0	0:Warn; 1:Shutdown; 2:No action	
3	Low Level Warn	(0~300)%	10	Warn when level lower than this value. It is detecting all the time. The delay value (default: 5s) and return value (default: 15) can be set.	
Flexil	ble Sensor 1				
1	Flexible Sensor 1 Setting	(0~1)	0	0: Disable 1: Enable; (can be set as temperature/pressure/ lever sensor).	
Flexil	ble Sensor 2				
1	Flexible Sensor 2 Setting	(0~1)	0	0: Disable; 1: Enable; (can be set as temperature/pressure/ lever sensor).	
Flexi	ble Input Ports				
Flexil	ble Input Port 1				
1	Contents Setting	(0~50)	28	Remote start (on load). See form 3	
2	Active Type	(0~1)	0	0: Closed to active 1: Open to active	
Flexil	ble Input Port 2				
1	Contents Setting	(0~50)	26	High temperature shutdown See form 3	
2	Active Type	(0~1)	0	0: Closed to active 1: Open to active	
Flexil	ble Input Port 3			· · ·	
1	Contents Setting	(0~50)	27	Low oil pressure shutdown See form 3	
2	Active Type	(0~1)	0	0: Closed to active 1: Open to active	
Flexil	Flexible Input Port 4				
1	Contents Setting	(0~50)	0	User defined. See form 3	
2	Active Type	(0~1)	0	0: Closed to active 1: Open to active	
3	Arming	(0~3)	2	0: From safety on 1: From starting	

HGM93XX MPU(CAN) Series Genset Controller Version: 1.0

No.	Items	Parameters	Defaults	Description		
				2: Always 3:Never		
4	Active Actions	(0~4)	0	0: Warn; 1: Shutdown; 2:Trip and stop 3:Trip 4: Indication		
5	Active Delay	(0~20.0)s	2.0	Time from detecting active to confirm		
6	Description			LCD display detailed contents when the input is active.		
Flexi	ble Input Port 5	1	-			
1	Contents Setting	(0~50)	0	User defined. See form 3		
2	Active Type	(0~1)	0	0: Closed to active 1: Open to active		
3	Arming	(0~3)	2	0: From safety on 1: From starting 2: Always 3:Never		
4	Active Actions	(0~4)	1	0: Warn; 1: Shutdown; 2:Trip and stop 3:Trip 4: Indication		
5	Active Delay	(0~20.0)s	2.0	Time from detecting active to confirm		
6	Description			LCD display detailed contents when the input is active.		
Flexi	ble Input Port 6					
1	Contents Setting	(0~50)	0	User defined. See form 3		
2	Active Type	(0~1)	0	0: Closed to active 1: Open to active		
3	Arming	(0~3)	2	0: From safety on 1: From starting 2: Always 3:Never		
4	Active Actions	(0~4)	2	0: Warn; 1: Shutdown; 2:Trip and stop 3:Trip 4: Indication		
5	Active Delay	(0~20.0)s	2.0	Time from detecting active to confirm		
6	Description			LCD display detailed contents when the input is active.		
Flexi	ble Input Port 7	1				
1	Contents Setting	(0~50)	5	Lamp test. See form 3		
2	Active Type	(0~1)	0	0: Closed to active 1: Open to active		
Flexi	Flexible Input Port 8					
1	Contents Setting	(0~50)	0	User defined .See form 3		
2	Active Type	(0~1)	0	0: Closed to active 1: Open to active		
3	Arming	(0~3)	2	0: From safety on 1: From starting 2: Always 3:Never		

No.	Items	Parameters	Defaults	Description	
4	Active Actions	(0~4)	0	0: Warn; 1: Shutdown; 2:Trip and stop 3:Trip 4: Indication	
5	Active Delay	(0~20.0)s	2.0	Time from detecting active to confirm	
6	Description		1	LCD display detailed contents when the input is active.	
Flexi	ble Output Ports				
Flexi	ble Output Port 1				
1	Contents Setting	(0~239)	1	User defined period output (default output is in preheating) See Form 4	
2	Active Type	(0~1)	0	0:Normally open; 1:Normally close	
Flexi	ble Output Port 2				
1	Contents Setting	(0~239)	35	Idle control output. See Form 4	
2	Active Type	(0~1)	0	0:Normally open; 1:Normally close	
Flexi	ble Output Port 3				
1	Contents Setting	(0~239)	29	Generator closed output. See form 4	
2	Active Type	(0~1)	0	0:Normally open; 1:Normally close	
Flexi	ble Output Port 4				
1	Contents Setting	(0~239)	31	Mains closed output. See form 4	
2	Active Type	(0~1)	0	0:Normally open; 1:Normally close	
Flexi	ble Output Port 5				
1	Contents Setting	(0~239)	38	ETS solenoid hold. See form 4	
2	Active Type	(0~1)	0	0:Normally open; 1:Normally close	
Flexi	Flexible Output Port 6				
1	Contents Setting	(0~239)	48	Common alarm. See form 4	
2	Active Type	(0~1)	0	0:Normally open; 1:Normally close	

8.2ENABLE DEFINITION OF PROGRAMMABLE OUTPUT PORTS

Form 2

No.	Туре	Description
0	Not Used	Description
1	Custom Period 1	
2	Custom Period 2	-
2	Custom Period 2	-
3		Details of function departmention places and the following
4 5	Custom Period 4 Custom Period 5	Details of function description please see the following.
		_
6	Custom Period 6	_
7	Custom Combined 1	
8	Custom Combined 2	-
9	Custom Combined 3	
10	Custom Combined 4	-
11	Custom Combined 5	-
12	Custom Combined 6	
13	Reserved	
14	Reserved	
15	Reserved	
16	Reserved	
17	Air Flap	Action when over speed shutdown and emergence stop. It can close the air inflow to stop the engine as soon as possible.
18	Audible Alarm	Action when warning, shutdown, trips. Can be connected annunciator externally. When "alarm mute" configurable input port is active, it can remove the alarm.
19	Louver Control	Action when genset is cranking and disconnect when genset stopped completely.
20	Fuel Pump Control	It is controlled by fuel pump of level sensor's limited threshold.
21	Heater Control	It is controlled by heating of temperature sensor's limited threshold.
22	Cooler Control	It is controlled by cooler of temperature sensor's limited threshold.
23	Oil Pre-supply Output	Action from "crank on" to "safety on".
24	Excite Generator	Output in start period. If there is no generator frequency during normal running, it outputs for 2 seconds again.
25	Pre-Lubricate	Actions in period of pre-heating to safety run.
26	Remote PC Output	This port is controlled by communication (PC).
27	GSM Power	Power for GSM module (GSM module is reset when GSM communication failed).
28	Reserved	
29	Close Generator	Control generator to take load.

HGM93XX MPU(CAN) Series Genset Controller Version: 1.0 2014-07-24 Page 46 of 75

30	Open Breaker	Control generator to off load.
31	Close Mains	Control mains to take load.
32	Reserved	
33	Start Relay	
34	Fuel Relay	Action when genset is cranking and disconnect when stopped completely.
35	Idle Control	Used for engine which has idles. Close before starting and open in warming up delay; Close during stopping idle mode and open when stop is completed.
36	Raise Speed	Action in warming up delay.
37	Drop Speed	Action between the period from "stop idle" to "failed to stop".
38	ETS Control	Used for engines with ETS electromagnet. Close when stop idle is over and open when pre-set "ETS delay" is over.
39	Pulse Drop speed	Active 0.1s when controller enters into stop idle, used for control part of ECU dropping to idle speed.
40	ECU Stop	Used for ECU engine and control its stop.
41	ECU Power	Used for ECU engine and control its power.
42	Pulse Raise Speed	Active 0.1s when controller enters into warming up delay; used for control part of ECU raising to normal speed.
43	Crank Success	Close when detects a successful start signal.
44	Generator OK	Action when generator is normal.
45	Generator Available	Action in period of generator is normal running to hi-speed cooling.
46	Mains OK	Action when mains is normal.
47	Reserved	
48	Common Alarm	Action when genset common warning, common shutdown, common trips alarm.
49	Common Trip and Stop	Action when common trip and stop alarm.
50	Common Shutdown	Action when common shutdown alarm.
51	Common Trip Alarm	Action when common trips alarm.
52	Common Warning Alarm	Action in common warning alarm.
53	Reserved	
54	Battery High Volts	Action when battery's over voltage warning alarm.
55	Battery Low Volts	Action when battery's low voltage warning alarm.
56	Charge Alt Fail	Action when charge failure warning alarms.
57	Reserved	
58	Reserved	
59	Reserved	
60	ECU Warn	Indicate ECU sends a warning signal.
61	ECU Shutdown	Indicate ECU sends a shutdown signal.
62	ECU Com Fail	Indicate controller not communicates with ECU.
63	Reserved	

64	Deserved	
	Reserved	
65	Reserved	
66	Reserved	
67	Reserved	
68	Reserved	
69	Aux Input 1 Active	Action when input port 1 is active
70	Aux Input 2 Active	Action when input port 2 is active
71	Aux Input 3 Active	Action when input port 3 is active
72	Aux Input 4 Active	Action when input port 4 is active
73	Aux Input 5 Active	Action when input port 5 is active
74	Aux Input 6 Active	Action when input port 6 is active
75	Aux Input 7 Active	Action when input port 7 is active
76	Aux Input 8 Active	Action when input port 8 is active
77~	Beconved	
98	Reserved	
99	Emergency Stop	Action when emergency stop alarm.
100	Failed To Start	Action when failed start alarm.
101	Failed To Stop	Action when failed stop alarm.
102	Under Speed Warn	Action when under speed alarm.
103	Under Speed Shutdown	Action when under speed shuts down.
104	Over Speed Warn	Action when over speed warns.
105	Over Speed Shutdown	Action when over speed shutdown alarm.
106	Reserved	
107	Reserved	
108	Reserved	
109	Gen Over Frequency Warn	Action when generator over frequency warns.
110	Gen Over Frequency Shut	Action when generator over frequency shutdown alarm.
111	Gen Over Volt Warn	Action when generator over voltage warns.
112	Gen Over Volt Shut	Action when generator over voltage shutdown.
113	Gen Under Freq. Warn	Action when generator low frequency warns.
114	Gen Under Freq. Shut	Action when generator low frequency shutdown.
115	Gen Under Volt. Warn	Action when generator low voltage warns.
116	Gen Under Volt. Shut	Action when generator low voltage shutdown.
117	Gen Loss of Phase	Action when generator loss phase.
118	Gen Reverse Phase	Action when generator reverse phase.
119	Reserved	
120	Over Power	Action when controller detects generator have over power.
121	Reserved	
122	Reverse Power	Action when controller detects generator have reverse power.
123	Over Current	Action when over current.
124	Reserved	

125	Mains Inactive	
125	Mains Over Freq	
120	Mains Over Volt	
128	Mains Under Freq	
129	Mains Under Volt	
130	Mains Reverse Phase	
131	Mains Loss of Phase	
132~ 138	Reserved	
139	High Temp Warn	Action when hi-temperature warns.
140	Low Temp Warn	Action when low temperature warns.
141	High Temp Shutdown	Action when hi-temperature shutdown alarm.
142	Reserved	·
143	Low OP Warn	Action when low oil pressure warns.
144	Low OP Shutdown	Action when low oil pressure shutdown.
145	OP Sensor Open	Action when oil pressure sensor is open circuit.
146	Reserved	
147	Low Level Warn	Action when controller has low oil level alarm.
148	Reserved	
149	Reserved	
150	Flexible Sensor 1 High Warn	
151	Flexible Sensor 1 Low Warn	
152	Flexible Sensor 1 High Shut	
153	Flexible Sensor 1 Low Shut	
154	Flexible Sensor 2 High Warn	
155	Flexible Sensor 2 Low Warn	
156	Flexible Sensor 2 High Shut	
157	Flexible Sensor 2 Low Shut	
158~ 229	Reserved	
230	Stop Mode	Action in stop mode.
231	Manual Mode	Action in Manual mode.
232	Reserved	
233	Auto Mode	Action in Auto mode.
234	Generator On Load	
235	Mains On Load	
236	Reserved	

237	Reserved	
238	Reserved	
239	Reserved	

8.2.1 CUSTOM PERIOD OUTPUT

Defined Period output is composed by 2 parts, period output S1 and condition output S2.

S1 S2

While S1 and S2 are **TRUE** synchronously, OUTPUT;

While S1 or S2 is **FALSE**, NOT OUTPUT.

Period output S1, can set generator's one or more period output freely, can set the delayed time and output time after enter into period.

Condition output S2; can set as any conditions in output ports.

ANOTE: when delay time and output time both are 0 in period output S1, it is **TRUE** in this period.

Example,

Output period: start

Delay output time: 2s

Output time: 3s

Condition output contents: output port 1 is active


Close when condition output active/inactive: close when active (disconnect when inactive);

Output port 1 active, after enter "starts time" and delay 2s, this defined period output is outputting, after 3s, stop outputting;

Output port 1 inactive, defined output period is not outputting.

8.2.2 CUSTOM COMBINED OUTPUT

Defined combination output is composed by 3 parts, condition output S1 or S2 and condition output S3.



S1 or S2 is TRUE, while S3 is TRUE, Defined combination output is outputting;

S1 and S2 are FALSE, or S3 is FALSE, Defined combination output is not outputting.

ANOTE: S1, S2, S3 can be set as any contents except for "defined combination output" in the output setting.

ANOTE: 3 parts of defined combination output (S1, S2, S3) couldn't include or recursively include themselves.

Example,

Contents of probably condition output S1: output port 1 is active;

Close when probably condition output S1 is active /inactive: close when active (disconnect when inactive);

Contents of probably condition output S2, output port 2 is active;

Close when probably condition output S2 is active /inactive: close when active (disconnect when inactive);

Contents of probably condition output S3: output port 3 is active;

Close when probably condition output S3 is active /inactive: close when active (disconnect when inactive);

When input port 1 active or input port 2 active, if input port 3 is active, Defined combination output is outputting; If input port 3 inactive, Defined combination output is not outputting;

When input port 1 inactive and input port 2 inactive, whatever input port 3 is active or not, Defined combination output is not outputting.

8.3DEFINED CONTENTS OF CONFIGURABLE INPUT PORTS (ALL ACTIVE WHEN CONNECT TO GRAND (B-))

Form 3

No.	Туре	Description
0	Users Configured	Including following functions, Indication: indicate only, not warning or shutdown. Warning: warn only, not shutdown. Shutdown: alarm and shutdown immediately Trip and stop: alarm, generator unloads and shutdown after hi-speed cooling Trip: alarm, generator unloads but not shutdown. Never: input inactive. Always: input is active all the time. From crank: detecting as soon as start. From safety on: detecting after safety on run delay.
1	Reserved	
2	Alarm Mute	Can prohibit "Audible Alarm" output when input is active.
3	Reset Alarm	Can reset shutdown alarm and trip alarm when input is active.
4	60Hz Active	Use for CANBUS engine and it is 60Hz when input is active.
5	Lamp Test	All LED indicators are illuminating when input is active.
6	Panel Lock	All buttons in panel is inactive except
7	Reserved	
8	Idle Control Mode	Under voltage/frequency/speed protection is inactive.
9	Inhibit Auto Stop	In Auto mode, during generator normal running, when input is active, inhibit generator shutdown automatically.
10	Inhibit Auto Start	In Auto mode, inhibit generator start automatically when input is active.
11	Inhibit Scheduled Run	In Auto mode, inhibit scheduled run genset when input is active.
12	Reserved	
13	Aux Gen Closed	Connect generator loading switch's Aux. Point.
14	Inhibit Gen Load	Prohibit genset switch on when input is active.
15	Aux Mains Closed	Connect mains loading switch's Aux. Point.

16	Inhibit Mains Load	Prohibit mains switch on when input is active.	
		When input is active, controller enters into Auto	
17	Auto Mode Lock	mode; all the keys except	
18	Auto Mode Invalid	When input is active, controller won't work under Auto mode. Key and simulate auto key input does not work.	
19	Controller Backlit	The LCD backlight will illuminated when the input is active.	
20	Controller Buzzer	Controller buzzer will peal when the input is active.	
21	Inhibit Alarm Stop	All shutdown alarms are prohibited except emergence stop.(Means battle mode or override mode)	
22	Aux Instrument Mode	All outputs are prohibited in this mode.	
23	Reset Maintenance 1	Controller will set maintenance time and date 1 as default when input is active.	
24	Reset Maintenance 2	Controller will set maintenance time and date 2 as default when input is active.	
25	Reset Maintenance 3	Controller will set maintenance time and date 3 as default when input is active.	
26	Aux. High Temp	Connected sensor digital input.	
27	Aux. Low OP	Connected sensor digital input.	
28	Remote Start (On Load)	In Auto mode, when input active, genset can be started automatically and take load after genset normal running; when input inactive, genset will stop automatically.	
29	Remote Start (Off Load)	In Auto mode, when input is active, genset can be started automatically and NOT take load after genset normal running; when input is inactive, genset will stop automatically.	
30	Aux. Manual Start	In Manual mode, when input active, genset will start automatically; when input inactive, genset will stop automatically	
31	Reserved		
32	Reserved		
33	Simulate Stop Key	An external button can be connected and pressed	
34	Simulate Manual Key	as simulate panel.	
35	Reserved		

1	_			
36	Simulate Auto Key	An external button can be connected and pressed		
37	Simulate Start Key	as simulate panel.		
38	Simulate G-Load Key	This is simulate G-close key when HGM9310MPU(CAN) controller is applied.		
39	Simulate M-Load Key	This is simulate M-open key when HGM9310MPU(CAN) controller is applied.		
40	Reserved			
41	Reserved			
42	Reserved			
43	Reserved			
44	Reserved			
45	Aux Mains OK	In Auto mode, mains are normal when input is active.		
46	Aux Mains Fail	In Auto mode, mains are abnormal when input is active.		
47	Alternative Config1	Alternative configuration is active when the input		
48	Alternative Config2	is active. Users can set different parameters to		
49	Alternative Config3	make it easy to select current configuration via input port.		
50	Reserved			

8.4SELECTION OF SENSORS

Form4

No.		Description	Remark
1	Temperature Sensor	0 Not used 1 Custom Res Curve 2 Custom 4-20mA curve 3 VDO 4 CURTIS 5 VOLVO-EC 6 DATCON 7 SGX 8 SGD 9 SGH 10 PT100 11~15 Reserved	Defined resistance's range is (0~6)KΩ, default is SGX sensor.
2	Pressure Sensor	0 Not used 1 Custom Res Curve 2 Custom 4-20mA curve 3 VDO 10Bar 4 CURTIS 5 VOLVO-EC 6 DATCON 10Bar 7 SGX 8 SGD 9 SGH 10 VDO 5Bar 11 DATCON 5Bar 12 DATCON 7Bar 13~15 Reserved	Defined resistance's range is (0~6)KΩ, default is SGX sensor.
3	Oil Level Sensor	0 Not used 1 Custom Res Curve 2 Custom 4-20mA curve 3 SGD 4 SGH 5~15 Reserved	Defined resistance's range is (0~6)KΩ, default is SGH sensor.

ANOTE: User should make special declare when order controller if your genset equip with sensor of 4~20mA.

8.5CONDITIONS OF CRANK DINSCONNECT SELECTION

Form 5

No.	Setting description	
0	Gen frequency	
1	Speed sensor	
2	Speed sensor + Gen frequency	
3	Oil pressure	
4	Oil pressure + Gen frequency	
5	Oil pressure + Speed sensor	
6	Oil pressure + Speed sensor + Gen frequency	

ANOTE:

- There are 3 conditions to make starter disconnected with engine, that is, speed sensor, generator frequency and engine oil pressure. They all can be used separately. We recommend that engine oil pressure should be using with speed sensor and generator frequency together, in order to make the starter motor is separated with engine immediately and can check crank disconnect exactly.
- 2. Speed sensor is the magnetic equipment which be installed in starter for detecting flywheel teeth.
- 3. When set as speed sensor, must ensure that the number of flywheel teeth is as same as setting, otherwise, "over speed shutdown" or "under speed shutdown" may be caused.
- 4. If genset without speed sensor, please don't select corresponding items, otherwise, "start fail" or "loss speed signal" maybe caused.
- 5. If genset without oil pressure sensor, please don't select corresponding items.
- 6. If not select generator frequency in crank disconnect setting, controller will not collect and display the relative power quantity (can be used in water pump set); if not select speed sensor in crank disconnect setting, the rotating speed displayed in controller is calculated by generator frequency and number of poles.

9PARAMETERS SETTING

In HGM9310MPU(CAN) controller, there are no items of mains in setting and also no mains items in configurable ports of input/output.

ACAUTION: Please change the controller parameters when generator is in standby mode only (e. g. Crank disconnect conditions selection, auxiliary input, auxiliary output, various delay), otherwise, shutdown and other abnormal conditions may happen.

ANOTE: Maximum set value must over minimum set value in case that the condition of too high as well as too low will happen.


ANOTE: When setting the warning alarm, please set the correct return value; otherwise, maybe there is abnormal alarm. When setting the maximum value, the return value must less than set value; When setting the minimum value, the return value must over set value.

ANOTE: Please set the generator frequency value as low as possible when cranking, in order to make the starter be separated quickly as soon as crank disconnect.

ANOTE: Auxiliary input could not be set as same items; otherwise, there are abnormal functions. However, the auxiliary output can be set as same items.

10SENSORS SETTING

- When reselect sensors, the sensor curve will be transferred into the standard value. For example, if temperature sensor is SGX (120°C resistor type), its sensor curve is SGX (120°C resistor type); if select the SGD (120°C resistor type), the temperature sensor curve is SGD curve.
- 2. When there is difference between standard sensor curves and using sensor, user can adjust it in "curve type".
- 3. When input the sensor curve, X value (resistor) must be input from small to large, otherwise, mistake occurs.
- 4. If select sensor type as "None", sensor curve is not working.
- 5. If corresponding sensor has alarm switch only, user must set this sensor as "None", otherwise, maybe there is shutdown or warning.
- 6. The headmost or backmost values in the vertical coordinates can be set as same as below,

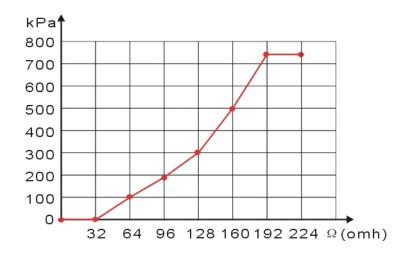


	ра	kgf/cm ²	bar	psi
1Pa	1	$1.02 \text{x} 10^{-5}$	1x10 ⁻⁵	$1.45 \text{x} 10^{-4}$
1kgf/cm ²	9.8x10 ⁴	1	0.98	14.2
1bar	1x10 ⁵	1.02	1	14.5
1psi	6.89x10 ³	7.03x10 ⁻²	6.89x10 ⁻²	1

11 COMMISSIONING

Please make the under procedures checking before commissioning,

- 1. Ensure all the connections are correct and wires diameter is suitable.
- 2. Ensure that the controller DC power has fuse, controller's positive and negative connected to start battery are correct.
- 3. Emergence stop must be connected with positive of start battery via scram button's normal close point and fuse.
- 4. Take proper action to prevent engine to crank disconnect (e. g. Remove the connection wire of fuel valve). If checking is OK, make the start battery power on; choose manual mode and controller will executive routine.
- 5. Set controller under manual mode, press "start" button, genset will start. After the setting times as setting, controller will send signal of Start Fail; then press "stop" to reset controller.
- 6. Recover the action of stop engine start (e. g. Connect wire of fuel valve), press start button again, genset will start. If everything goes well, genset will normal run after idle running (if idle run be set). During this time, please watch for engine's running situations and AC generator's voltage and frequency. If abnormal, stop genset running and check all wires connection according to this manual.
- 7. Select the **AUTO** mode from controller's panel, connect mains signal. After the mains normal delay, controller will transfer ATS (if fitted) into mains load. After cooling time, controller will stop genset and make it into "at rest" mode until there is abnormal of mains.
- 8. When mains is abnormal again, genset will be started automatically and into normal running, then controller send signal to making generator switch on, and control the ATS as generator load. If not like this, please check ATS wires connection of control part according to this manual.
- 9. If there is any other question, please contact Smartgen's service.

12TYPICAL APPLICATION

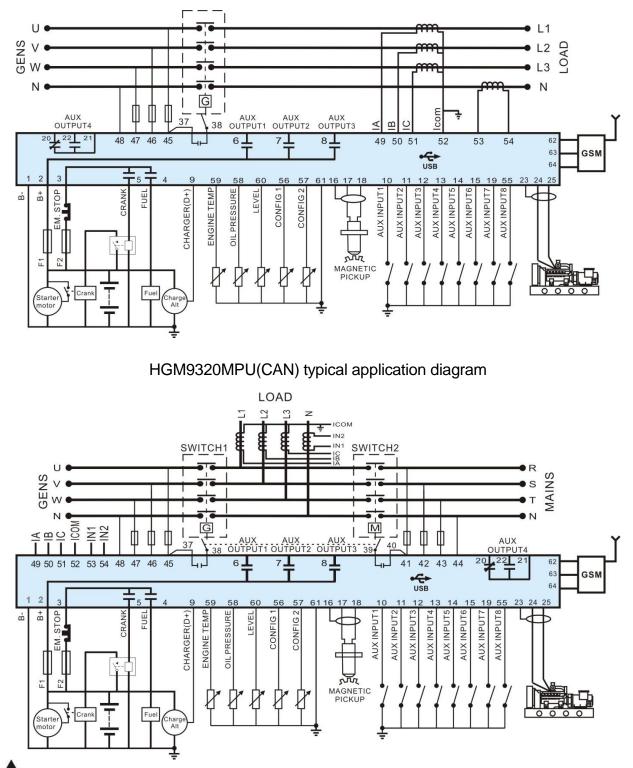


HGM9310MPU(CAN) typical application diagram

ANote: Fuse F1: min. 2A; max. 20A. Fuse F2: max. 32A. Users should select suitable fuse depend on practical application.

13INSTALLATION

Controller is panel built-in design; it is fixed by clips when installed. The controller's overall dimensions and cutout dimensions for panel, please refers to as following,

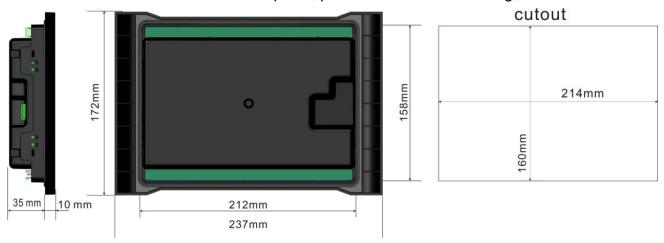

1) Battery Voltage Input

NOTE: HGM93XXMPU(CAN) series controller can suit for widely range of battery voltage DC(8~35)V. Negative of battery must be connected with the engine shell. The diameter of wire which from power supply to battery must be over 2.5mm². If floating charge configured, please firstly connect output wires of charger to battery's positive and negative directly, then, connect wires from battery's positive and negative to controller's positive and negative input ports in order to prevent charge disturbing the controller's normal working.

2) Speed Sensor Input

CNOTE: Speed sensor is the magnetic equipment which be installed in starter and for detecting flywheel teeth. Its connection wires to controller should apply for 2 cores shielding line. The shielding layer should connect to No. 16 terminal in controller while another side is hanging in air. The else two signal wires are connected to No.17 and No.18 terminals in controller. The output voltage of speed sensor should be within AC(1~24)V (effective value) during the full speed. AC12V is recommended (in rated speed). When install the speed sensor, let the sensor is spun to contacting flywheel first, then, port out 1/3 lap, and lock the nuts of sensor at last.

3) Output And Expand Relays

ACAUTION: All outputs of controller are relay contact output type. If need to expand the relays, please add freewheel diode to both ends of expand relay's coils (when coils of relay has DC current) or, increase resistance-capacitance return circuit (when coils of relay has AC

current), in order to prevent disturbance to controller or others equipment.

4) AC Input

Current input of controller must be connected to outside current transformer. And the current transformer's secondary side current must be 5A. At the same time, the phases of current transformer and input voltage must correct. Otherwise, the current of collecting and active power maybe not correct.

NOTE: ICOM port must be connected to negative pole of battery.

WARNING! When there is load current, transformer's secondary side prohibit open circuit.

5) Withstand Voltage Test

CAUTION! When controller had been installed in control panel, if need the high voltage test, please disconnect controller's all terminal connections, in order to prevent high voltage into controller and damage it.

14GSM SHORT MESSAGE ALARM AND REMOTE CONTROL

14.1 GSM SHORT MESSAGE ALARM

When controller detects alarm, it will send short message to phone automatically.

ANOTE: All alarms about shutdown, trip and stop and trip will be sent to the pre-set phone. Warnings are sent to the phone according to the pre-set.

14.2GSM SHORT MESSAGE REMOTE CONTROL

Users send order message to GSM module, then controller will make actions according to this SMS order and pass back corresponding operations information. Controllers only sent the message to the pre-set phone number. Detail orders as following:

No.	SMS Orders	Pass back Information	Descr	iption
		GENSET ALARM	When genset is shutdown alarm	
		SYSTEM IN STOP MODE	At rest status in	
		GENSET AT REST	stop mode	
		SYSTEM IN MANUAL MODE GENSET AT REST	At rest status in manual mode	
4	SMS	SYSTEM IN AUTO MODE	At rest status in	status of several
1	GENSET	GENSET AT REST	auto mode	status of genset
		SYSTEM IN STOP MODE	Running status in	
		GENSET IS RUNNING	stop mode	
		SYSTEM IN MANUAL	Running status in	
		MODE	manual mode	
		GENSET IS RUNNING		
		SYSTEM IN AUTO MODE	Running status in	
		GENSET AT RUNNING	auto mode	
			Generator is	
		GENSET ALARM	shutdown alarm	
			or trip alarm	
2	SMS START	STOP MODE NOT START	Cannot start in	Start gangat
2			stop mode Start in manual	Start genset
		SMS START OK	mode	
			Cannot start in	
		AUTO MODE NOT START	auto mode	
3	SMS STOP MODE	SMS STOP OK	Set as stop mode	

4	SMS MANUAL	SMS MANUAL MODE OK	Set as manual mode
5	MODE SMS AUTO MODE	SMS AUTO MODE OK	Set as auto mode
6	SMS DETAIL	Pass back information can be set via controller software.	Gets details information of genset.
7	SMS INHIBIT START	INHIBIT START OK	Generator start will be inhibited.
8	SMS PERMIT START	PERMIT START OK	Discharge the inhibit start signal.

ANOTE: Its national and area's cods must be added. e.g. China: 86136666666666

ANOTE: When sending orders, users need to follow SMS orders in above form and all the letters must be capital.

NOTE: Pass back information from SMS DETAIL including: working mode, mains voltage, generator voltage, load current, mains frequency, generator frequency, active power, apparent power, power factor, battery voltage, D+ voltage, water temperature, oil pressure, oil level, engine speed, total running time, genset status, and alarm status.

15CONNECTIONS OF CONTROLLER WITH J1939 ENGINE

15.1 CUMMINS ISB/ISBE Terminals of controller Connector B Re Fuel relev output 20

Terminals of controller	Connector B	Remark
Fuel relay output	39	
Start relay output	-	Connect with starter coil directly
	Expand 30A relay, battery	ECU power
Auxiliary output port 1	voltage of 01,07,12,13 is	Set Auxiliary output 1 as "ECU
	supplied by relay	power"

Terminals of controller	9 pins connector	Remark
CAN GND	SAE J1939 shield	CAN communication shielding line(connect with ECU terminal only)
CAN(H)	SAE J1939 signal	Impedance 120Ω connecting line is recommended.
CAN(L)	SAE J1939 return	Impedance 120Ω connecting line is recommended.

Engine type: Cummins ISB

15.2CUMMINS QSL9

Suitable for CM850 engine control module

Terminals of controller	50 pins connector	Remark
Fuel relay output	39	
Start relay output	-	Connect to starter coil directly

Terminals of controller	9 pins connector	Remark
CAN GND	SAE J1939 shield-E	CAN communication shielding line(connect with ECU terminal only)
CAN(H)	SAE J1939 signal-C	Impedance 120Ω connecting line is recommended.
CAN(L)	SAE J1939 return-D	Impedance 120Ω connecting line is recommended.

Engine type: Cummins-CM850

15.3CUMMINS QSM11(IMPORT)

It is suitable for CM570 engine control module. Engine type is QSM11 G1, QSM11 G2.

Terminals of controller	C1 connector	Remark
Fuel relay output	5&8	Outside expand relay, when fuel output, making port 5 and port 8 of C1 be connected
Start relay output	-	Connect to starter coil directly

Terminals of controller	3 pins data link connector	Remark
CAN GND	С	CAN communication shielding line(connect with ECU terminal only)
CAN(H)	А	Impedance 120Ω connecting line is recommended.
CAN(L)	В	Impedance 120Ω connecting line is recommended.

Engine type: Cummins ISB

15.4CUMMINS QSX15-CM570

It is suitable for CM570 engine control module. Engine type is QSX15.

Terminals of controller	50 pins connector	Remark
Fuel relay output	38	Oil spout switch
Start relay output	-	Connect to starter coil directly

Terminals of controller	9 pins connector	Remark
CAN GND	SAE J1939 shield-E	CAN communication shielding line(connect with ECU terminal only)
CAN(H)	SAE J1939 signal-C	Impedance 120Ω connecting line is recommended.
CAN(L)	SAE J1939 return-D	Impedance 120Ω connecting line is recommended.

Engine type: Cummins QSX15-CM570

15.5CUMMINS GCS-MODBUS

It is suitable for GCS engine control module. Use RS485-MODBUS to read information of engine. Engine types are QSX15, QST30, QSK23 / 45/60/78 and so on.

Terminals of controller	D-SUB connector 06	Remark
		Outside expand relay, when fuel
Fuel relay output	5&8	output, making port 05 and 08 of
		the connector 06 be connected.
Start relay output	-	Connect to starter coil directly

Terminals of controller	D-SUB connector 06	Remark
RS485 GND	20	CAN communication shielding line(connect with ECU terminal only)
RS485+	21	Impedance 120Ω connecting line is recommended.
RS485-	18	Impedance 120Ω connecting line is recommended.

Engine type: Cummins QSK-MODBUS, Cummins QST-MODBUS, Cummins QSX-MODBUS

15.6CUMMINS QSM11

Terminals of controller	OEM connector of engine	Remark
Fuel relay output	38	
Start relay output	-	Connect with starter coil directly
CAN GND	-	CAN communication shielding
		line(connect with controller's this
		terminal only)
CAN(H)	46	Impedance 120Ω connecting line
		is recommended.
CAN(L)	37	Impedance 120Ω connecting line
		is recommended.

Engine type: common J1939

15.7CUMMINS QSZ13

Terminals of controller	OEM connector of engine	Remark
Fuel relay output	45	
Start relay output	-	Connect to starter coil directly
Auxiliary output 1	16&41	Setting to idle speed control;
		normally close output. Making 16
		connect to 41 during high-speed
		running of controller via external
		expansion relay.
Auxiliary output 2	19&41	Setting to pulse raise speed
		control; normally open output.
		Making 19 connect with 41 for
		0.1s during high-speed warming
		of controller via external
		expansion relay.
CAN GND	-	CAN communication shielding
		line(connect with controller's this
		terminal only)
CAN(H)	1	Impedance 120Ω connecting line
		is recommended.
CAN(L)	21	Impedance 120Ω connecting line
		is recommended.

Engine type: Common J1939

15.8DETROIT DIESEL DDEC III / IV

Terminals of controller	CAN port of engine	Remark
	Expand 30A relay; battery	
Fuel relay output	voltage of ECU is supplied	
	by relay.	
Start relay output	-	Connect to starter coil directly
		CAN communication shielding
CAN GND	-	line(connect with controller's
		terminal only)
CAN(H)	CAN(H)	Impedance 120Ω connecting line
	CAN(H)	is recommended.
	CAN(L)	Impedance 120Ω connecting line
CAN(L)	CAN(L)	is recommended.

Engine type: Common J1939

15.9DEUTZ EMR2

Terminals of controller	F connector	Remark
Fuel relay output	Expand 30A relay; battery voltage of terminal 14 is supplied by relay. Fuse is 16A.	
Start relay output	-	Connect to starter coil directly
-	1	Connect to battery negative pole
CAN GND	-	CAN communication shielding line(connect with controller's terminal only)
CAN(H)	12	Impedance 120Ω connecting line is recommended.
CAN(L)	13	Impedance 120Ω connecting line is recommended.

Engine type: VolvoEDC4

15.10JOHN DEERE

Terminals of controller	21 pins connector	Remark
Fuel relay output	G,J	
Start relay output	D	
CAN GND	-	CAN communication shielding line(connect with controller's terminal only)
CAN(H)	V	Impedance 120Ω connecting line is recommended.
CAN(L)	U	Impedance 120Ω connecting line is recommended.

Engine type: John Deere

15.11MTU MDEC

Terminals of controller	X1 connector	Remark
Fuel relay output	BE1	
Start relay output	BE9	
CAN GND	E	CAN communication shielding line(connect with one terminal only)
CAN(H)	G	Impedance 120Ω connecting line is recommended.
CAN(L)	F	Impedance 120Ω connecting line is recommended.

Suitable for MTU engines, 2000 series, 4000series

Engine type: MTU-MDEC-303

15.12MTU ADEC(SMART MODULE)

It is suitable for MTU engine with ADEC (ECU8) and SMART module.

Terminals of controller	ADEC (X1port)	Remark
Fuel relay output	X1 10	X1 Terminal 9 Connected to
		negative of battery
Start relay output	X1 34	X1 Terminal 33 Connected to
		negative of battery

Terminals of controller	SMART (X4 port)	Remark
		CAN communication shielding
CAN GND	X4 3	line(connect to controller's this
		terminal only)
CAN(H)	X4 1	Impedance 120Ω connecting line
		is recommended.
CAN(L)	X4 2	Impedance 120Ω connecting line
		is recommended.

Engine type: MTU-ADEC

15.13MTU ADEC(SAM MODULE)

Terminals of controller	ADEC (X1port)	Remark
Fuel relay output	X1 43	X1 Terminal 28 Connected to
		negative of battery
Start relay output	X1 37	X1 Terminal 22 Connected to
		negative of battery

It is suitable for MTU engine with ADEC (ECU7) and SAM module.

Terminals of controller	SAM (X23 port)	Remark
CAN GND	X23 3	CAN communication shielding line(connect with controller's this
	A23 3	terminal only)
CAN(H)	X23 2	Impedance 120Ω connecting line
		is recommended.
CAN(L)	X23 1	Impedance 120Ω connecting line
		is recommended.

Engine type: Common J1939

15.14PERKINS

It is suitable for ADEM3/ ADEM4 engine control module. Engine type is 2306, 2506, 1106, and 2806.

Terminals of controller	Connector	Remark
Fuel relay output	1,10,15,33,34	
Start relay output	-	Connect to starter coil directly
CAN GND	-	CAN communication shielding line(connect with controller's terminal only)
CAN(H)	31	Impedance 120Ω connecting line is recommended.
CAN(L)	32	Impedance 120Ω connecting line is recommended.

Engine type: Perkins

15.15SCANIA

It is suitable for S6 engine control module. Engine type is DC9, DC12, and DC16.

Terminals of controller	B1 connector	Remark
Fuel relay output	3	
Start relay output	-	Connect to starter coil directly
CAN GND	-	CAN communication shielding line(connect with controller's terminal only)
CAN(H)	9	Impedance 120Ω connecting line is recommended.
CAN(L)	10	Impedance 120Ω connecting line is recommended.

Engine type: Scania

15.16VOLVO EDC3

Suitable engine control mode is TAD1240, TAD1241, and TAD1242.

Terminals of controller	"Stand alone" connector	Remark
Fuel relay output	Н	
Start relay output	E	
		ECU power
Auxiliary output 1	Р	Set Auxiliary output 1 as "ECU
		power"

Terminals of controller	"Data bus" connector	Remark
CAN GND	-	CAN communication shielding line(connect with controller's terminal only)
CAN(H)	1	Impedance 120Ω connecting line is recommended.
CAN(L)	2	Impedance 120Ω connecting line is recommended.

Engine type: Volvo

ANOTE: When this engine type is selected, preheating time should be set to at least 3 seconds.

15.17VOLVO EDC4

Suitable engine types are TD520, TAD520 (optional), TD720, TAD720 (optional), TAD721, TAD722, and TAD732.

Terminals of controller	Connector	Remark
	Expand 30A relay; battery	
Fuel relay output	voltage of terminal 14 is	
	supplied by relay. Fuse is	
	16A.	
Start relay output	-	Connect to starter coil directly
	1	Connected to negative of battery
		CAN communication shielding
CAN GND	-	line(connect with controller's
		terminal only)
	12	Impedance 120Ω connecting line
CAN(H)	12	is recommended.
CAN(L)	13	Impedance 120Ω connecting line
		is recommended.

Engine type: VolvoEDC4

15.18VOLVO-EMS2

Volvo Engine types are TAD734, TAD940, TAD941, TAD1640, TAD1641, and TAD1642.

Terminals of controller	Engine's CAN port	Remark
		ECU stop
Auxiliary output 1	6	Set Auxiliary output 1 as "ECU
		Stop"
		ECU power
Auxiliary output 2	5	Set Auxiliary output 2 as "ECU
		power"
	3	Negative power
	4	Positive power
		CAN communication shielding
CAN GND	-	line(connect with controller's
		terminal only)
CAN(H) 1(1(Hi)	Impedance 120Ω connecting line is
		recommended.
CAN(L) 20	2(1.0)	Impedance 120Ω connecting line is
	2(Lo)	recommended.

Engine type: Volvo-EMS2

ANOTE: When this engine type is selected, preheating time should be set to at least 3 seconds.

HGM93XX MPU(CAN) Series Genset Controller Version: 1.0 2014-07-24 Page 73 of 75

15.19YUCHAI

It is suitable for BOSCH common rail pump engine.

Terminals of controller	Engine 42 pins port	Remark
Fuel relay output	1.40	Connect to engine ignition lock
Start relay output	-	Connect to starter coil directly
CAN GND	-	CAN communication shielding line(connect with controller's this terminal only)
CAN(H)	1.35	Impedance 120Ω connecting line is recommended.
CAN(L)	1.34	Impedance 120Ω connecting line is recommended.

Battery	Engine 2 pins	Remark
Battery negative	1	Wire diameter 2.5mm ²
Battery positive	2	Wire diameter 2.5mm ²

Engine type: BOSCH

15.20WEICHAI

It is suitable for Weichai BOSCH common rail pump engine.

Terminals of controller	Engine port	Remark
Fuel relay output	1.40	Connect to engine ignition lock
Start relay output	1.61	
CAN GND		CAN communication shielding line(connect to the controller at this
	-	end only)
CAN(H)	1.35	Impedance 120Ω connecting line is
		recommended.
CAN(L)	1.34	Impedance 120Ω connecting line is
		recommended.

Engine type: GTSC1

ANOTE: If there is any question of connection between controller and ECU communication, please feel free to contact Smartgen's service.

16FAULT FINDING

Symptoms	Possible Solutions	
Controller no response with power.	Check starting batteries; Check controller connection wirings; Check DC fuse.	
Genset shutdown	Check the water/cylinder temperature is too high or not; Check the genset AC voltage; Check DC fuse.	
Controller emergency stop	Check emergence stop button is correct or not; Check whether the starting battery positive is connected with the emergency stop input; Check whether the circuit is open.	
Low oil pressure alarm after check the oil pressure sensor and its connections		
High water temp. alarm after crank disconnect	Check the temperature sensor and its connections.	
Shutdown Alarm in running	Check related switch and its connections according to the information on LCD; Check auxiliary input ports.	
Fail to start	Check fuel oil circuit and its connections; Check starting batteries; Check speed sensor and its connections; Refer to engine manual.	
Starter no response	Check starter connections; Check starting batteries.	
Genset running while ATS not transfer	Check ATS; Check the connections between ATS and controllers.	
RS485 communication is abnormal	Check connections; Check COM port setting is correct or not; Check RS485's connections of A and B is reverse connect or not; Check RS485 transfer model whether damage or not; Check communication port of PC whether damage or not.	
ECU communication failed	Check connections of CAN high and low polarity; Check if correctly connected of 120Ω resister; Check if type of engine correct; Check if connections from controller to engine and output ports setting are correct.	
ECU warning or shutdown	Get information from LCD of alarm page; If there is detailed alarm, check engine according to description. If not, please refer to engine manual according to SPN alarm code.	